Filametric

Chapter 1: Unboxing & Checking Components

Before you begin assembly, take a moment to unbox your DryBase kit and verify that all components are present. Lay everything out on a clean, flat surface as shown in the image below.

The image is divided into two sections. The **blue box** on the left shows what you need to provide yourself to assemble the DryBase. The **green box** on the right shows everything that is included in your DryBase kit.

What you'll need to provide yourself *(blue box):*

- DryBase housing (3D-printed; PLA recommended; also see *Filametric DryBase Housing 3D-Printing Instructions.pdf*)
- Phillips screwdriver
- 2mm hex/allen key (**not in the picture**)
- Microfiber cloth (for handling components)

Filametric

What's included in your kit *(green box; from left to right, top to bottom):*

- 150W Power Supply Unit (PSU)
- C5 1.5m power cord (region-specific)
- Heating unit parts *(bag)*
- Display *(bag)*
- Cables *(bag)*
- Drybox parts *(bag)*
- Main & sensor board *(bag)*
- Power board *(bag)*
- Heating element *(bag)*
- Exhaust fan *(bag)*
- Blower fan *(bag)*
- Adhesives *(bag)*
- Screws / fasteners *(bag)*
- Spares *(bag)*

If anything is missing or damaged, contact us at support@filametric.com before proceeding.

Chapter 2: Preparing the DryBase Housing

Step 1. Locating & removing top support material

After the DryBase housing has been printed, remove all tree support material. These can be found in the following four locations, indicated by the red circles in the image below.

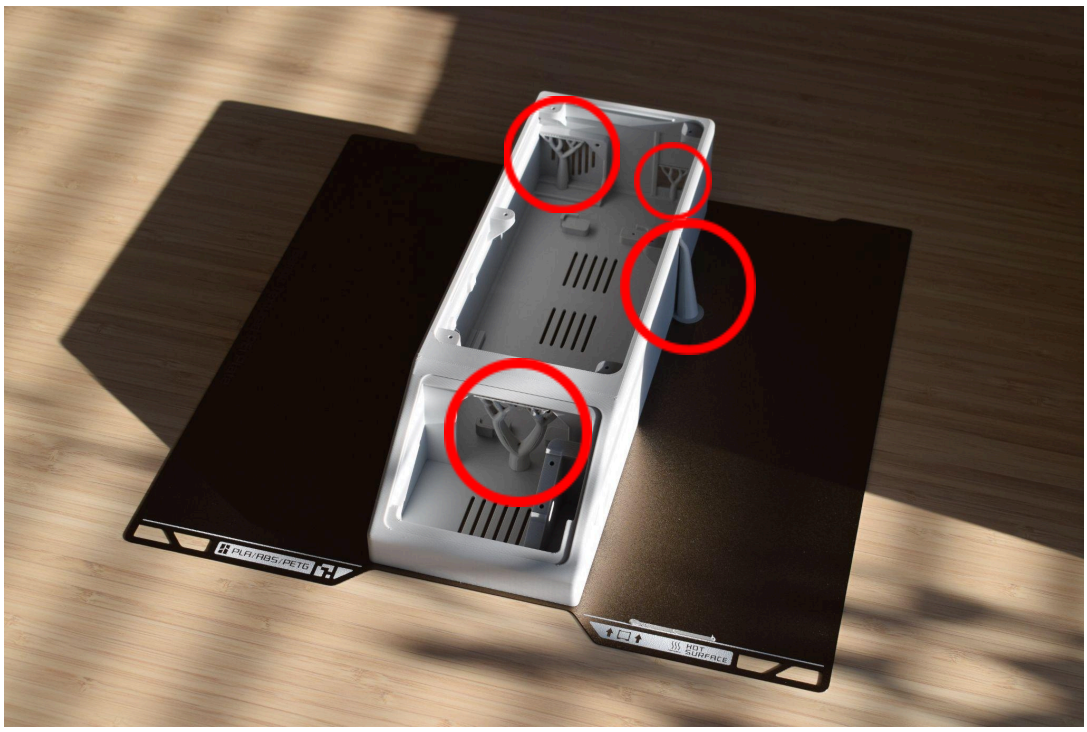

Step 2. Removing bottom support material

Remove the remaining support material from the four feet locations at the bottom of the housing, as shown in the image below. These supports should be easy to remove using a flat tool or your fingernail.

With all supports removed, the housing is ready for the next stage of assembly.

Filametric