
Step 3

With the vertical structure fastened, place T11 between the three vertical plates before placing T10 and fastening the screws.

Place the paper diffusor on top of T11 before use.

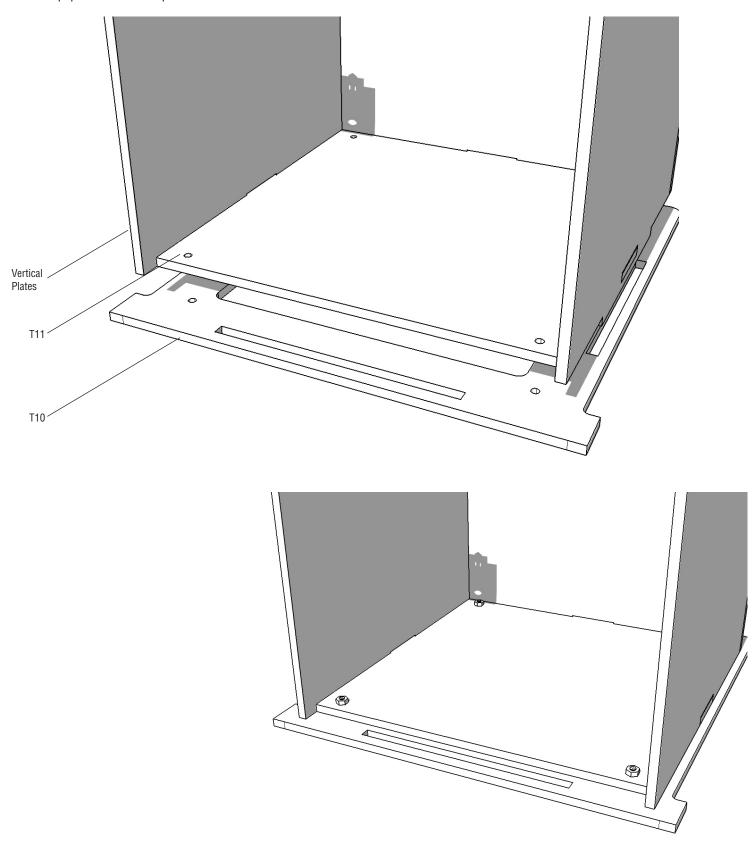

It should look like the picture when finished