

Slide the spacers up until they fit completely and the tighten the screws to form the vertical structure of the top module.

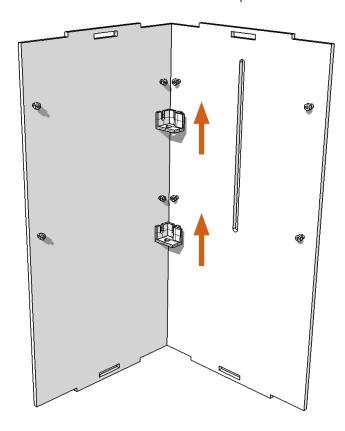

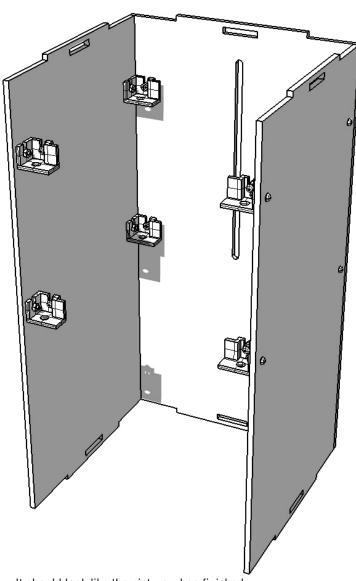

It should look like the picture when finished