


7/	///	\mathbb{Z}	///	//	\mathbb{Z}		DE0-Nano SoC Board
	Ш			П			
	П	1		П	1	Footprint Top: e4_DE0_Nano_SoC_Board_smd	
77	///	77	777	$\overline{//}$	7		Adapt DE0 Nano SoC Speedy Contr. Nr. 15.05
	П	П		П	Г	Footprint Bottom: e4_icon_erni_smc_q2x50_m_smd	
	П	1		П	1	Footprint: e4_icon_proz_large_smd	
\mathbb{Z}		///	///	//	//		Speedy Controller Nr. 12.07

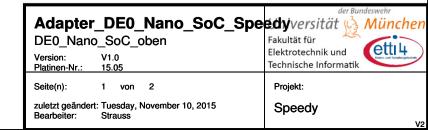

4 3 2 1

Modulstecker unten zum Speedy_Controller

Achtung - Stecker muß J1 sein, damit es im Template-Board stimmt !!!

