Wired with net labels: labels with the same name are one net. 18S Lean: no fuses, clamps or C–pin caps; generated from slave–18s by make_lean.py, do not edit by hand. C0 sense (CELL0, J1.1) and V– meet only at net tie NT1, which replaces F120.
ADBMS1818 Figure 112, isoSPI filtering per Fig. 104(B). See ../docs/slave–18s–design–basis.md.

CELL INPUTS R100–R118: 10 ohm series on C0–C18

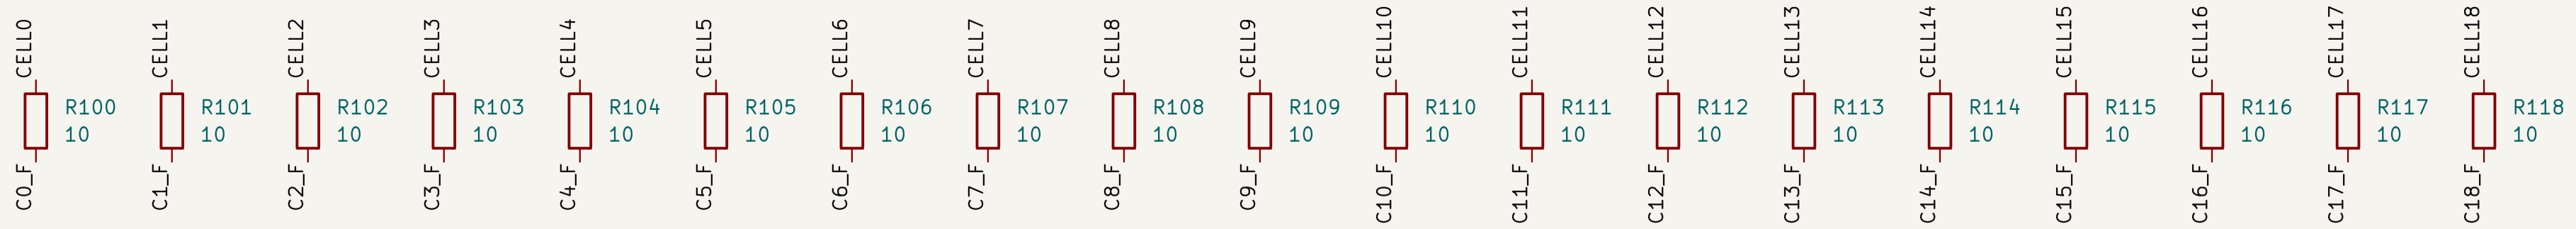

U1 ADBMS1818 (64–LQFP_EP, EP = V–)

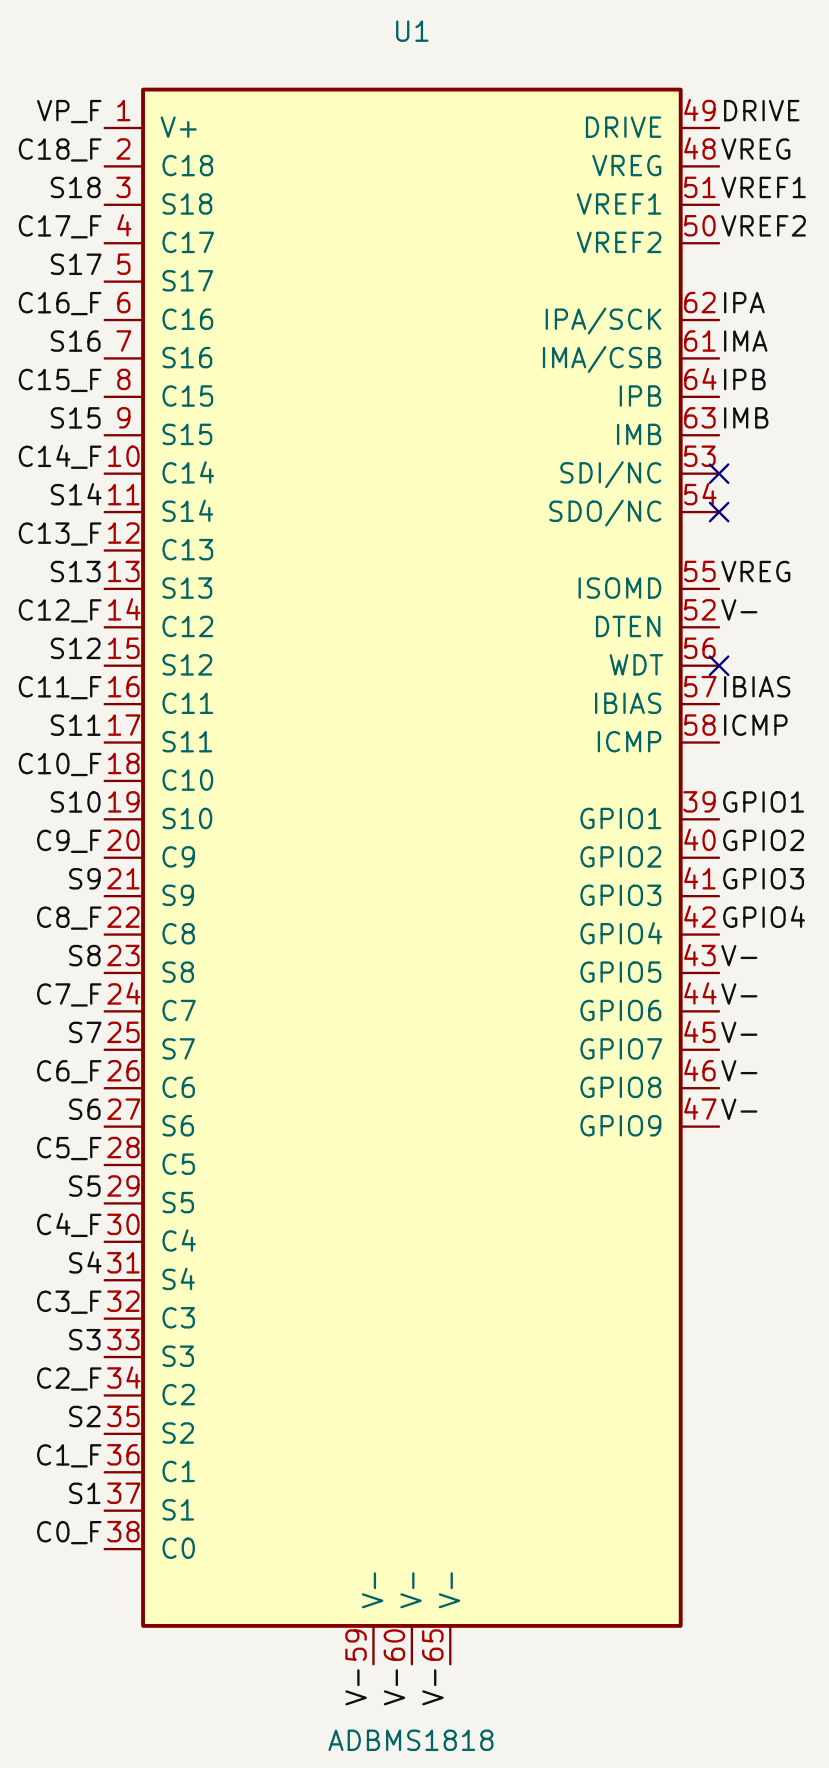

R201–R218: 33 ohm 1 W balance, cell n node (before 10 ohm) to Sn

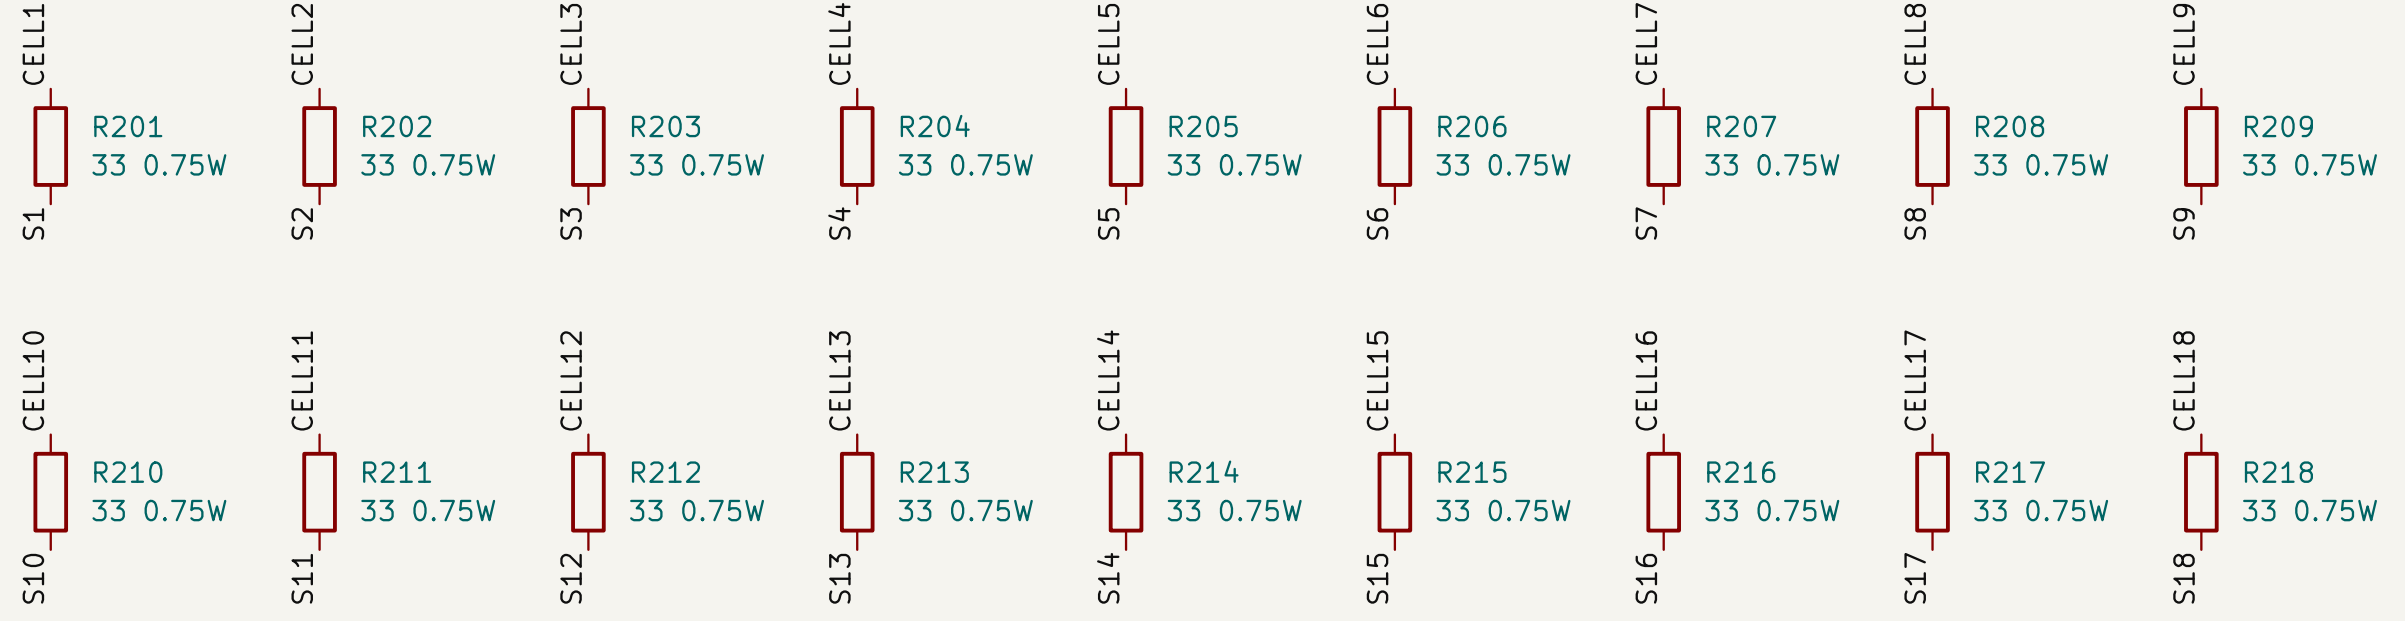

SUPPLY: V+ filter, DRIVE NPN –> VREG, VREF1/2

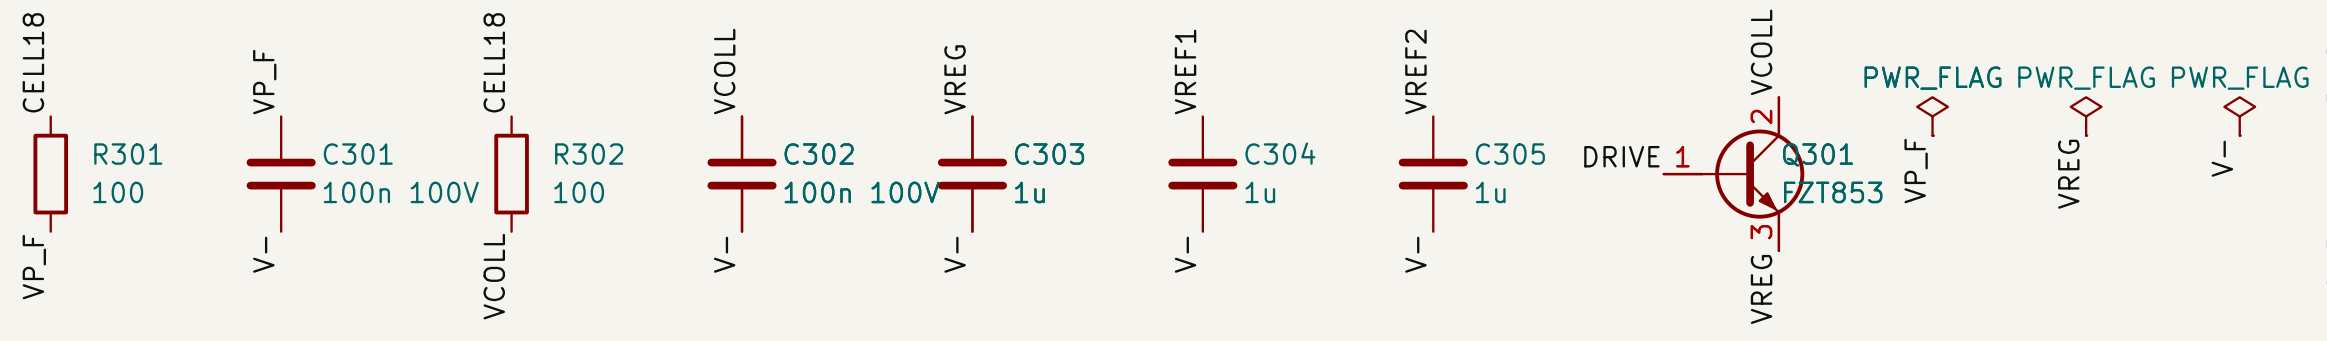

isoSPI BIAS: IBIAS–1k–ICMP–1k–V–

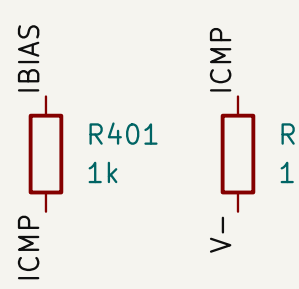

isoSPI PORT A: 2x51 ohm split term + 10 nF CTs

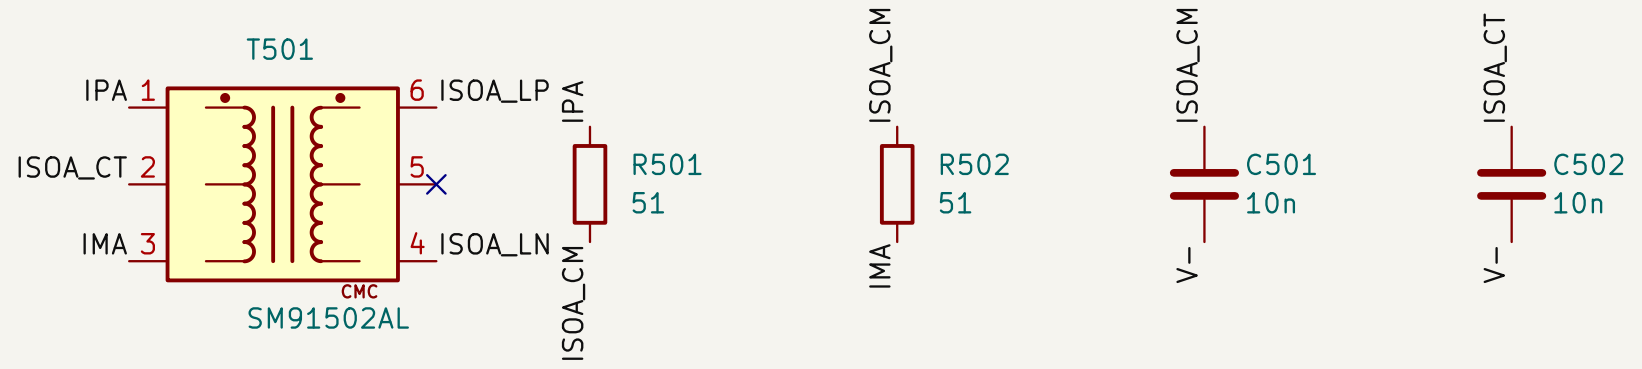

isoSPI PORT B: 2x51 ohm split term + 10 nF CTs

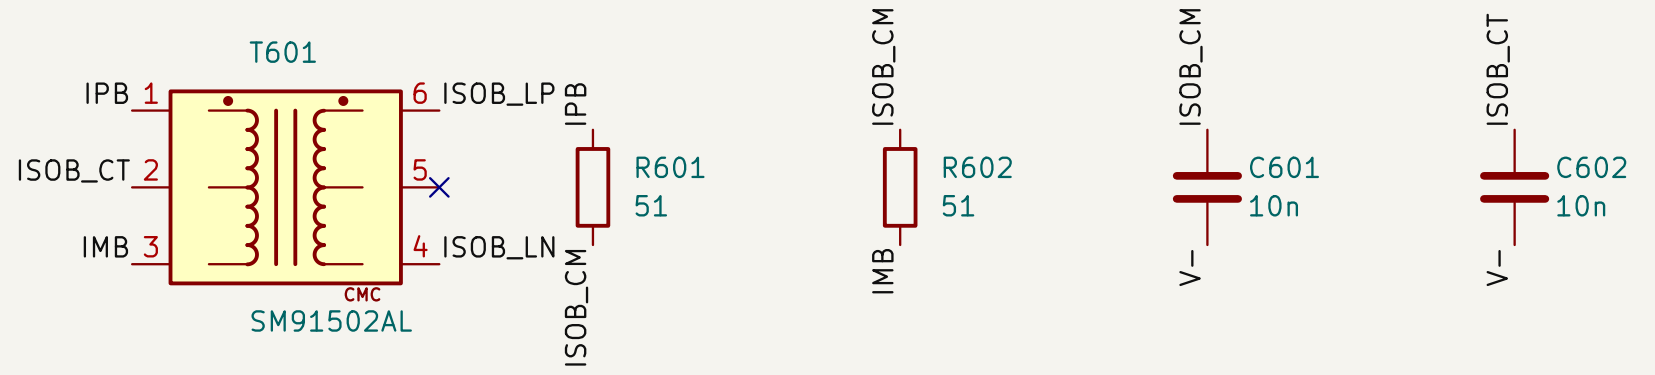

THERMISTORS: 100k to VREF2 + 100 nF, GPIO1–3 cell NTC, GPIO4 onboard

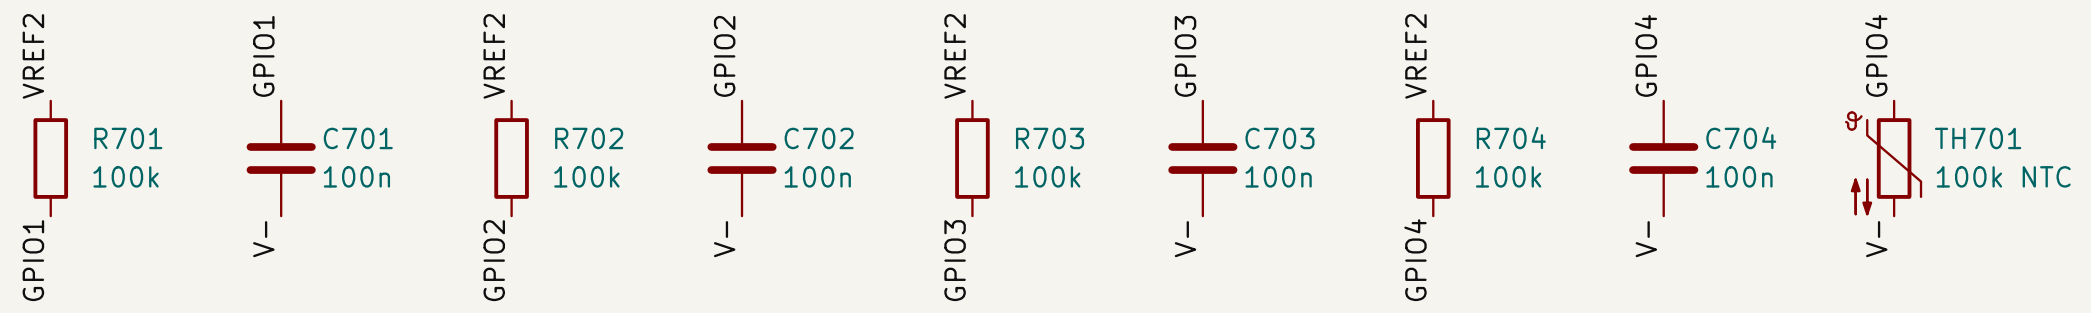

CONNECTORS (JST PH)

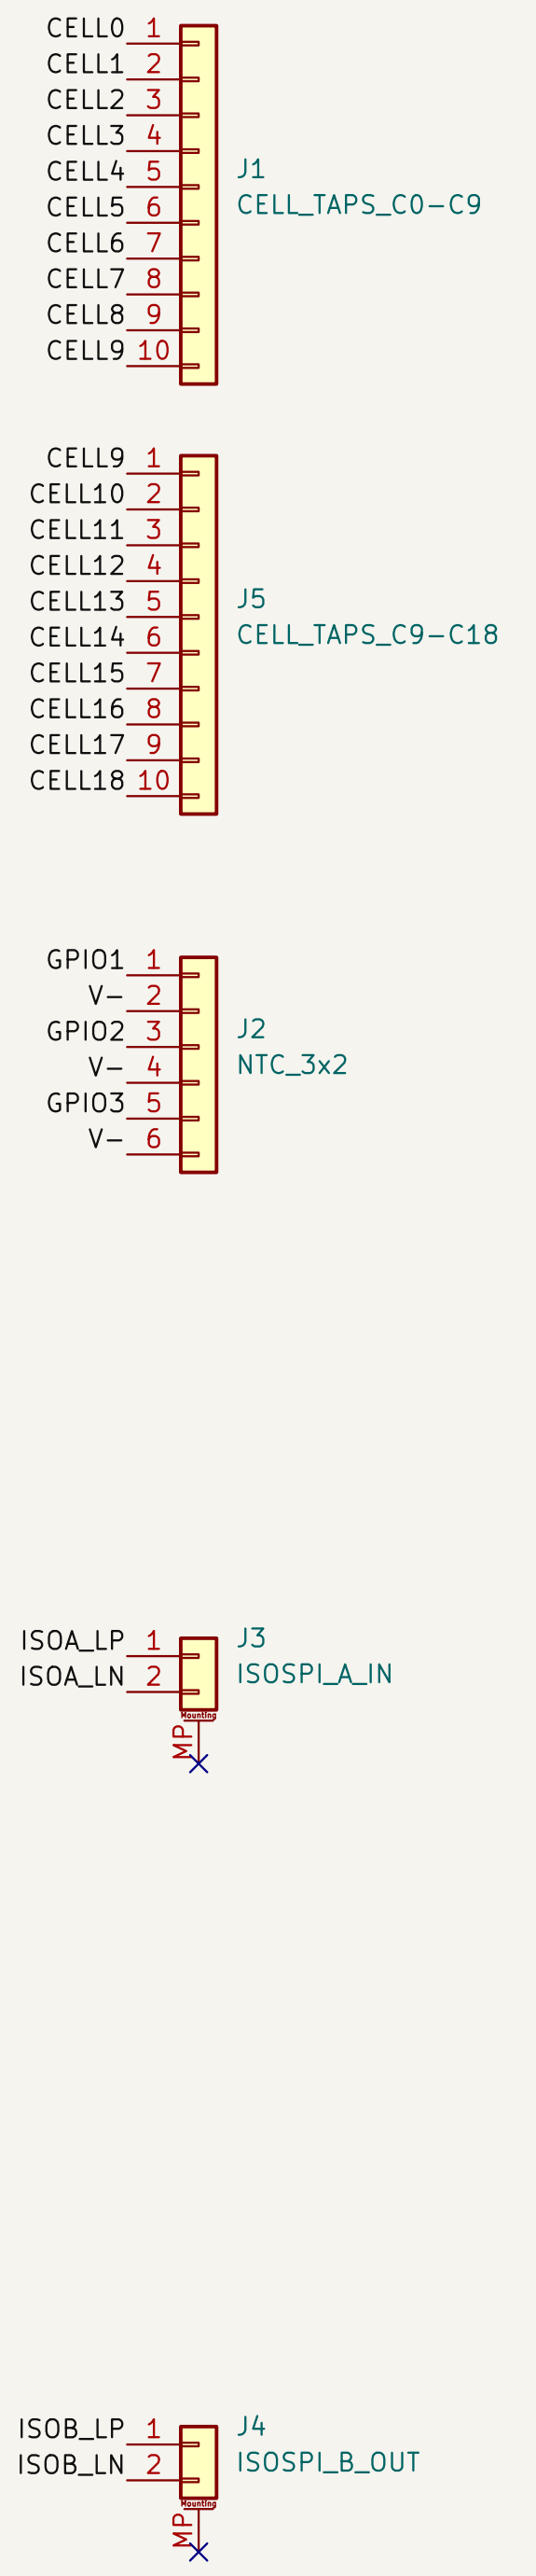



TEST POINTS TP1–TP10 Keystone 5015 loops, TP11–TP14 bare 1.5 mm pads (HV, no loop)



MOUNTING HOLES H1–H4: M3, no copper, positions set with the board outline

Not for manufacture
Baseline: ADBMS1818 datasheet Figure 112 typical application

Sheet: /
File: adbms1818–slave–18s–lean.kicad_sch

Title: ADBMS1818 18S slave module – Lean (no hot–plug protection)

Size: User
Date: 2026–11–06
Rev: 0–draft
KiCad E.D.A. 10.0.6
Id: 1/1