
Wired with net labels: labels with the same name are one net. 18S Lean: no fuses, clamps or C−pin caps; generated from slave−18s by make_lean.py, do not edit by hand. C0 sense (CELL0, J1.1) and V− meet only at net tie NT1, which replaces F120.
ADBMS1818 Figure 112, isoSPI filtering per Fig. 104(B). See ../docs/slave−18s−design−basis.md.


CELL INPUTS R100−R118: 10 ohm series on C0−C18



U1 ADBMS1818 (64−LQFP_EP, EP = V−)

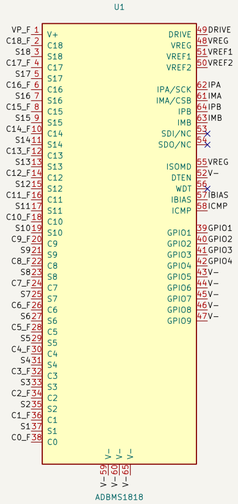

R201−R218: 33 ohm 1 W balance, cell n node (before 10 ohm) to Sn

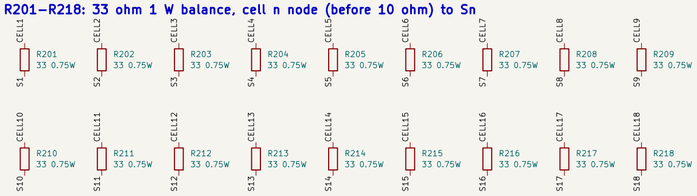

SUPPLY: V+ filter, DRIVE NPN −> VREG, VREF1/2



isoSPI BIAS: IBIAS−1k−ICMP−1k−V−

isoSPI PORT A: 2x51 ohm split term + 10 nF CTs




isoSPI PORT B: 2x51 ohm split term + 10 nF CTs




THERMISTORS: 100k to VREF2 + 100 nF, GPIO1−3 cell NTC, GPIO4 onboard



CONNECTORS (JST PH)

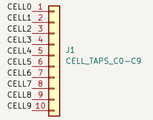

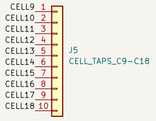










TEST POINTS TP1−TP10 Keystone 5015 loops, TP11−TP14 bare 1.5 mm pads (HV, no loop)



MOUNTING HOLES H1−H4: M3, no copper, positions set with the board outline



Not for manufacture
Baseline: ADBMS1818 datasheet Figure 112 typical application

Sheet: /
File: adbms1818−slave−18s−lean.kicad_sch

Title: ADBMS1818 18S slave module − Lean (no hot−plug protection)

Size: User	Date: 2026−11−06	Rev: 0−draft
KiCad E.D.A. 10.0.6		Id: 1/1