Wired with net labels: labels with the same name are one net. 18S Lean: no fuses, clamps or C-pin caps; generated from slave-18s by make_lean.py, do not edit by hand. C0 sense (CELL0, J1.1) and V- meet only at net tie NT1, which replaces F120.
ADBMS1818 Figure 112, isoSPI filtering per Fig. 104(B). See ../docs/slave-18s-design-basis.md.

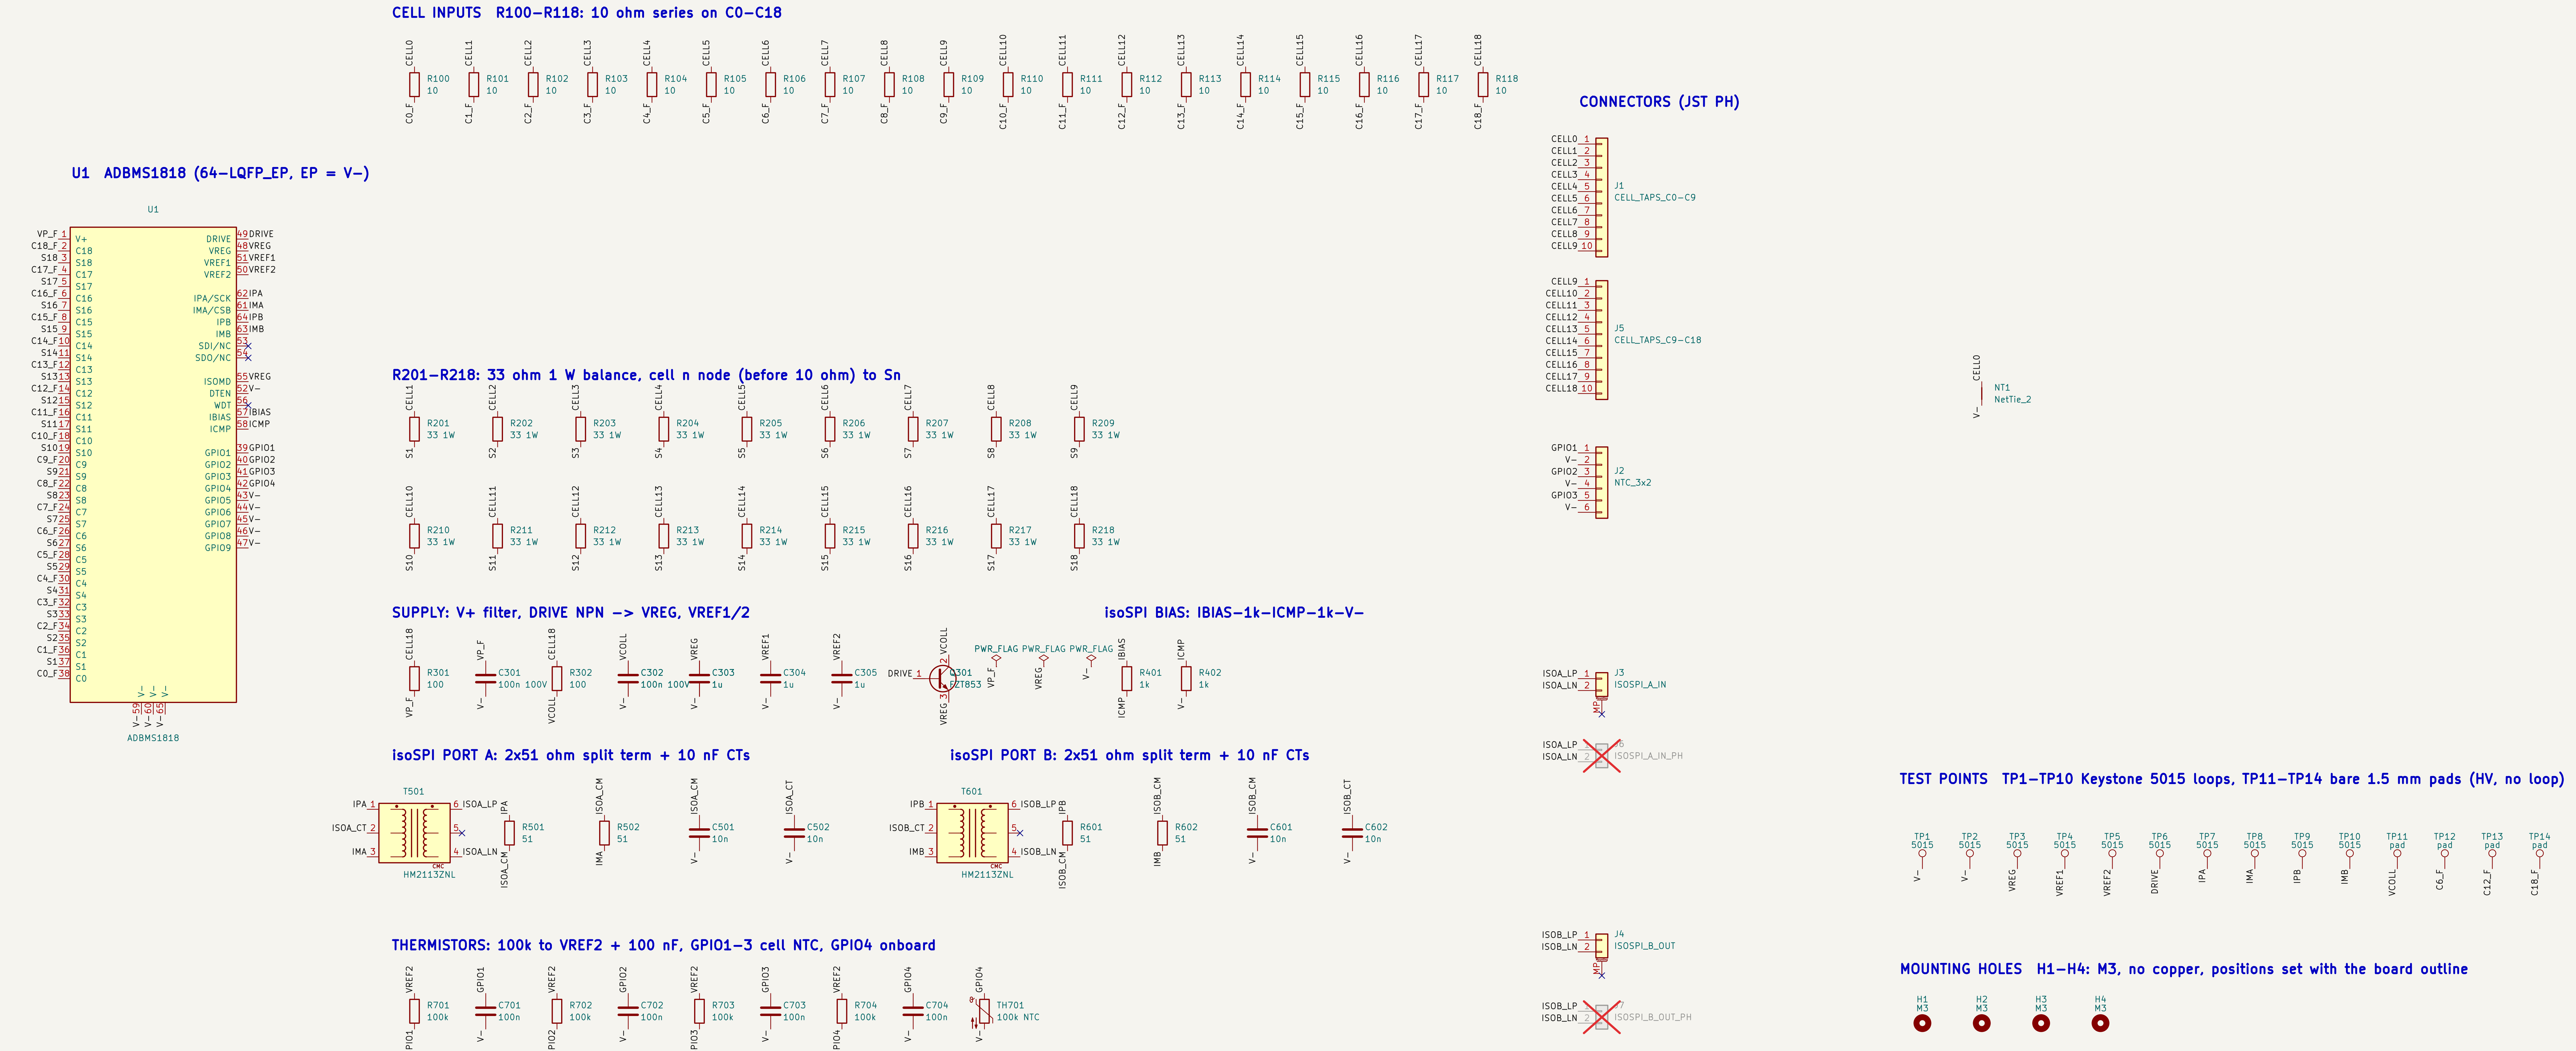

Not for manufacture
Baseline: ADBMS1818 datasheet Figure 112 typical application

Sheet: /
File: adbms1818–slave–18s–lean.kicad_sch

Title: ADBMS1818 18S slave module – Lean (no hot–plug protection)

Size: User	Date: 2026–11–06	**Rev: 0–draft**
KiCad E.D.A. 10.0.6		Id: 1/1