Wired with net labels: labels with the same name are one net. 18S Lean: no fuses, clamps or C−pin caps; generated from slave−18s by make_lean.py, do not edit by hand. C0 sense (CELL0, J1.1) and V− meet only at net tie NT1, which replaces F120.
ADBMS1818 Figure 112, isoSPI filtering per Fig. 104(B). See ../docs/slave−18s−design−basis.md.

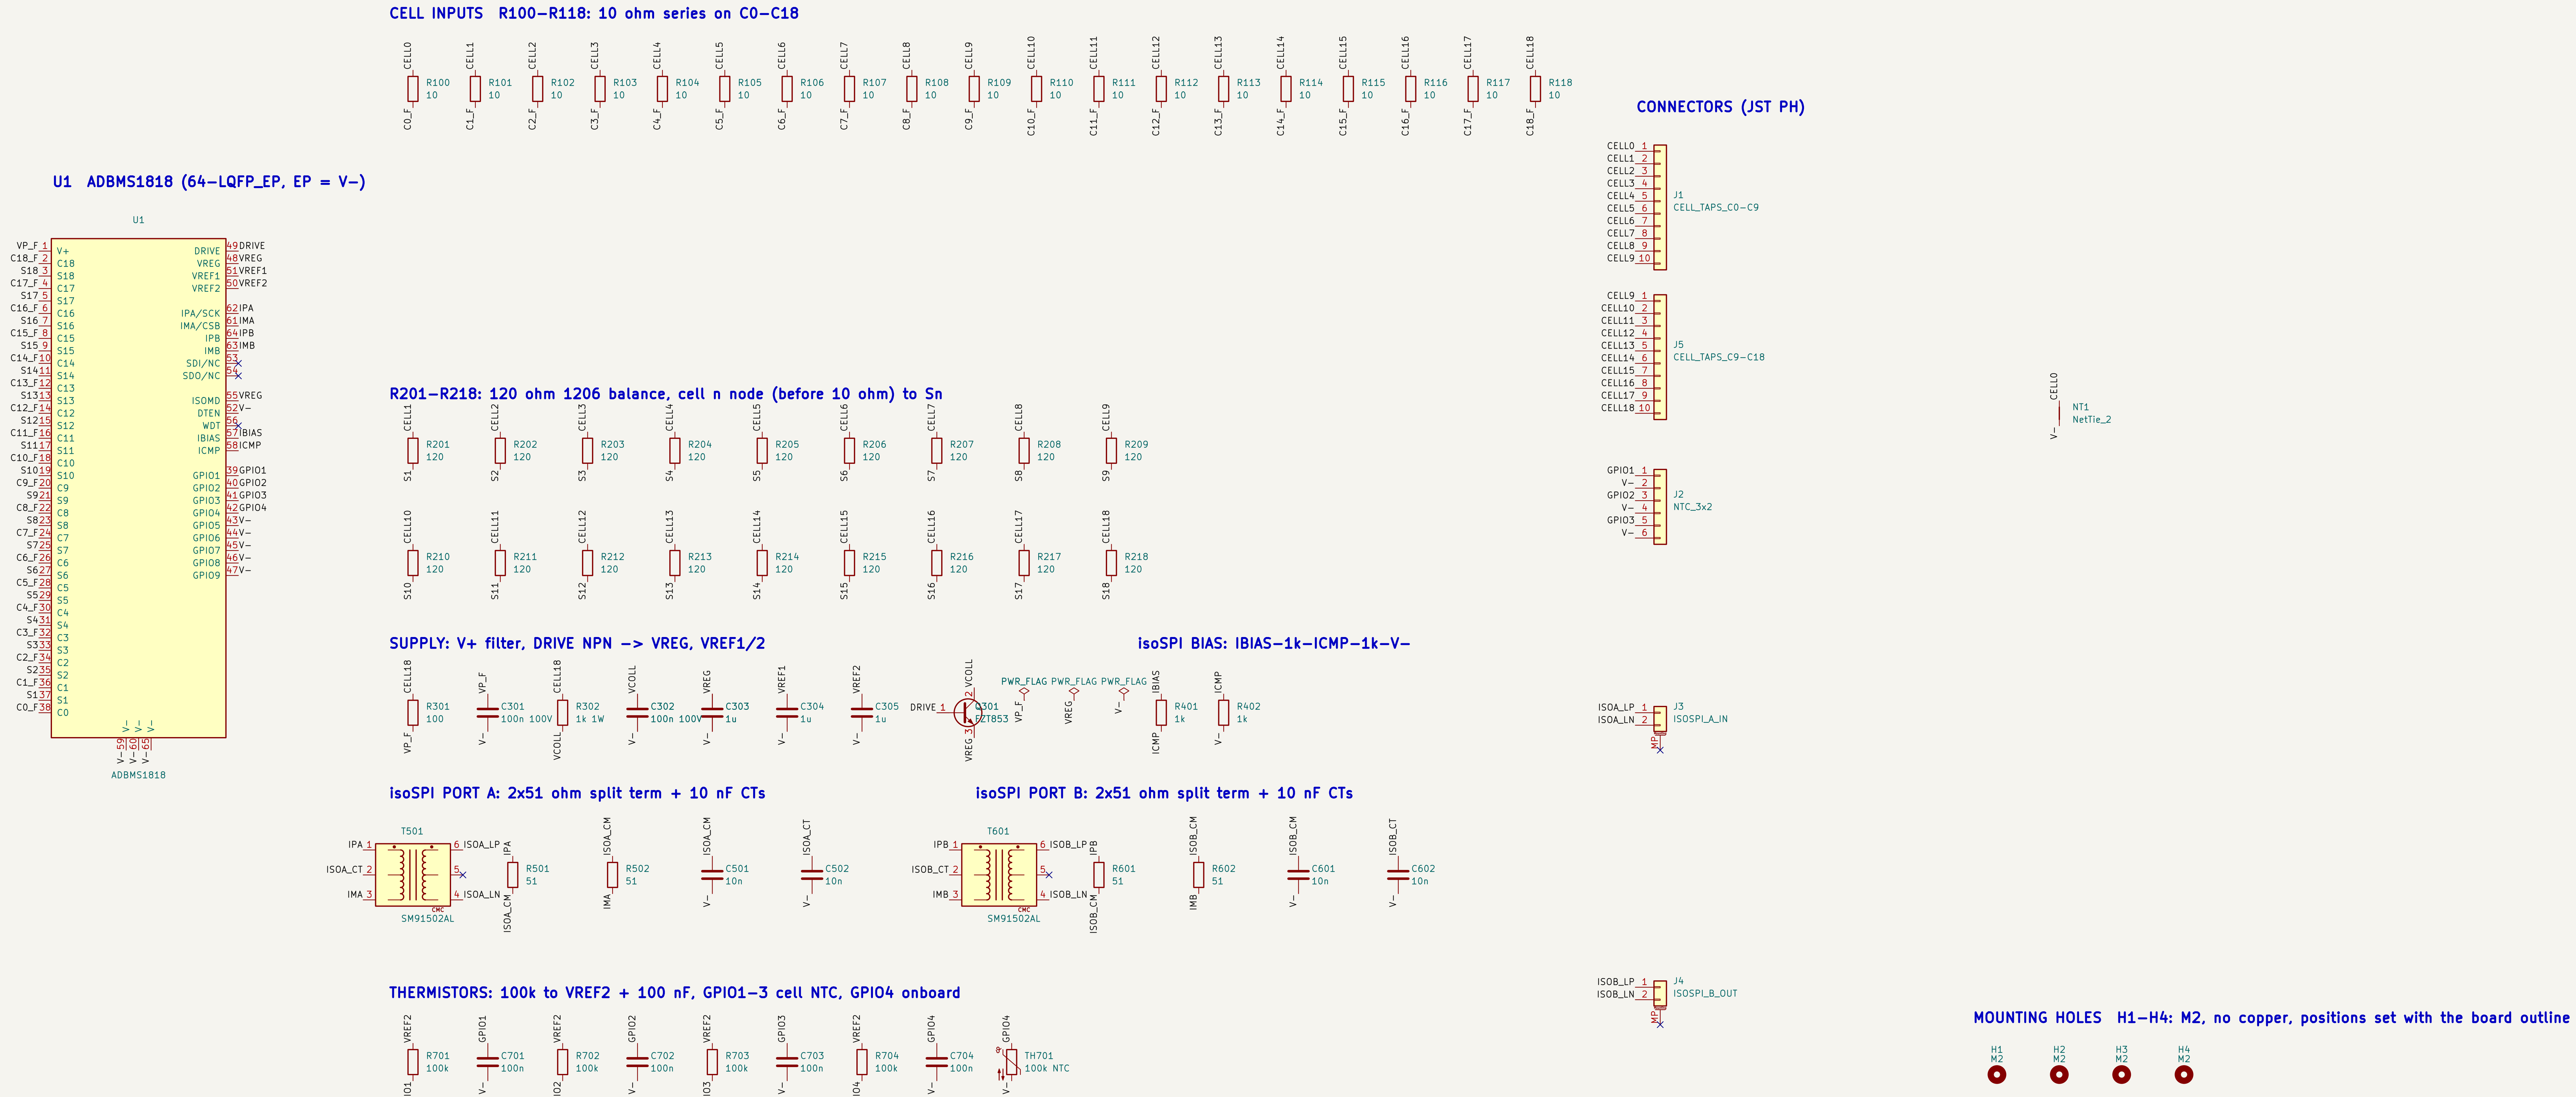

Not for manufacture
Baseline: ADBMS1818 datasheet Figure 112 typical application

Sheet: /
File: adbms1818−slave−18s−lean.kicad_sch

Title: ADBMS1818 18S slave module − Lean (no hot−plug protection)

Size: User
Date: 2026−11−06
Rev: 0−draft
KiCad E.D.A. 10.0.6
Id: 1/1