


1) Intake Sample Tubes


- **Clean tubes – spray wipe with ethanol/alcohol and wipe tubes**
- **Intake with App (can also do during Amp heating)**

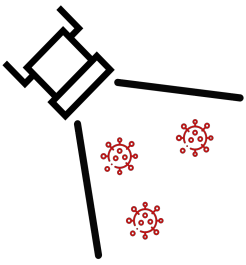

2) Make 1X Inactivation Saline Solution


-
- **Add 100X Inactivation Solution to Saline**

Saline 5 mL	Saline 15 mL	Saline 50 mL
100X IS 50 µL	100X IS 150 µL	100X IS 500 µL

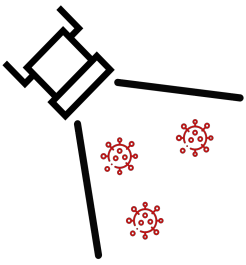


3) Add 1X Inactivation Saline Solution to Sample Tubes

- **Add 1mL of inactivation saline solution (1XISS) to each sample tube**
- **One sample tube open at a time**

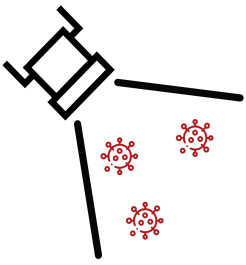

4) Heat to Inactivate Samples


- **Water Bath (set at 99°C)**
Heat 8 minutes
Cool 10 minutes
- **Dry Heat Block for 1.5mL sample tubes (set at 95°C)**
Heat 5 minutes
Cool 5 minutes

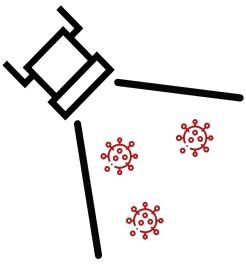

5) Make Reaction Mix


- **Add CLAMP MM and Primer Soln (PGS) to 1.5mL tube**
- **Aliquot into Strip8 tubes or 96 well PCR Plate**

		8 Rxns	16 Rxns	24 Rxns	48 Rxns
Combine in New 1.5mL Tube		PGS 92 μ L	PGS 183 μ L	PGS 275 μ L	PGS 550 μ L
		CLAMP MM 109 μ L	CLAMP MM 218 μ L	CLAMP MM 328 μ L	CLAMP MM 655 μ L

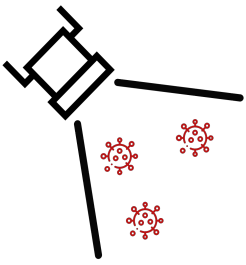


6) Add Sample to Reaction

- **Add 2 μ L from each sample tube to corresponding well**
- **Aliquot into Strip8 tubes or 96 well PCR Plate**

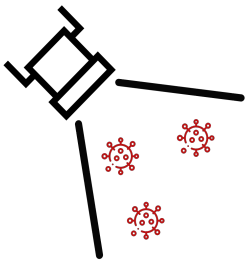

7) Heat Amp Reactions

- **Heat at 65°C for 25 min**
- **Set personal timer (on phone) for 24 min**

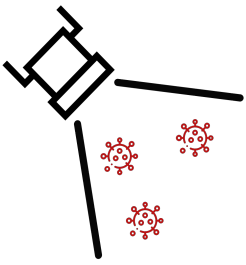

8) Log and Report Results

- **Let samples cool for at least 1 minute before taking photo**
- **Crop and apply vivid filter**
- **Log Amp Run Form with QR code link**