



PCle x4: Unit 1

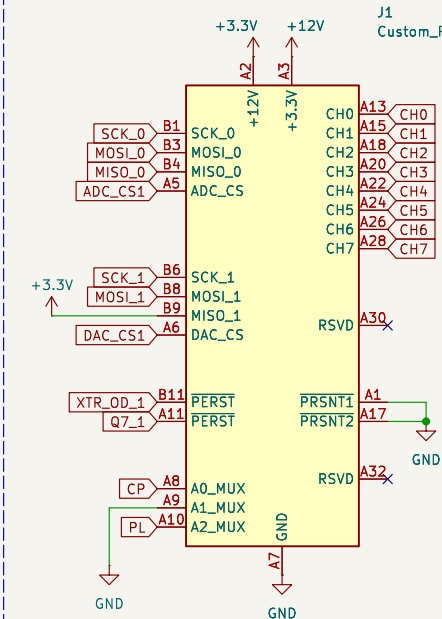


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

PCle x4: Unit 2

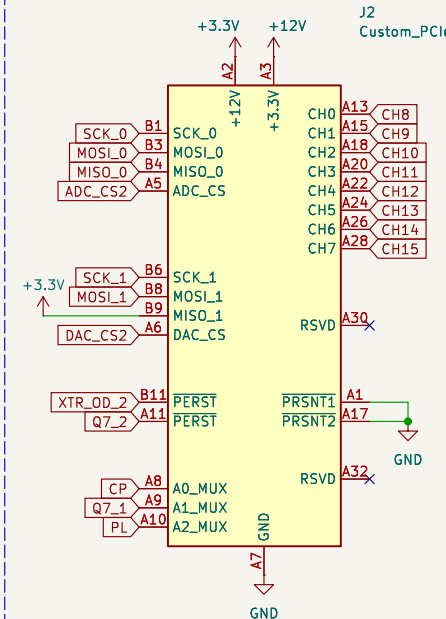


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

PCle x4: Unit 3



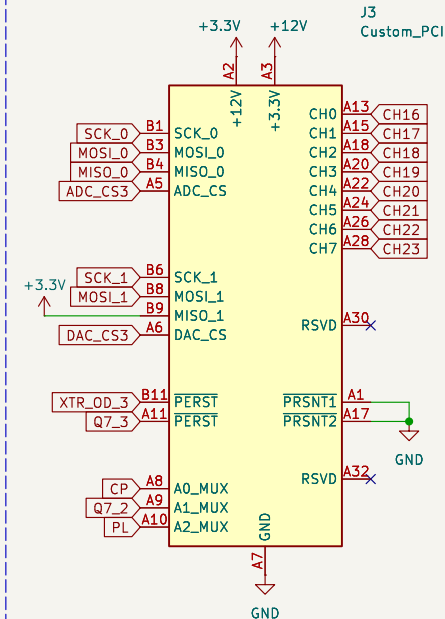


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins


PCle x4: Unit 4

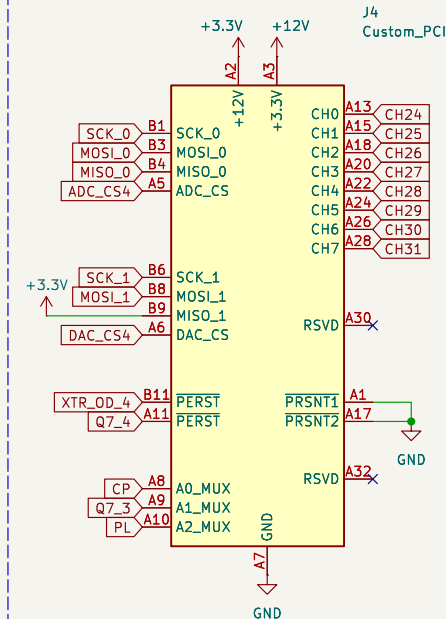

PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

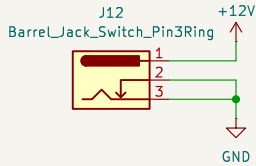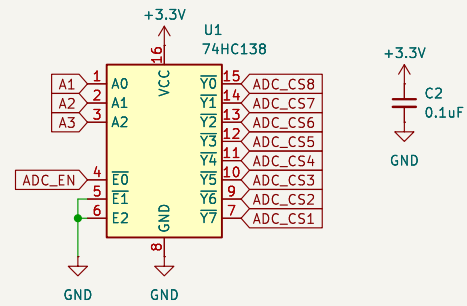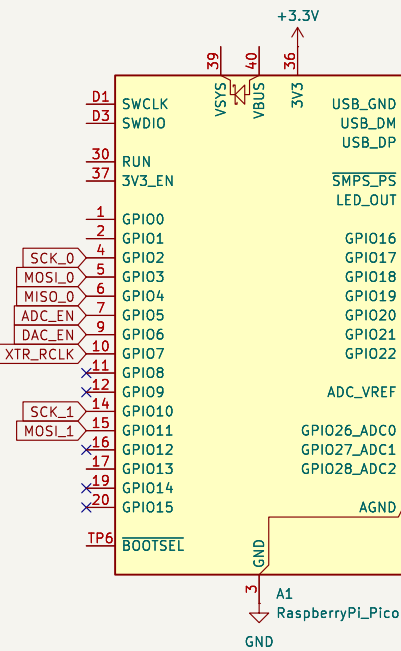


PCle x4: Unit 5

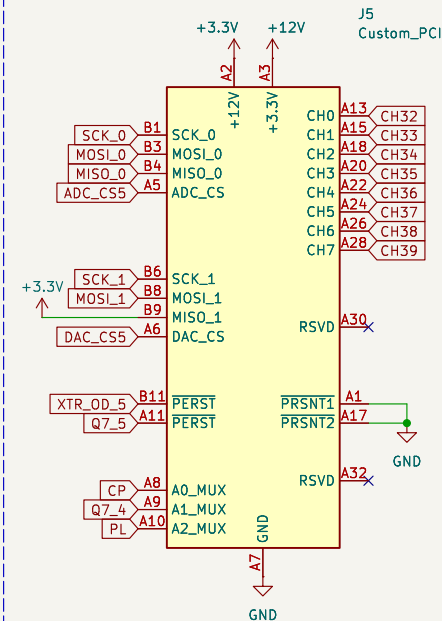


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

PCle x4: Unit 6

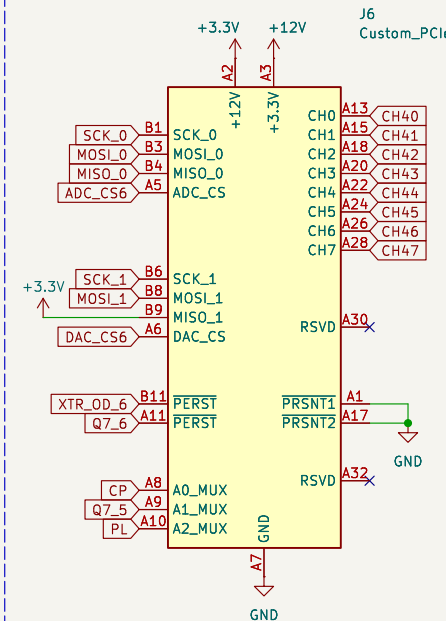


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

PCle x4: Unit 7




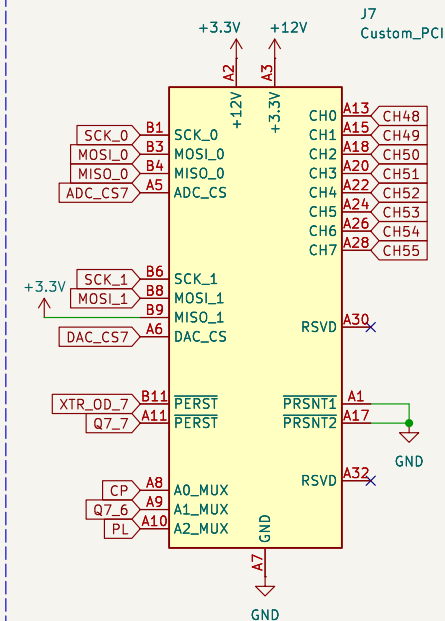


PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

PCle x4: Unit 8

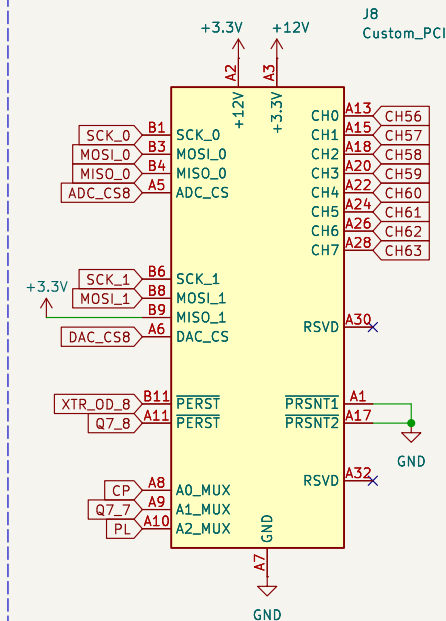

PERST: Toggles XTR200 Output Drive pin
maybe move the power pins

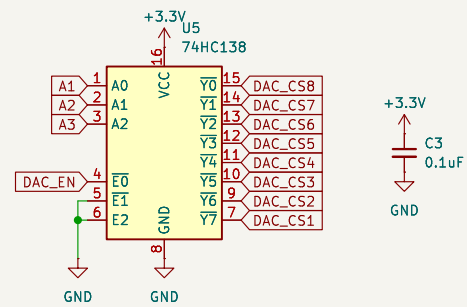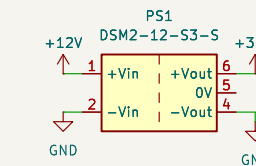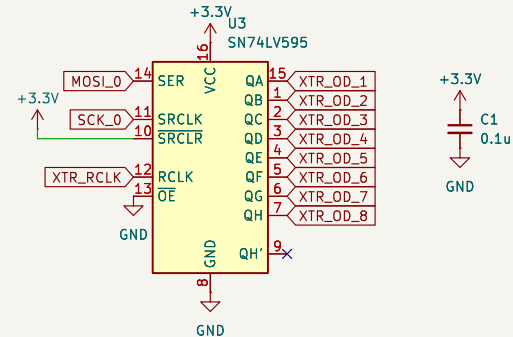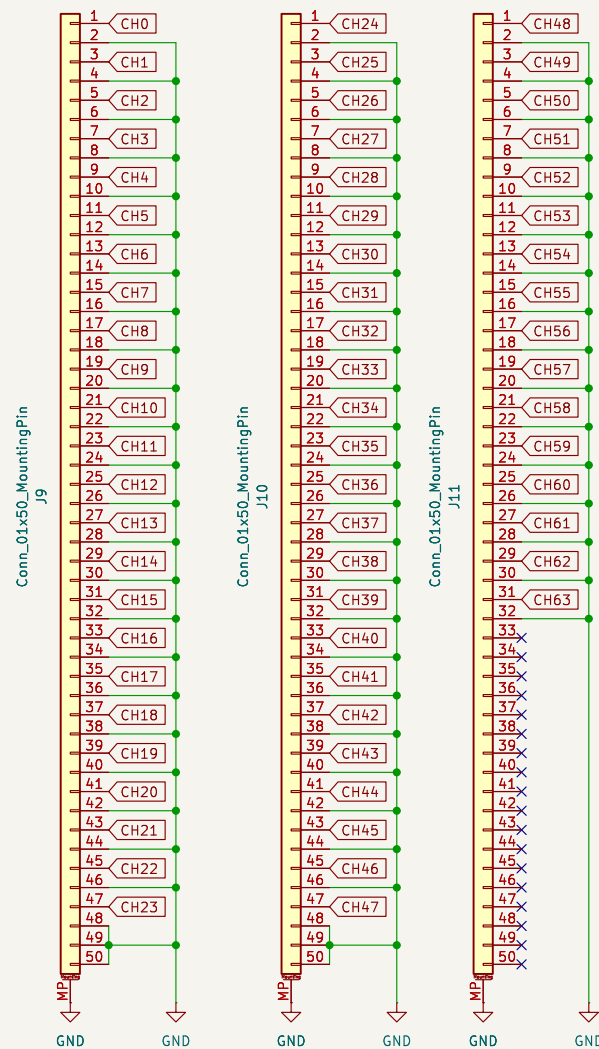

The Golden Rule for your Firmware
Because of the AD7193's /WEN bit, you must clear the bus before selecting a new chip. Your C/C++ function for reading these ADCs must follow this exact rigid sequence:

Assert: Pull 595 Latch LOW.

Select: Send 11111110 (or whichever ADC you want).

Lock: Pull 595 Latch HIGH. (Target ADC is now active).

Communicate: Send your AD7193 command (starting with 0) and read your 24 bits of data.

Assert: Pull 595 Latch LOW.

Clear: Send 11111111 (0xFF). (Active ADC ignores this because MSB is 1).

Lock: Pull 595 Latch HIGH. (All ADCs are now safely deselected).

Sheet: /
File: motherboard.kicad_sch

Title:

Size: A2 Date:

KiCad E.D.A. 9.0.9-unknown

Rev:

Id: 1/1