INSTRUCTIONS FOR USE OF MILLER FIBER OPTIC TOOL

TOUGH JACKETING:

- 1. STRIP WITH MILLER FIBER OPTIC TOOL.
- 2. CLEAN FIBER WITH PREP FLUID APPLIED
 BY Q-TIP SWAB (THOSE MADE WITH PAPER
 OR WOOD SHANK ONLY). PLACE FIBER ON
 CLEAN, FLAT, NON ABSORBENT SURFACE.
 ROLL BACK AND FORTH WHILE RUBBING
 WITH WELL MOISTENED SWAB, BUTT TO
 TIP. USE SWAB ONLY ONCE.


EASILY STRIPPED JACKETING:

STEP 2 ONLY.


IF FOULING OCCURS IN THE VEE OF THE TOOL, CLEAN BY PREP FLUID. EXCESSIVE FOULING WILL CAUSE TOOL TO SEVER FIBER.

CLEAN VEE WITH PREP FLUID AND LIGHTLY OIL TOOL BEFORE STORING.

WHEN PREPARING THE FIBER, IT IS RECOMMENDED THAT SEVERAL SHORT STRIPS BE MADE TO ACQUIRE THE DESIRED LENGTH. THIS WILL RELIEVE ANY PRESSURE CAUSED BY THE JACKETING BUNCHING UP AHEAD OF THE STRIPPER.

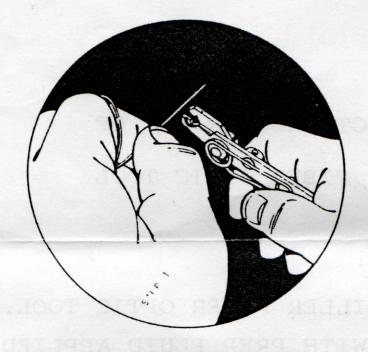

INSERT FIBER INTO OPENING OF TOOL

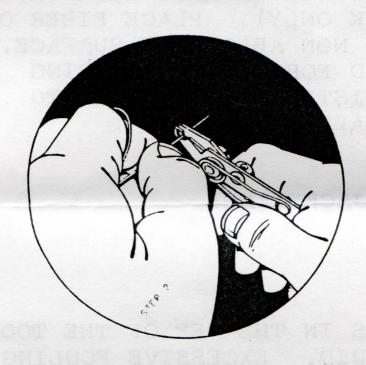

CLOSE TOOL SQUARELY WITH FIBER

