Power

File: Power.kicad_sch

RGB_LED_Circuit

File: RGB_LED_circuit.kicad_sch

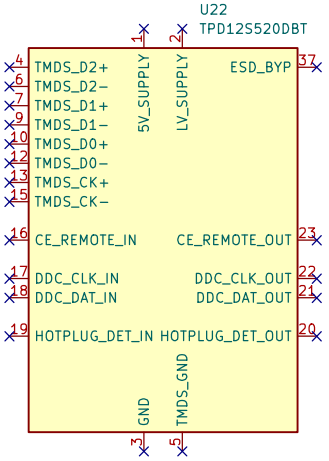

Accelerometer_Circle_LED

File: Accelerometer_Circle_LED.kicad_sch

Buttons

File: Buttons.kicad_sch

Accelerometer_Circle_Setup

File: Accelerometer_Circle_Setup.kicad_sch

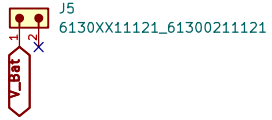

Shake to wake

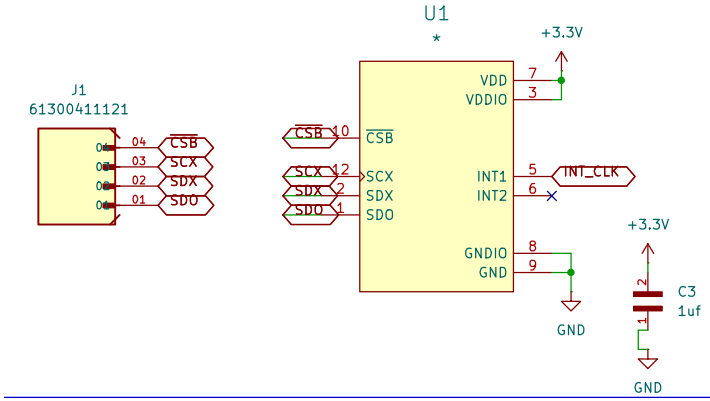

Change power state

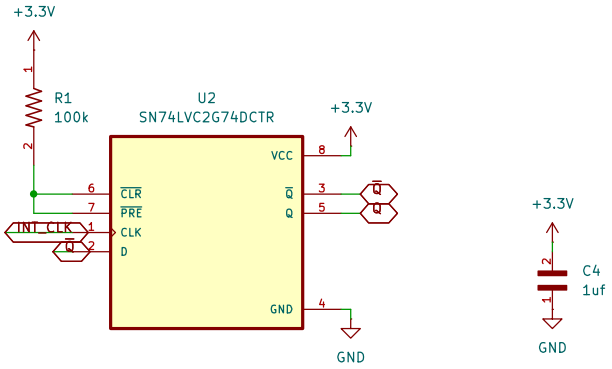

Control Power

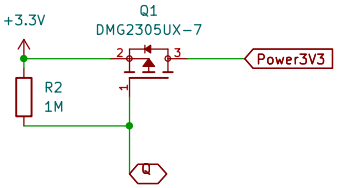

Regulator

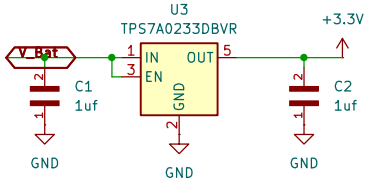

Ring Power

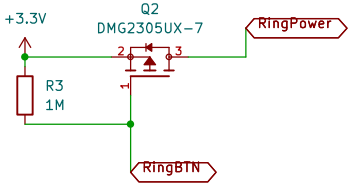

Solar panel

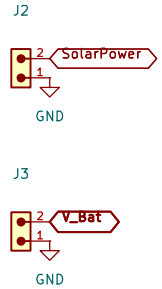

Charger

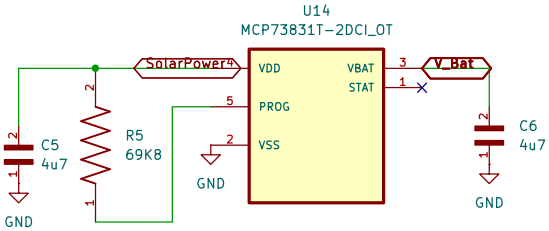

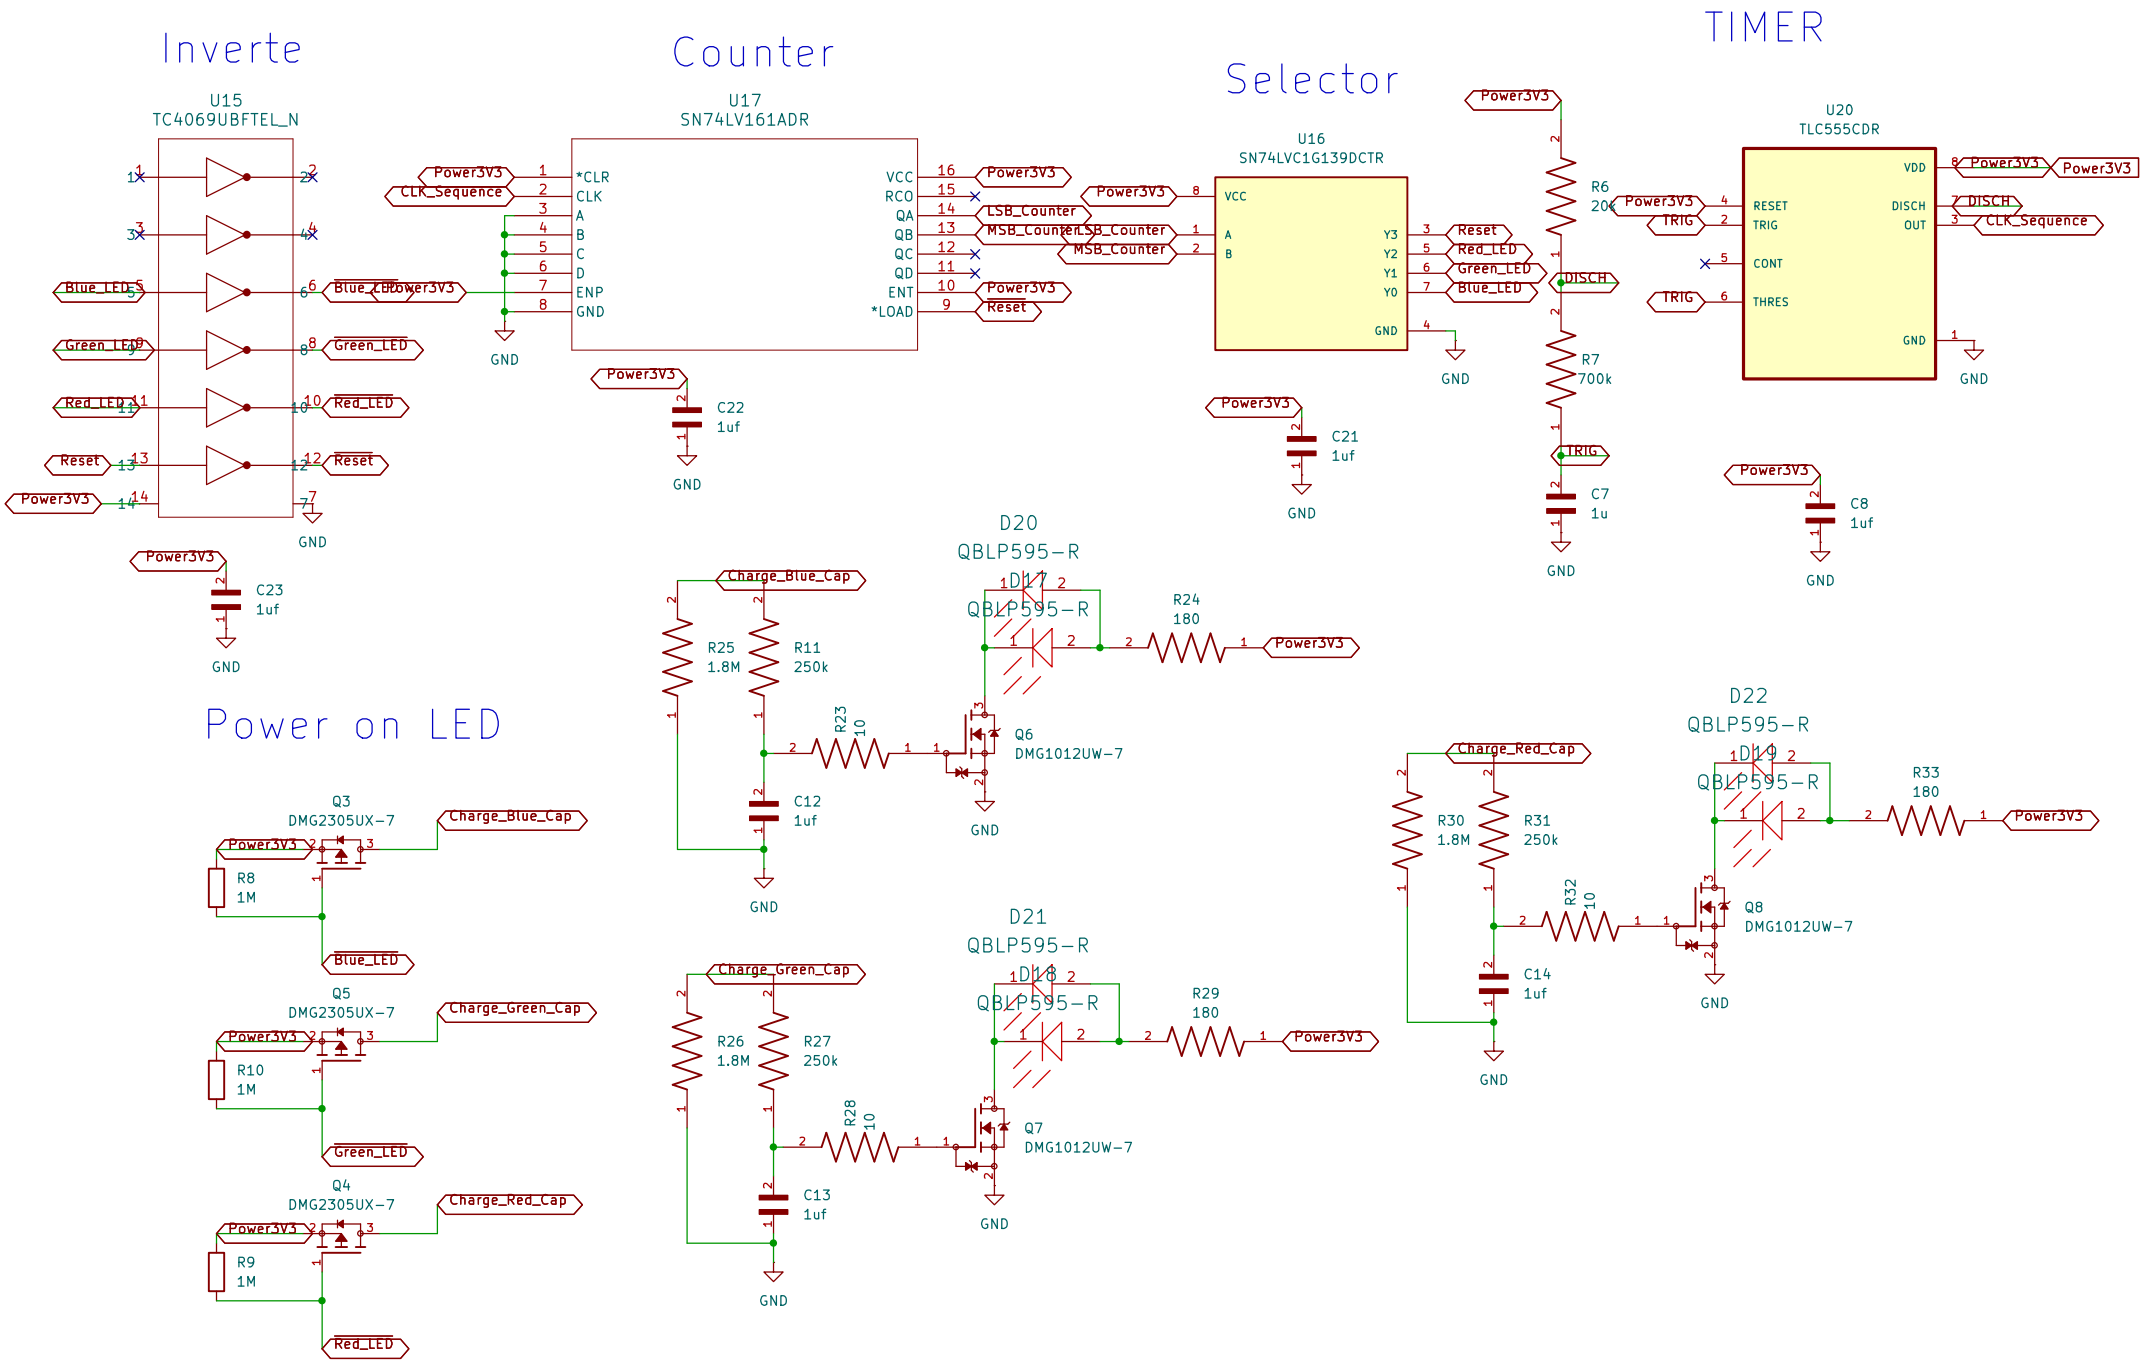
Inverte
U15
TC4069UBFTEL_N
Blue_LED
Green_LED
Red_LED
Reset
Power3V3
GND
Counter
U17
SN74LV161ADR
CLK_Sequence
*CLR
CLK
A
B
C
D
ENP
GND
RCO
QA
QB
QC
QD
ENT
*LOAD
LSB_Counter
MSB_Counter
C22
1uf
Selector
U16
SN74LVC1G139DCTR
VCC
A
B
Y3
Y2
Y1
Y0
C21
1uf
TIMER
U20
TLC555CDR
RESET
TRIG
CONT
THRES
DISCH
OUT
VDD
R6
20k
R7
700k
C7
1u
C8
1uf
C23
1uf
Power on LED
Q3
DMG2305UX-7
R8
1M
Charge_Blue_Cap
Q5
DMG2305UX-7
R10
1M
Charge_Green_Cap
Q4
DMG2305UX-7
R9
1M
Charge_Red_Cap
D20
QBLP595-R
D17
R25
1.8M
R11
250k
R23
10
Q6
DMG1012UW-7
C12
1uf
R24
180
D21
QBLP595-R
D18
R26
1.8M
R27
250k
R28
10
Q7
DMG1012UW-7
C13
1uf
R29
180
D22
QBLP595-R
D19
R30
1.8M
R31
250k
R32
10
Q8
DMG1012UW-7
C14
1uf
R33
180

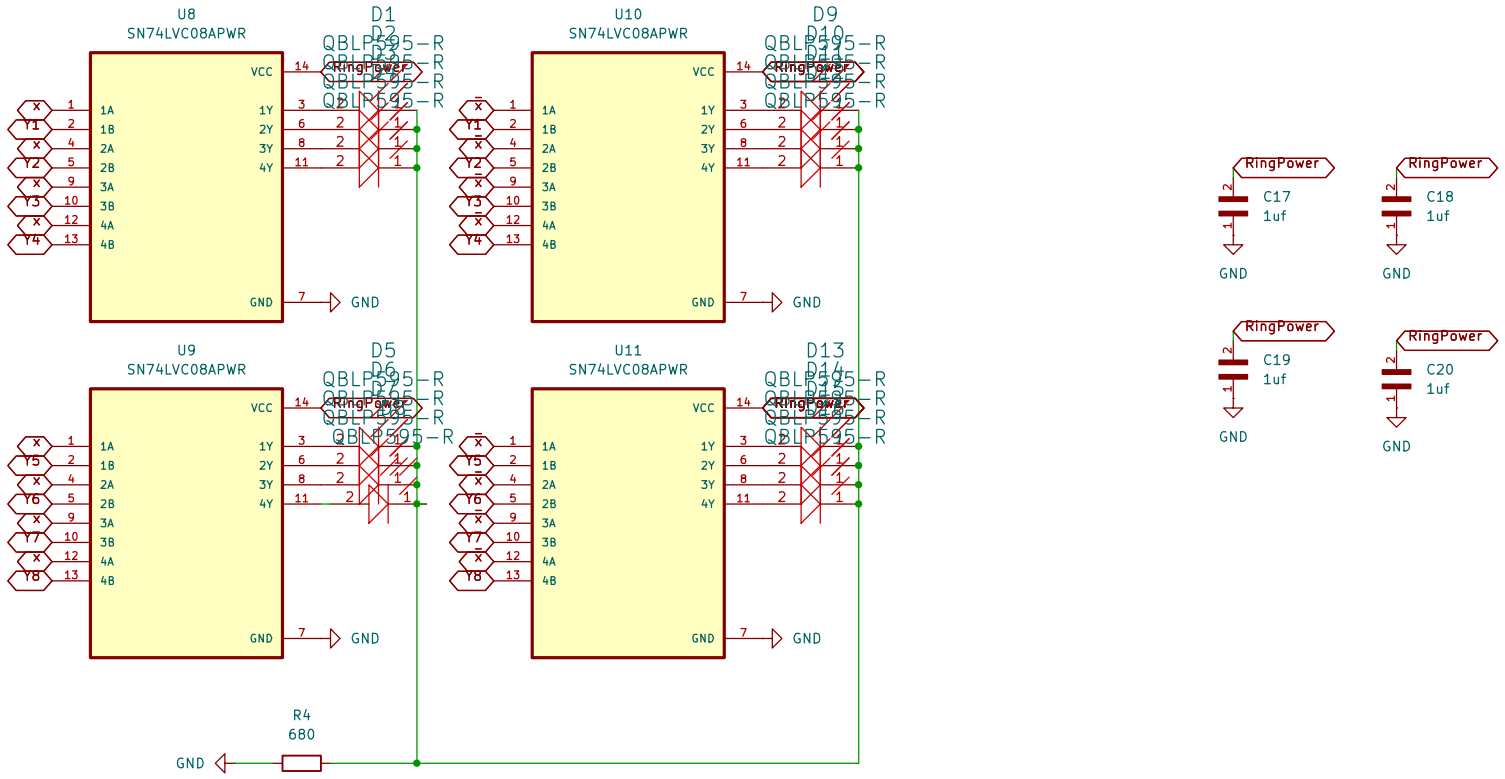
U8
SN74LVC08APWR
U10
SN74LVC08APWR
U9
SN74LVC08APWR
U11
SN74LVC08APWR
D1
D9
D5
D13
QBLP595-R
VCC
GND
1A
1B
2A
2B
3A
3B
4A
4B
1Y
2Y
3Y
4Y
Y1
Y2
Y3
Y4
Y5
Y6
Y7
Y8
R4
680
RingPower
C17
1uf
C18
1uf
C19
1uf
C20
1uf

Ring Power

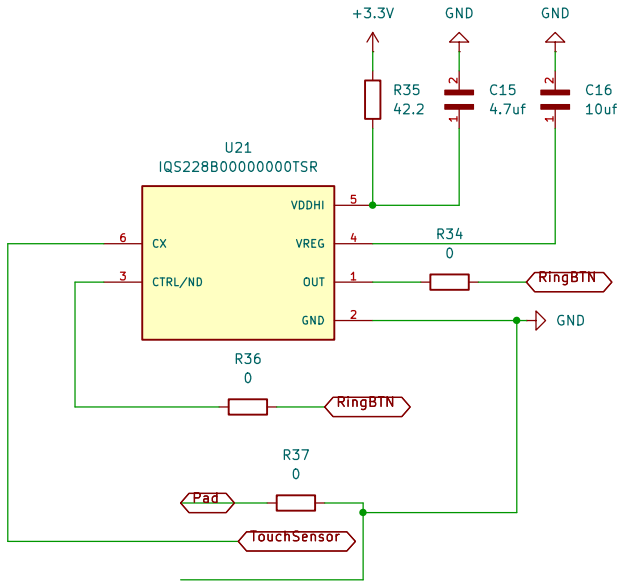
+3.3V
GND
GND
R35
42.2
C15
4.7uf
C16
10uf
U21
IQS228B00000000TSR
VDDHI
CX
VREG
CTRL/ND
OUT
GND
R34
0
RingBTN
GND
R36
0
RingBTN
R37
0
Pad
TouchSensor


J4
Pad
TouchSensor

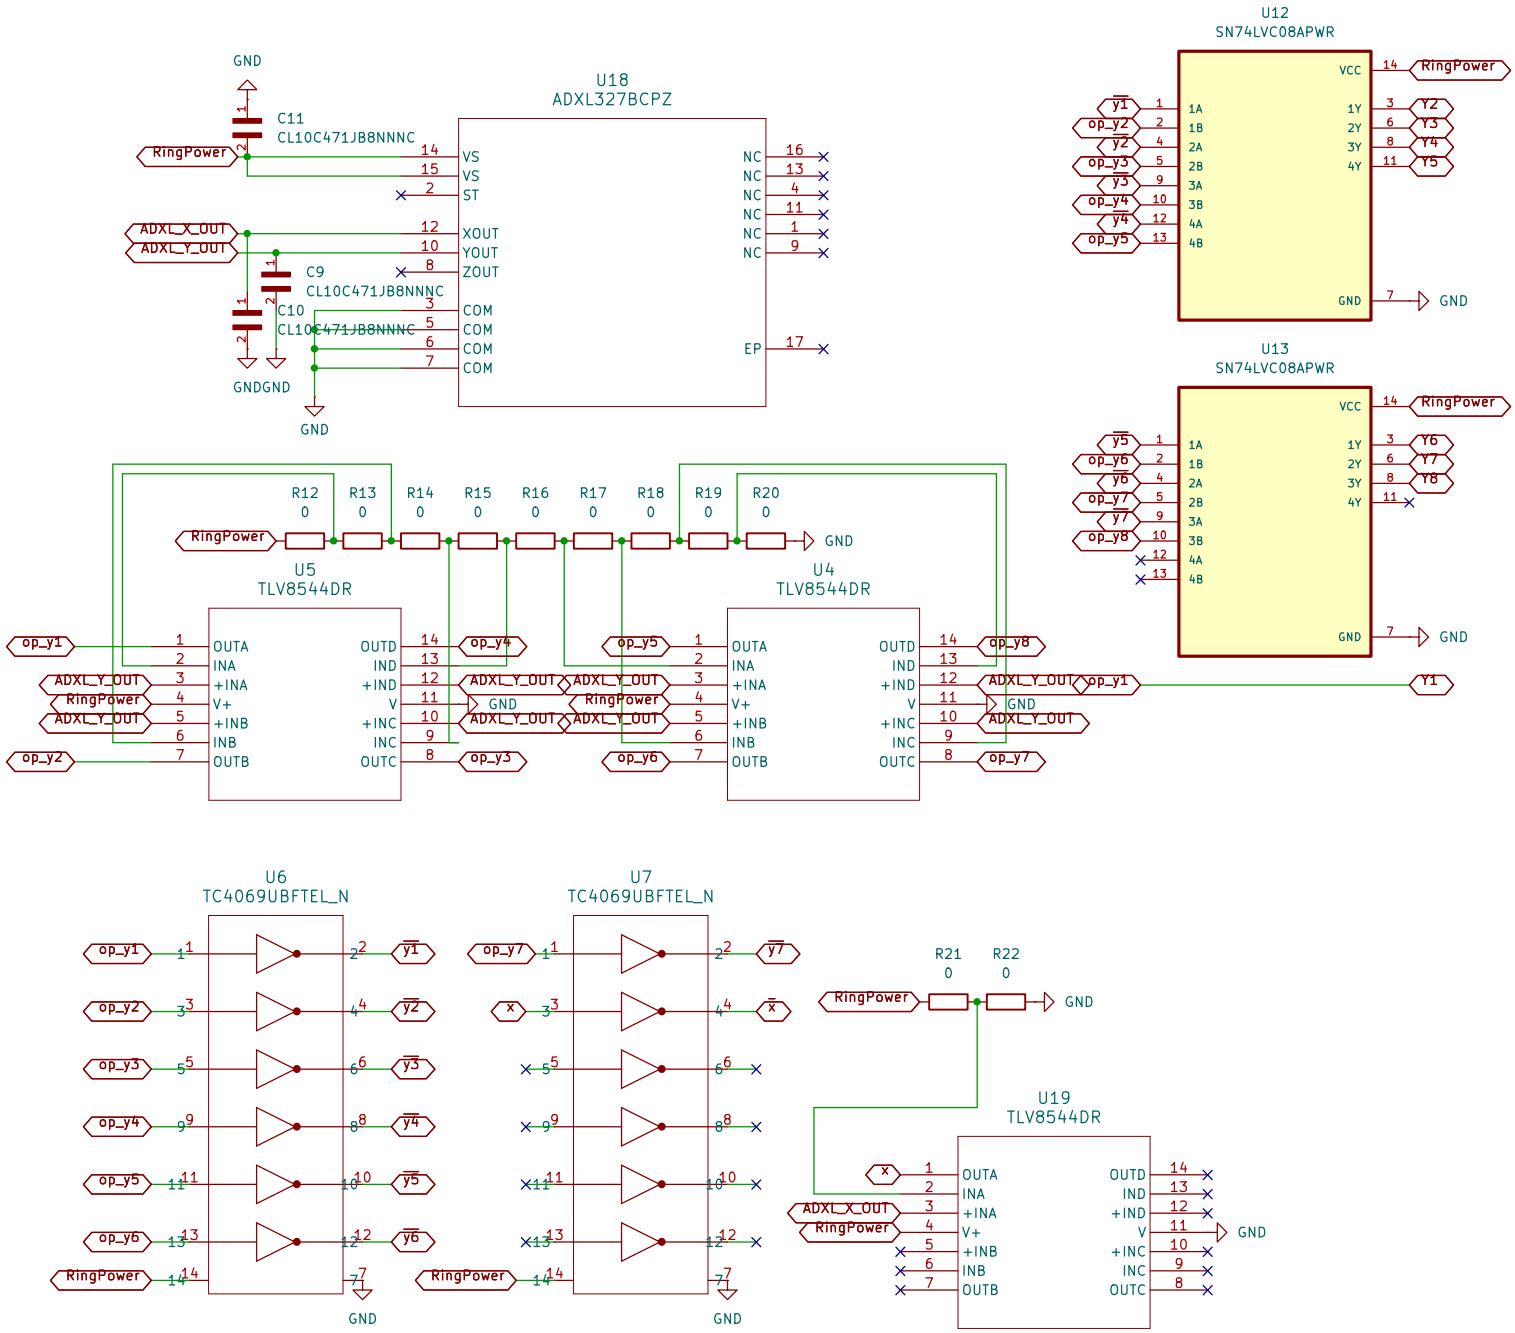
U18
ADXL327BCPZ
C11
CL10C471JB8NNNC
C9
CL10C471JB8NNNC
C10
CL10C471JB8NNNC
RingPower
ADXL_X_OUT
ADXL_Y_OUT
GND
GNDGND
VS
VS
ST
XOUT
YOUT
ZOUT
COM
COM
COM
COM
NC
NC
NC
NC
NC
NC
EP
U12
SN74LVC08APWR
U13
SN74LVC08APWR
VCC
1A
1B
2A
2B
3A
3B
4A
4B
1Y
2Y
3Y
4Y
y1
op_y2
y2
op_y3
y3
op_y4
y4
op_y5
Y2
Y3
Y4
Y5
y5
op_y6
y6
op_y7
y7
op_y8
Y6
Y7
Y8
R12
R13
R14
R15
R16
R17
R18
R19
R20
U5
TLV8544DR
U4
TLV8544DR
OUTA
INA
+INA
V+
+INB
INB
OUTB
OUTD
IND
+IND
V
+INC
INC
OUTC
op_y1
op_y2
op_y3
op_y4
op_y5
op_y6
op_y7
op_y8
Y1
U6
TC4069UBFTEL_N
U7
TC4069UBFTEL_N
R21
R22
U19
TLV8544DR
x