



PROCEDURE FOR THE INSTALLATION OF ROD CENTRALIZER

PROCEDURE FOR INSTALLATION OF ROD CENTRALIZER

BOLTS AND NUTS NEEDED FOR THE ASSEMBLY

- 12 bolts $\frac{1}{2}$ X 1" $\frac{3}{8}$ length
- 12 locknut $\frac{1}{2}$
- 12 lockwashers $\frac{1}{2}$

TOOLS NEEDED FOR THE ASSEMBLY

- 2 wrench $\frac{3}{4}$ or,
- 1 wrench $\frac{3}{4}$ et 1 box $\frac{3}{4}$
- 1 ratchet or 1 impact

PROCEDURE

THE CENTRALISER MUST ALWAYS BE INSTALLED BY TWO WORKERS

- 1- The rod centraliser is mainly used when drilling V-30 holes to prevent rod oscillation and to keep the V-30 correctly aligned;
- 2- The rods centralisers are normally installed every 40 feet or as required, depending on the ground conditions in the riser and the length and angle of the riser being drilled;
- 3- Before installing the centraliser, the rod must be placed on the rod string;
- 4- The rod centraliser is installed on the female end of the rod in accordance with the assembly diagram below;
- 5- The two parts of the centraliser weigh 46 pounds each. It is important to always be in the best position to handle these parts;
- 6- Align the coupling at the bottom of one of the two centraliser parts with the flat slip plate notches on the rod;
- 7- Bring the other part closer to the centraliser and align it with the other part already held in place by one of the two workers;
- 8- Fit 6 bolts in one direction and 6 in the other as shown in the assembly diagram below;
- 9- Be careful not to damage the bolt threads when you insert them into the holes;


There is no sequence for installing or tightening nuts and bolts

10-Check that all 12 bolts, 12 locknuts and 12 lockwashers are in place.

11-Tighten all the bolts, keeping tension on the lockwashers, using the appropriate tool (wrench or box);

USING A WESCOT OR PIPE WRENCH IS NOT APPROPRIATE

12-Carry out the opposite procedure when dismantling the centraliser.

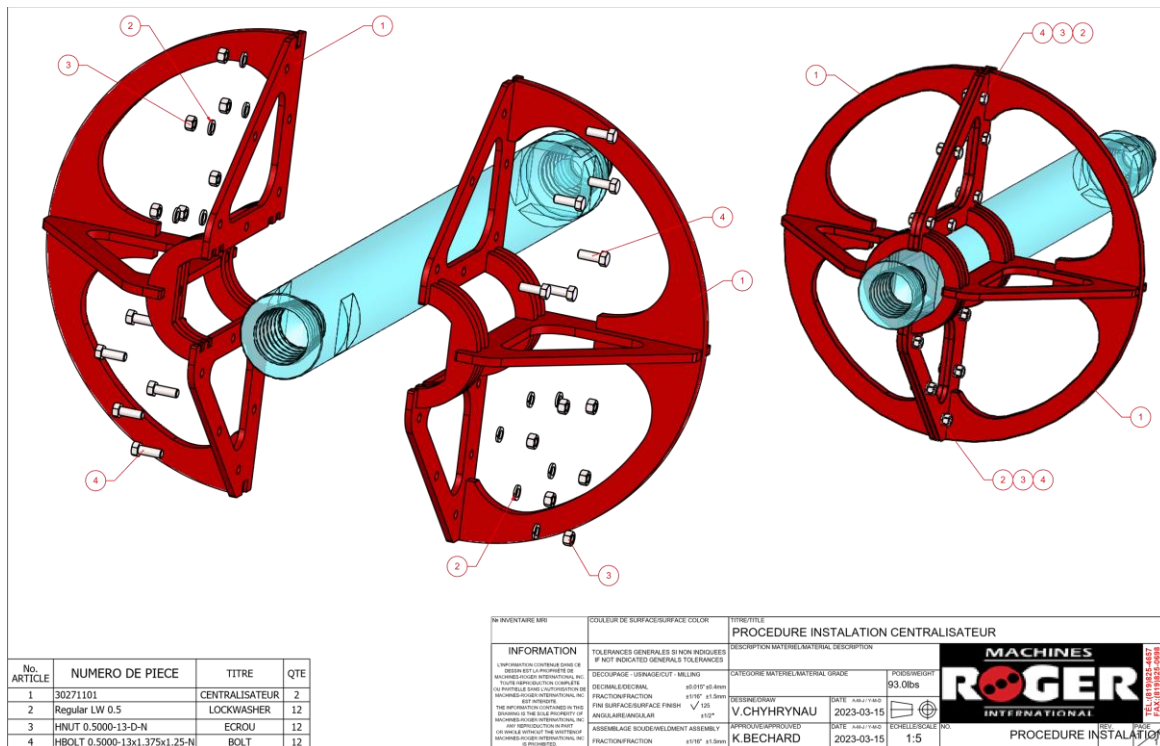

Christian St-Amour
Operations Manager
Machines Roger International