

WORK PROCEDURE

PRO-MEC-002A

PROCEDURE FOR INSTALLING THE BOOM ON THE CUBEX DRILL

GOAL

The purpose of this procedure is to define safe methods for installing a boom.

APPLICATION

This procedure applies to all employees of MACHINES ROGER INTERNATIONAL.

INTERPRETATION

Staff with authority for the interpretation of this document are the Maintenance Manager or the Operations Manager. Any request for modification, revision or update must be made to one of these persons.

RESPONSIBILITIES

The worker is responsible for using this procedure for every installation of a boom. The necessary tools must be inspected before using them.

PROCEDURE

The supervisor will designate a team leader who will take care of all operations. This team leader must be a supervisor or a mechanic and he will have to meet with the lifting equipment operator to explain the procedure in detail. In addition, he will be the only one authorized to communicate with the lifting equipment operator during the operation.

Lifting equipment required, **must have a capacity of 6,000 pounds or more.**

The CUBEX drill has to be in a stable position before beginning the installation.

1. In order to balancing the charge, the slings (equal length and certified 5,000 pounds) are attached at the four corners of the boom. They must be connected to each other by the center with a big shackle of 1 inch in diameter.
2. Approach the lifting equipment to attach the shackle
3. Check if the ring is on the boom
4. Install a nylon cable(12 feet long minimum) to direct the boom

PROCEDURE FOR INSTALLING THE BOOM ON THE CUBEX DRILL

5. Direct the boom over the drill while remaining in a safe place at least 12 feet from the drill
6. Approach the a few inches from the actuator before handling.
7. Make sure you are seen by the operator at all times.


VERY IMPORTANT. Do not expose yourself under the charge (boom)

8. Put the ring on the actuator if it is not on the boom
9. Position the boom on the actuator
10. Start the drill.
11. Carefully align with the hydraulic system, the actuator with the boom (align the marks if they are present).
12. Stop the drill.
13. Install the twelve bolts following the sequence below. Put the bolts in place (2-inches bolts and lock washer)
14. Make sure all twelve bolts are tight using torque wrench
 - a. Dry bolts 110 lbs / foot
 - b. Lubricated bolts (anti-seize) 80 lbs / foot
15. Remove slings only when bolts are tight
16. Proceed with the installation of the hydraulic hoses.
17. Check all boom functions.

NB A bolt tightening check must be done after a shift.



Karl Bécharde
Maintenance Manager

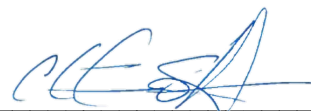

Christian St-Amour
Operations Manager