

WORK PROCEDURE

PRO-OP-ITH-003A

DEMOBILIZATION OF AN ITH DRILL AND THE COMPRESSOR

OBJECTIVES

The purpose of this procedure is to define a safe way to demobilize and move the drill.

APPLICATION

This procedure applies to all employees of MACHINES ROGER INTERNATIONAL.

INTERPRETATION

The person with authority for the interpretation of this document is the Operations Manager. Any request for modification, revision or update must be made to this person.

RESPONSIBILITIES

The driller-guide is responsible for organizing the demobilization. He is also responsible for setting up the activities surrounding the movement of equipment.

WORKER

The worker is responsible for using this procedure for each demobilization and displacement. Site equipment transportation procedures must be followed

WARNING

The lifting accessories must be inspected before use. If an anomaly is detected, the replacement of the accessory is mandatory before commencing the movement of the drill or equipment.

The use of approved component is mandatory.

No modifications are allowed

DEMOBILIZATION OF AN ITH DRILL AND THE COMPRESSOR

IT IS MANDATORY TO USE THE PLASTIC HOOK TO MOVE THE 600 VOLT CABLE WHEN IT IS POWERED. NEVER TOUCH IT WITH YOUR HANDS.

ALWAYS USE THE 3 POINTS OF CONTACT TO GET IN AND OUT OF THE BASKET


NEVER HAVE ANY EQUIPMENT IN THE BASKET WHEN THE WORKER IS IN THE BASKET TO PERFORM MOVEMENT MANOEUVRES

METHOD OF DEMOBILIZING THE DRILL.

1. Place the boom in the transport position with the drill head opposite to the tables (see illustration) and attach the mast to the drill with a puller or chain hoist.
2. Close the air and water valves on the main line. It is very important to bleed the air hoses, the air filter and the receiver, and the water hose before decoupling them.
3. Close the breaker on the drill panel and position the power cable so that it is not bulky, it has a sufficient length for the displacement and not to damage it. Turn on the power supply "ON" just before moving the equipment.
4. Connect the skid or trailer to the vehicle with two slings minimum 1 " X 8 feet. These slings must be fixed with shackles of at least 1" 1/4.
5. Position the skid so that it is as level as possible and clean it if there are rocks or mud.

If it is a trailer and is connected to the bucket of a scoop (**option # 1**), be sure to position it sufficiently at an angle so as to avoid sway effect when the drill will get on the trailer.

OPTION 1

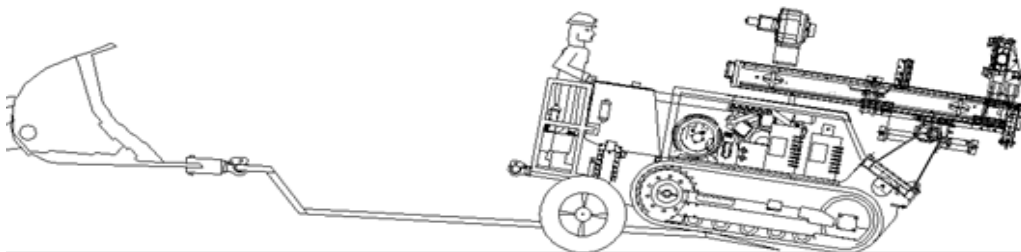


DEMOBILIZATION OF AN ITH DRILL AND THE COMPRESSOR

Use of the hook in a scoop bucket instead of attaching the trailer directly to the back of a vehicle will be privileged.

In the case where it is impossible to use the hand (finger or pin) in the scoop bucket, **option # 2** may be used while considering that pieces of wood may have to be placed at the beginning of the ramps to reduce the slope of access to the trailer and thereby reduces the sway effect created during the movement of the drill

OPTION 2

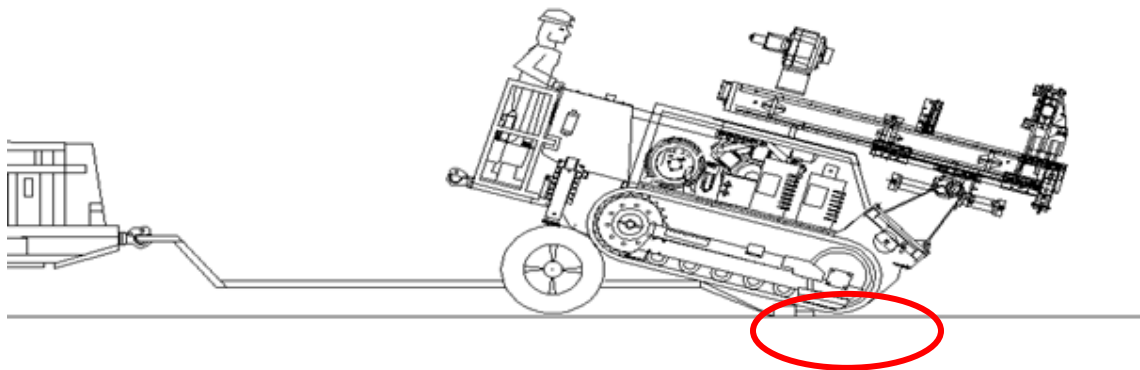

6. Start the drill and put it on the skid or trailer. For this operation, the operator must always place himself inside the basket of the drill and put the guardrail chain.
7. Once the drill is in place, stop the drill and close the breaker on the drill panel. Unplug the electrical cable and roll it on the hook provided on the side of the basket or in the basket. Attach it well to prevent damage during transport.
8. Attach the drill on each side so that it can not move forward or back off during transport.
9. Put the console in the appropriate box and store and secure properly
10. Make sure there are no free parts or tools on the equipment before you start transporting;
11. Once the movement is complete, do not put the skid attached to the wall, always leave it on the ground and put a yellow ribbon to signal its presence.

DEMOBILIZATION OF AN ITH DRILL AND THE COMPRESSOR

Demobilization of a compressor

- 1) Close the air and water valves. It is very important to bleed the air and water hoses before decoupling them.
- 2) Roll out the electrical cable and hoses and secure them,
- 3) Make sure the two bolts on the towing bar are in place to limit the pivot movement of the towing bar



- 4) Verify the hitch that is inside the bucket to make sure it's working well
- 5) Make sure the compressor is stable when you couple and uncouple. If needed, put one jack, or more, and the wheel shocks

DEMOBILIZATION OF AN ITH DRILL AND THE COMPRESSOR

6) Connect the compressor attachment to the vehicle using shackles of 1"1 / 4 minimum.

7) Attach the two safety chains to the towing vehicle.

Demobilization procedure without the trailer

It is permitted to move the drill without the trailer, using a tow bar, over short distances, flat.

It is prohibited to move the drill without the trailer in the ramp.

1) Install the tow bar on the drill using ¾" shackles;

2) Connect the tow bar to the towing vehicle with a 1 ¼" shackle.

3) Release the planetary gears from the traction;

4) Install a safety chain (**minimum** which connects the drill to the scoop (example between slide-over and scoop bucket)

5) Travel must be done at low speed

**Always ensure good communication with the scoop operator;
NB Apply the site policy regarding escorts for moving equipment.**

Ajouts ou modifications	Date	Par
Point #4- Added to verify the hitch Point #5- Added the stability of the compressor	25-22-2022	S. Tremblay
Add the compressor in the title Replace "AUGER" by equipment on the point #10 Precise (edit) some sentences	December 2023	S. Tremblay
Translation revision	April 2024	S. Tremblay D. Baribeault
Add the obligation to use the plastic hook to move the 600 V cable	December 2024	S. Tremblay
Add 3 points of contact and no materiel in the basket when the driller is in it to move the CUBEX	January 2025	S. Tremblay



Christian St-Amour
Operations Manager