

WORK PROCEDURE

PRO-OP-ITH-014A

PROCEDURE FOR INSTALLATION OF CASING AT THE BEGINNING OF THE HOLE

OBJECTIVE

The objective of this procedure is to define safe methods for the installation of ABS casing at the beginning of the holes.

APPLICATION

This procedure applies to all employees of MACHINES ROGER INTERNATIONAL.

INTERPRETATION

The personnel having the authority for the interpretation of this document is the Operations Manager. Any request for modification, revision or update must be made to this person

RESPONSABILITIES

Workers are responsible for applying this procedure. The supervisor must ensure that the procedure is applied

The installation of casing at the beginning of the hole is common to protect the hole collar from falling rocks that could block the hole and interfere with drilling or loading explosives. The sequence of the operation must be followed rigorously for a quality installation and to avoid any accidents.

PROCEDURE

- 1- Respect the PRO-OP-ITH-004A drilling procedure (Production drilling procedure from 3.375 "to 6.5")

PROCEDURE FOR INSTALLATION OF CASING AT THE BEGINNING OF THE HOLE

2- When the drill is properly aligned according to the drilling plans, follow the following table:

Casing size	1st drilling size	1st drilling length	2 nd drilling size	2 nd drilling length
4 inches	3 inches 7/8	As needed	4 inches	1 foot in solid rock
6 inches	4 inches 1/2	As needed	6 inches	1 foot in solid rock
10 inches	6 inches 1/2	As needed	10 inches	1 foot in solid rock

1- For all dimensions and all drilling lengths, the following sequence must be followed (Apply the Procedure PRO-OP-ITH-016A when you're handling components):

- Make the 1st drilling of the desired length depending on the solidity of the rock on the floor;
- When it is time to change the bit for the 2nd drill, perform the change maneuvers and move the bit up beyond the tables;
- Close the slip-plate or the jaws

IT IS FORBIDDEN FOR ANYONE TO POSITION ANY PARTS OF HIS BODY UNDER THE TABLES IF THE HAMMER IS NOT MOUNTED BEYOND THE TABLES AND THE SLIP PLATE IS NOT CLOSED.

A minimum distance of 1.5 meters between the mast and the console must be respected. When a part is in motion, no worker can stand between the console and the boom, or within 1.5 meters of the boom on all sides.

- Make the 2nd drilling according to the ground conditions;
- Remove the 2nd rod;
- Screw the hammer to the saver sub without tightening it with force;
- If there is a need to clean the hole collar with your hands, lift the hammer over the tables;
- Close the slip-plate or the jaws;
- Press the bit on the slip-plate or the jaws;
- Close the drill switch;
- Proceed to cleaning

IT IS FORBIDDEN FOR ANYONE TO POSITION ANY PARTS OF HIS BODY UNDER THE TABLES IF THE HAMMER IS NOT MOUNTED BEYOND THE TABLES AND THE SLIP PLATE IS NOT CLOSED.


A minimum distance of 1.5 meters between the boom and the console must be respected. When a part is in motion, no worker can stand between the console and the boom, or within 1.5 meters of the boom on all sides.

PROCEDURE FOR INSTALLATION OF CASING AT THE BEGINNING OF THE HOLE

- l. Raise the head and hammer to the maximum
- m. Open the slip-plate and the jaws;
- n. Insert the casing of the required length according to the floor conditions, passing it through the hole in the tables;
- o. Use the bit and hammer to push the casing if necessary;
- p. When it's time to change the bit back to production drilling, do the change and move the bit over the tables;

Casings can become a pitfall for workers if left too long off the jobsite floor. The protrusion length may change during drilling due to the build-up of drilling mud. The path taken by the workers must be free from these protruding casings

Adds or modifications	Date	Par
Translation revision Add to apply PRO-OP-ITH-016A when handling components	02-12-2021	S. Tremblay

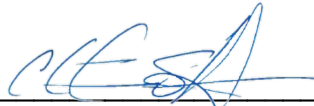

Christian St-Amour
Operations Manager