


# Dynamic NFC/RFID tag IC with 64-Kbit EEPROM, NFC Forum Type 4 Tag and I<sup>2</sup>C interface

Datasheet - production data

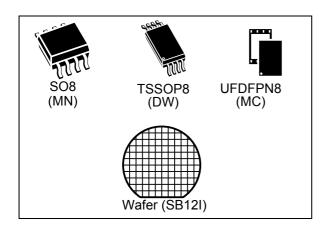

#### **Features**

### I<sup>2</sup>C interface

- Two-wire I<sup>2</sup>C serial interface supports 1 MHz protocol
- Single supply voltage: 2.7 V to 5.5 V

#### **Contactless interface**

- NFC Forum Type 4 Tag
- ISO/IEC 14443 Type A
- 106 Kbps data rate
- Internal tuning capacitance: 25 pF

#### **Memory**

- 8-Kbyte (64-kbit) EEPROM
- · Support of NDEF data structure
- Data retention: 200 years
- Endurance: 1 million erase-write cycles
- Read up to 246 bytes in a single command
- Write up to 246 bytes in a single command
- 7 bytes unique identifier (UID)
- 128 bits passwords protection

#### **Package**

- 8-lead small-outline package (SO8) ECOPACK<sup>®</sup>2
- TSSOP8 ECOPACK<sup>®</sup>2
- UFDFPN8 ECOPACK<sup>®</sup>2

#### Digital pad

- GPO: configurable General Purpose Output
- RF disable: activation/deactivation of RF commands

# **Description**

The M24SR64-Y device is a dynamic NFC/RFID tag IC with a dual interface. It embeds an EEPROM memory. It can be operated from an I<sup>2</sup>C interface or by a 13.56 MHz RFID reader or an NFC phone.

The I<sup>2</sup>C interface uses a two-wire serial interface, consisting of a bidirectional data line and a clock line. It behaves as a slave in the I<sup>2</sup>C protocol.

The RF protocol is compatible with ISO/IEC 14443 Type A and NFC Forum Type 4 Tag.

Contents M24SR64-Y

# **Contents**

2/85

1	Fund	ctional	description	9
	1.1	Functi	onal modes	. 10
		1.1.1	I2C mode	. 10
		1.1.2	Tag mode	. 10
		1.1.3	Dual interface mode	. 11
2	Sign	al desc	riptions	. 12
	2.1	Serial	clock (SCL)	. 12
	2.2	Serial	data (SDA)	. 12
	2.3	Anteni	na coil (AC0, AC1)	. 12
	2.4	Groun	d (VSS)	. 12
	2.5	Supply	y voltage (V <sub>CC</sub> )	. 12
		2.5.1	Operating supply voltage V <sub>CC</sub>	
		2.5.2	Power-up conditions	
		2.5.3	Device reset in I <sup>2</sup> C mode	. 13
		2.5.4	Power-down conditions	. 13
	2.6	RF dis	able	. 13
	2.7	Gener	al purpose output (GPO)	. 13
		2.7.1	Session Open configuration (GPO field = 0xX1 or 0x1X)	. 14
		2.7.2	WIP Writing in Progress configuration (GPO field = 0xX2 or 0x2X)	. 15
		2.7.3	I <sup>2</sup> C answer ready configuration (GPO field = 0xX3)	. 16
		2.7.4	MIP NDEF Message writing in Progress configuration (GPO field = 0x3X)	. 17
		2.7.5	INT Interrupt configuration (GPO field = 0xX4 or 0x4X)	. 18
		2.7.6	State Control configuration (GPO field = 0xX5 or 0x5X)	. 19
		2.7.7	RF busy configuration (GPO field = 0x6X)	. 20
3	M24	SR64-Y	memory management	. 21
	3.1	Memo	ry structure	. 21
		3.1.1	File identifier	. 21
		3.1.2	CC file layout	. 21
		3.1.3	NDEF file layout	. 22
		3.1.4	System file layout	. 23
	3.2	Read	and write access rights to the memory	. 25

DocID023790 Rev 10

47/

		3.2.1	State of the Read and Write access rights	25
		3.2.2	Changing the read access right to NDEF files	26
		3.2.3	Changing the write access right to NDEF files	27
	3.3	Access	s right life time	. 27
	3.4	NDEF	file passwords	. 27
	3.5	I2C pa	ssword	. 28
		3.5.1	I <sup>2</sup> C password and I <sup>2</sup> C protect field of the System file	28
4	Com	munica	tion mechanism	. 29
	4.1	Master	and slave	. 29
	4.2	M24SF	R64-Y session mechanism	. 29
		4.2.1	RF token	29
		4.2.2	I <sup>2</sup> C token	29
5	I <sup>2</sup> C a	nd RF o	command sets	. 30
	5.1	Structu	re of the command sets	. 31
	5.2	I-Block	c format	. 31
		5.2.1	C-APDU: payload format of a command	32
		5.2.2	R-APDU: payload format of a response	33
	5.3	R-Bloc	k format	. 33
	5.4	S-Bloc	k format	. 34
	5.5	CRC o	of the I2C and RF frame	. 35
	5.6	NFC F	orum Type 4 Tag protocol	. 35
		5.6.1	Commands set	
		5.6.2	Status and error codes	36
		5.6.3	NDEF Tag Application Select command	38
		5.6.4	Capability Container Select command	38
		5.6.5	NDEF Select command	39
		5.6.6	System File Select command	40
		5.6.7	ReadBinary command	40
		5.6.8	UpdateBinary command	41
	5.7	ISO/IE	C 7816-4 commands	. 43
		5.7.1	Verify command	43
		5.7.2	Change Reference Data command	44
		5.7.3	Enable Verification Requirement command	45
		5.7.4	Disable Verification Requirement command	46

	5.8	ST Dror	orietary command set	17
	5.0	5.8.1	ExtendedReadBinary command	
		5.8.2	EnablePermanentState command	
		5.8.3	DisablePermanentState command	
		5.8.4	UpdateFileType command	
		5.8.5	SendInterrupt command	
		5.8.6	StateControl command	
	5.9		RF command set	
	0.0	5.9.1	Anticollision command set	
		5.9.2	RATS command and ATS response	
		5.9.3	PPS command & response	
	5.10	Specific	I <sup>2</sup> C command set	
		5.10.1	GetI2Csession command	
		5.10.2	KillRFsession command	. 55
6	RF de	evice op	eration	56
	6.1	Anticolli	sion and Device Activation command set for the RF interface	56
	6.2	Open a	n RFsession	56
	6.3	Close a	n RFsession	56
	6.4	Applicat	tive command set	56
	_			
7	I2C d	evice op	peration	57
	7.1	I2C con	nmunication protocol	. 57
	7.2	Start co	ndition	. 58
	7.3	Stop co	ndition	58
	7.4	I <sup>2</sup> C time	out on Start condition	58
	7.5	I <sup>2</sup> C time	out on clock period	58
	7.6	Acknow	ledge bit (ACK)	. 59
	7.7	Data inp	out	. 59
	7.8	I <sup>2</sup> C devi	ce address	. 59
	7.9	I <sup>2</sup> C fram	ne format	. 59
	-	7.9.1	Example of I <sup>2</sup> C frame commands	
	7.10	Open a	n I <sup>2</sup> C session	
	7.11	-	ne I <sup>2</sup> C session	
	7.11	CIOCC LI		

8	Fund	ctional procedures	63
	8.1	Selection of an NDEF message	63
	8.2	Reading of an NDEF message	63
	8.3	Reading a locked NDEF file	63
	8.4	Locking an NDEF file	63
	8.5	Unlocking an NDEF file	64
	8.6	Reaching the read-only state for an NDEF file	64
	8.7	Changing an NDEF password procedure	64
	8.8	Changing a File type Procedure	64
9	UID:	Unique identifier	65
10	Maxi	mum rating	66
11	I2C E	DC and AC parameters	67
	11.1	I2C timing measurement condition	71
12	GPO	parameters	74
13	RF e	lectrical parameters	76
14	Pack	kage mechanical data	77
	14.1	Mechanical data for the SO8N package	77
	14.2	Mechanical data for the TSSOP8 package	78
	14.3	Mechanical data for the UFDFPN8 package	79
15	Part	numbering	81
16	Revi	sion history	82

List of tables M24SR64-Y

# List of tables

Table 1.	Signal names	10
Table 2.	Functional modes	10
Table 3.	File identifier	21
Table 4.	CC file layout for 1 NDEF file	22
Table 5.	NDEF file layout	23
Table 6.	Field list	
Table 7.	Details about the GPO field	24
Table 8.	Details about the RF Session field	
Table 9.	Details about the ST reserved field	
Table 10.	Details about the RF enable field	
Table 11.	Read access right	
Table 12.	Write access right	
Table 13.	RF and I <sup>2</sup> C command sets	
Table 14.	I-Block format	
Table 15.	PCB field of the I-Block format	
Table 16.	C-APDU format	
Table 17.	R-APDU format	
Table 18.	R-Block format	
Table 19.	R-Block detailed format	
Table 20.	S-Block format	
Table 21.	S-Block detailed format	
Table 22.	Command set overview	
Table 23.	Status code of the M24SR64-Y	
Table 24.	Error code of the M24SR64-Y	
Table 25.	C-APDU of the NDEF Tag Application Select command	
Table 26.	R-APDU of the NDEF Tag Application Select command	
Table 27.	C-APDU of the Capability Container Select command	
Table 28.	R-APDU of the Capability Container Select command	
Table 29.	C-APDU of the NDEF Select command	
Table 30.	R-APDU of the NDEF Select command	
Table 31.	C-APDU of the System File Select command	
Table 32.	R-APDU of the System File Select command	
Table 33.	C-APDU of the ReadBinary command	
Table 34.	R-APDU of the ReadBinary command	
Table 35.	C-APDU of the UpdateBinary command	
Table 36.	R-APDU of the UpdateBinary command	
Table 37.	Verify command format	
Table 38.	R-APDU of the Verify command	44
Table 39.	Change reference data command format	
Table 40.	R-APDU of the Change Reference Data command	
Table 41.	Enable Verification Requirement command format	
Table 42.	R-APDU of the Enable Verification Requirement command	
Table 43.	Disable Verification Requirement command format	
Table 44.	R-APDU of the Disable Verification Requirement command	
Table 45.	C-APDU of the ExtendedReadBinary command	
Table 46.	R-APDU of the ExtendedReadBinary command	
Table 47.	EnablePermanentState command format.	
Table 48		4Q



M24SR64-Y List of tables

Table 49.	DisablePermanentState command format	49
Table 50.	R-APDU of the DisablePermanentState command	
Table 51.	UpdateFileType command format	50
Table 52.	R-APDU of the UpdateFileType command	
Table 53.	SendInterrupt command format	
Table 54.	R-APDU of the SendInterrupt command	
Table 55.	StateControl command format	
Table 56.	R-APDU of the StateControl command	
Table 57.	Commands issues by the RF host	
Table 58.	RATS command	
Table 59.	Conversion from FDSI to FSD	
Table 60.	ATS response	
Table 61.	PPS command	
Table 62.	Ascending and descending data rate coding	
Table 63.	PPS response	
Table 64.	Specific I <sup>2</sup> C commands	
Table 65.	GetI2Csession command format	
Table 66.	KillRFsession command format	
Table 67.	I2C device address format	59
Table 68.	I <sup>2</sup> C frame format	60
Table 69.	I2C host to M24SR64-Y	60
Table 70.	M24SR64-Y to I2C host	60
Table 71.	UID format	65
Table 72.	Absolute maximum ratings	66
Table 73.	I <sup>2</sup> C operating conditions	67
Table 74.	AC test measurement conditions	67
Table 75.	Input parameters	67
Table 76.	I <sup>2</sup> C DC characteristics	68
Table 77.	I <sup>2</sup> C AC characteristics (400 kHz)	69
Table 78.	I <sup>2</sup> C AC characteristics (1 MHz)	70
Table 79.	Device select code	73
Table 80.	GPO timings measurement	74
Table 81.	Default operating conditions	76
Table 82.	RF characteristics	76
Table 83.	SO8N - 8-lead plastic small outline, 150 mils body width,	
	package data	77
Table 84.	TSSOP8 - 8-lead thin shrink small outline, 169 mils width,	
	package data	78
Table 85.	UFDFPN8 - 8-lead ultra thin fine pitch dual flat package, no lead,	
	package data	80
Table 86.	Ordering information scheme for packaged devices	
Table 87	Document revision history	82



List of figures M24SR64-Y

# List of figures

Figure 1.	M24SR64-Y block diagram	9
Figure 2.	8-pin package connections	
Figure 3.	GPO configured as Session Open (GPO field = 0xX1 or 0x1X)	14
Figure 4.	GPO configured as WIP (GPO field = 0xX2 or 0x2X)	15
Figure 5.	GPO configured as I <sup>2</sup> C answer ready (GPO field = 0xX3)	16
Figure 6.	GPO configured as MIP (GPO field = 0x3X)	17
Figure 7.	GPO configured as INT (GPO field = 0xX4 or 0x4X)	18
Figure 8.	GPO configured as State Control (GPO field = 0xX5 or 0x5X)	19
Figure 9.	GPO configured as RF busy (GPO field = 0x6X)	20
Figure 10.	Changing the read access right to an NDEF file	26
Figure 11.	Changing the write access right to an NDEF file	27
Figure 12.	Command and response exchange	57
Figure 13.	I <sup>2</sup> C timeout on Start condition	58
Figure 14.	NDEF tag Application Select command	61
Figure 15.	AC test measurement I/O waveform	67
Figure 16.	I <sup>2</sup> C AC waveforms	
Figure 17.	Maximum Rbus value with fC = 400 kHz	71
Figure 18.	Maximum Rbus value with fC = 1 MHz	72
Figure 19.	I2C bus protocol	
Figure 20.	SO8N - 8-lead plastic small outline, 150 mils body width, package outline	77
Figure 21.	TSSOP8 - 8-lead thin shrink small outline, package outline	78
Figure 22.	UFDFPN8 - 8-lead ultra thin fine pitch dual flat package, no lead, 2x3 mm,	
	package outline.	79

8/85 DocID023790 Rev 10

# 1 Functional description

The M24SR64-Y device is a dynamic NFC/RFID tag that can be accessed either from the I<sup>2</sup>C or the RF interface. The RF and I<sup>2</sup>C host can read or write to the same memory, that is why only one host can communicate at a time with the M24SR64-Y. The management of the interface selection is controlled by the M24SR64-Y device itself.

The RF interface is based on the ISO/IEC 14443 Type A standard. The M24SR64-Y is compatible with the NFC Forum Type 4 Tag specifications and supports all corresponding commands.

The I<sup>2</sup>C interface uses a two-wire serial interface consisting of a bidirectional data line and a clock line. The devices carry a built-in 4-bit device type identifier code in accordance with the I<sup>2</sup>C bus definition.

The device behaves as a slave in the I<sup>2</sup>C protocol.

Figure 1 displays the block diagram of the M24SR64-Y device.

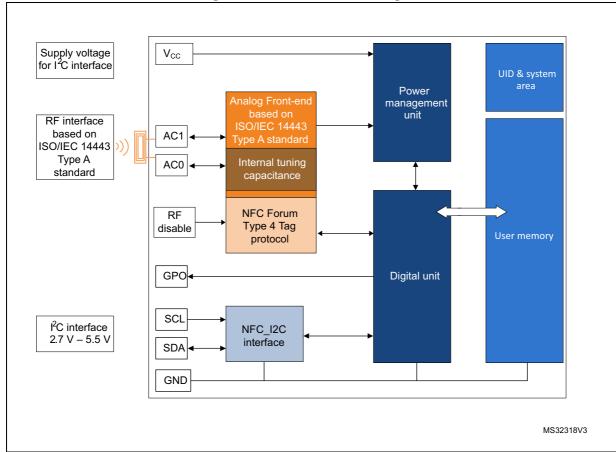



Figure 1. M24SR64-Y block diagram

Signal name	Function	Direction	
SDA	Serial data	I/O	
SCL	Serial clock	Input	
AC0, AC1	Antenna coils	-	
V <sub>CC</sub>	Supply voltage	-	
VSS	Ground	-	
GPO	Interrupt output (1)	Open drain output	
RF disable	Disable the RF communication (2)	Input	

Table 1. Signal names

- 1. An external pull-up > 4.7 k $\Omega$  is required.
- 2. An external pull-down is required when the voltage on  $V_{\text{cc}}$  is above its POR level.

Figure 2. 8-pin package connections



1. See Package mechanical data section for package dimensions, and how to identify pin 1.

### 1.1 Functional modes

The M24SR64-Y has two functional modes available. The difference between the modes lies in the power supply source (see *Table 2*).

Table 2. Functional modes

Modes	Supply source	Comments
I <sup>2</sup> C mode	V <sub>cc</sub>	The I <sup>2</sup> C interface is available
Tag mode	RF field only	The I <sup>2</sup> C interface is disconnected
Dual interface mode	RF field or V <sub>cc</sub>	Both I <sup>2</sup> C and RF interfaces are available

# 1.1.1 I<sup>2</sup>C mode

M24SR64-Y is powered by  $V_{CC}$ . The I<sup>2</sup>C interface is connected to the M24SR64-Y. The I<sup>2</sup>C host can communicate with the M24SR64-Y device.

### 1.1.2 Tag mode

The M24SR64-Y is supplied by the RF field and can communicate with an RF host (RFID reader or an NFC phone). The User memory can only be accessed by the RF commands.

10/85 DocID023790 Rev 10

### 1.1.3 Dual interface mode

Both interfaces, RF and  $I^2C$ , are connected to the M24SR64-Y and both RF or  $I^2C$  host can communicate with the M24SR64-Y device. The power supply and the access management are carried out by the M24SR64-Y itself. For further details, please refer to the token mechanism chapter.

Signal descriptions M24SR64-Y

# 2 Signal descriptions

### 2.1 Serial clock (SCL)

This input signal is used to strobe all data in and out of the device. In applications where this signal is used by slave devices to synchronize the bus to a slower clock, the bus master must have an open drain output, and a pull-up resistor must be connected from Serial clock (SCL) to V<sub>CC</sub>. (*Figure 17* indicates how the value of the pull-up resistor can be calculated).

In most applications, though, this method of synchronization is not employed, and so the pull-up resistor is not necessary, provided that the bus master has a push-pull (rather than open drain) output.

# 2.2 Serial data (SDA)

This bidirectional signal is used to transfer data in or out of the device. It is an open drain output that may be wire-OR'ed with other open drain or open collector signals on the bus. A pull-up resistor must be connected from Serial data (SDA) to  $V_{CC}$ . (*Figure 17* indicates how the value of the pull-up resistor can be calculated).

# 2.3 Antenna coil (AC0, AC1)

These inputs are used to connect the device to an external coil exclusively. It is advised not to connect any other DC or AC path to AC0 or AC1.

When correctly tuned, the coil is used to access the device using NFC Forum Type 4 commands.

# 2.4 Ground (V<sub>SS</sub>)

 $V_{SS}$ , when connected, is the reference for the  $V_{CC}$  supply voltage for all pads, even AC0 and AC1.

# 2.5 Supply voltage (V<sub>CC</sub>)

This pin can be connected to an external DC supply voltage.

Note: An internal voltage regulator allows the external voltage applied on  $V_{CC}$  to supply the M24SR64-Y.

## 2.5.1 Operating supply voltage V<sub>CC</sub>

Prior to selecting the M24SR64-Y and issuing instructions to it, a valid and stable  $V_{CC}$  voltage within the specified [ $V_{CC}$ (min),  $V_{CC}$ (max)] range must be applied. To maintain a stable DC supply voltage, it is recommended to decouple the  $V_{CC}$  line with suitable capacitors (usually of the order of 10 nF and 100 pF) close to the  $V_{CC}/V_{SS}$  package pins.

This voltage must remain stable and valid until the end of the transmission of the instruction and, for a writing instruction (UpdateBinary, ChangeReferenceData,

M24SR64-Y Signal descriptions

EnableVerificationRequirement, DisableVerificationRequirement, EnablePermanentState, DisablePermanentState, until the completion of the internal I<sup>2</sup>C write cycle (t<sub>W</sub>).

#### 2.5.2 Power-up conditions

When the power supply is turned on,  $V_{CC}$  rises from  $V_{SS}$  to  $V_{CC}$ . The  $V_{CC}$  rise time must not vary faster than  $1V/\mu s$ .

#### 2.5.3 Device reset in I<sup>2</sup>C mode

In order to prevent inadvertent write operations during power-up, a power-on reset (POR) circuit is included. At power-up (continuous rise of  $V_{CC}$ ), the M24SR64-Y does not respond to any I²C instruction until  $V_{CC}$  has reached the power-on reset threshold voltage (this threshold is lower than the minimum  $V_{CC}$  operating voltage defined). When  $V_{CC}$  passes over the POR threshold, the device is reset and enters the Standby power mode. However, the device must not be accessed until  $V_{CC}$  has reached a valid and stable  $V_{CC}$  voltage within the specified  $[V_{CC}(\text{min}),\,V_{CC}(\text{max})]$  range.

In a similar way, during power-down (continuous decrease in  $V_{CC}$ ), as soon as  $V_{CC}$  drops below the power-on reset threshold voltage, the M24SR64-Y stops responding to any instruction sent to it.

#### 2.5.4 Power-down conditions

During power-down (continuous decay of  $V_{CC}$ ), the M24SR64-Y must be in Standby power mode (mode reached after decoding a Stop condition, assuming that there is no internal operation in progress).

### 2.6 RF disable

This input signal is used to disable the RF communication. When the voltage on the  $V_{CC}$  pin is below the POR level or not connected, an internal pull-down resistor is connected on this pad. Thus, the RF disable pad is maintained to the low level and the RF analog front end is activated. When the voltage on the  $V_{CC}$  pin is higher than the POR level, the I²C host shall set this pin to enable or disable the RF communication. In Dual interface mode, RF disable must not be left floating.

# 2.7 General purpose output (GPO)

The GPO pad is an open drain pad and a external pull-up resistor shall be connected to it. This pad is a configurable output signal. On delivery, GPO is configured as Session opened. Its behavior is consistent with the  $I^2C$  or RF session activated and with the mode chosen by the user. The GPO pad is enable when an RF or an  $I^2C$  session is open. When neither an RF nor an  $I^2C$  session is open, the GPO is high impedance.

Signal descriptions M24SR64-Y

The user can select one of these configurations<sup>(a)</sup>:

- SessionOpen: an RF or I<sup>2</sup>C session is ongoing.
- MIP (NDEF Message updating In Progress): the RF host is writing an NDEF length different from 0x0000. This mode can be used to detect when the RF host changes the NDEF message as defined by the NFC Forum.
- WIP (Writing In Progress): the M24SR64-Y is executing a writing operation.
- INT (interrupt): the I<sup>2</sup>C or RF host can force the M24SR64-Y to send a negative pulse on the GPO pin.
- I<sup>2</sup>C ready response: an I<sup>2</sup>C response is ready to be read by the I<sup>2</sup>C host.
- State mode: the I<sup>2</sup>C or RF host can control the state of the GPO pad during the RF session.
- RF busy: an RF host is communicating with the M24SR64-Y.

### 2.7.1 Session Open configuration (GPO field = 0xX1 or 0x1X)

When the GPO is configured as "Session Open", it goes to the Low state when an RF or I<sup>2</sup>C session is ongoing (see *Figure 3*).

An RF session is taken when M24SR64-Y receives a valid Select Application. The session is released after M24SR64-Y has received a valid Deselect command, if M24SR64-Y has received a Kill RF session command in I<sup>2</sup>C or when the RF field became OFF.

An I<sup>2</sup>C session is taken when M24SR64-Y receives a valid Get session command or a valid Kill RF session command. The session is released after M24SR64-Y has received a valid Deselect command or after a Power Off.

GPO is driven low after a delay (1) or (3) when the session is open.

GPO is released after a delay (2) or (4) when the session is released.

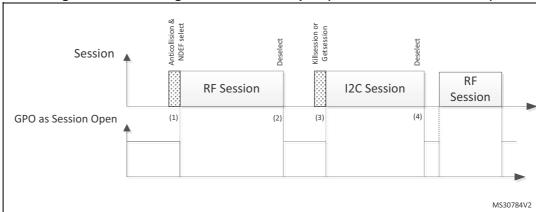


Figure 3. GPO configured as Session Open (GPO field = 0xX1 or 0x1X)

- 1. CmdEOFtoGPlow (RF command End of frame to GPORF Session pad low)
- 2. CmdEOFtoGPHZ (RF command End of frame to GPORF Session pad HZ)
- 3. CmdSTPtoGPlow (I2C command stop to GPO low)
- 4. AnswerlbLBtoGPHZ (I2C answer last bit of last byte to GPO HZ)

a. See Table 80 for more details.

M24SR64-Y Signal descriptions

### 2.7.2 WIP Writing in Progress configuration (GPO field = 0xX2 or 0x2X)

When the GPO is configured as "WIP", it goes to the Low state during an  $I^2C$  or RF writing operation.

During an RF or I<sup>2</sup>C session, when M24SR64-Y updates a file, GPO is driven low after a delay (1) or (3) following the beginning of the correspondent UpdateBinary command execution.

GPO will remain low during the writing time (2) or (4), before being released.

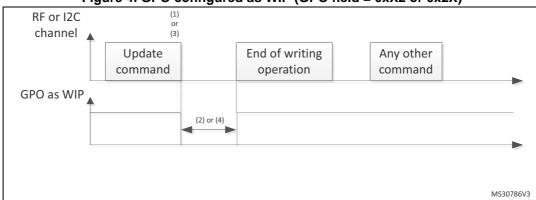


Figure 4. GPO configured as WIP (GPO field = 0xX2 or 0x2X)

- 1. CmdSTPtoGPlow (I2C Command Stop to GPO low)
- 2. Writing time duration
- 3. CmdEOFtoGPlow (RF Command End of frame to GPO low)
- 4. Writing time duration

Signal descriptions M24SR64-Y


# 2.7.3 $I^2C$ answer ready configuration (GPO field = 0xX3)

When the GPO is configured as I<sup>2</sup>C answer ready, it goes to the Low state when the M24SR64-Y has finished to treat the I<sup>2</sup>C command and is ready to send the I<sup>2</sup>C response.

During an  $I^2C$  session, after receiving a valid  $I^2C$  command, GPO pin is driven low after a delay when M24SR64-Y is ready to deliver a response on the  $I^2C$  bus.

GPO is released when M24SR64-Y receives a new command.

Figure 5. GPO configured as  $I^2C$  answer ready (GPO field = 0xX3)

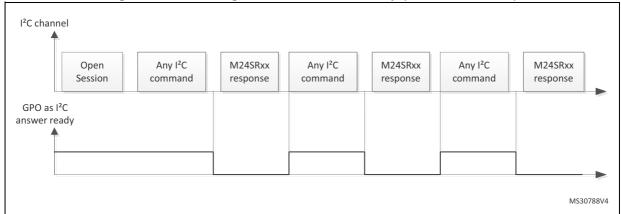

16/85 DocID023790 Rev 10

M24SR64-Y Signal descriptions

# 2.7.4 MIP NDEF Message writing in Progress configuration (GPO field = 0x3X)

When the GPO is configured as MIP, its state goes to the low state when the RF host writes the NDEF length to another value than 0x0000.

During an RF session, when M24SR64-Y changes an NDEF file and updates the NDEF length with a value different from 0x0000, GPO is driven low after a delay (1) following the beginning of the correspondent UpdateBinary command execution.

GPO will remain low during the writing time (2), before being released.

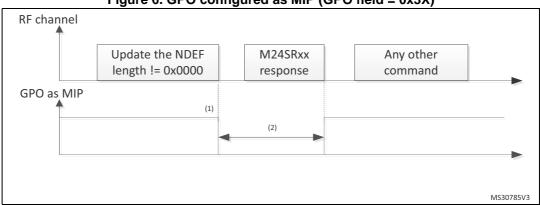


Figure 6. GPO configured as MIP (GPO field = 0x3X)

- 1. CmdEOFtoGPlow (RF command End of frame to GPO low)
- 2. Writing time duration

Signal descriptions M24SR64-Y

### 2.7.5 INT Interrupt configuration (GPO field = 0xX4 or 0x4X)

The I<sup>2</sup>C or RF host can send a negative pulse on the GPO pad. The GPO pad goes to the low state at the end of the command and goes to the high state at the end of the M24SR64-Y response.

During an RF or I<sup>2</sup>C session, when M24SR64-Y receives a valid Interrupt command, M24SR64-Y GPO pin is driven low after (1) or (3) for a duration of (4) in RF, or after responding in I2C (2). Then GPO pin is released.

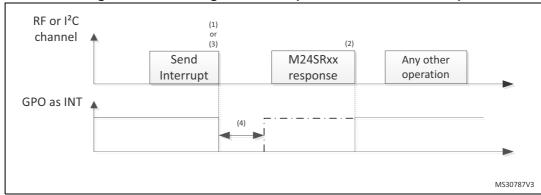


Figure 7. GPO configured as INT (GPO field = 0xX4 or 0x4X)

- 1. CmdSTPtoGPlow (I2C command Stop to GPO low)
- After NewCmdlbFB (new I2C command last bit of first byte) or after AnswerlbFB (I2C answer last bit of first byte)
- 3. CmdEOFtoGPlow (RF command End of frame to GPO low)
- 4. GPO pulse duration

M24SR64-Y Signal descriptions

### 2.7.6 State Control configuration (GPO field = 0xX5 or 0x5X)

When the GPO is configured as State Control, the I<sup>2</sup>C or RF host can control the state of the GPO by sending a dedicated command.

During an RF or I<sup>2</sup>C session, the M24SR64-Y can control the GPO pin. After receiving a valid Set GPO command, GPO pin is driven low after a delay (1) or (3). GPO will be released after a valid Reset command or after a Power off.

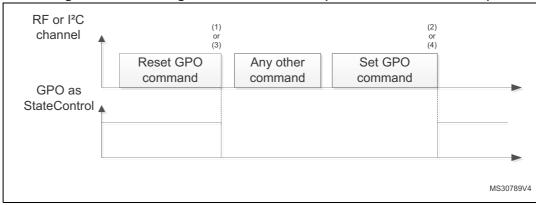


Figure 8. GPO configured as State Control (GPO field = 0xX5 or 0x5X)

- 1. CmdSTPtoGPlow (I2C Set GPO command Stop to GPO low)
- 2. CmdSTPtoGPHZ (I2C Reset GPO command Stop to GPO HZ)
- 3. CmdEOFtoGPlow (RF Set GPO command End of frame to GPO low)
- 4. CmdEOFtoGPHZ (RF Reset GPO command End of frame to GPO HZ)

Signal descriptions M24SR64-Y

### 2.7.7 RF busy configuration (GPO field = 0x6X)

When the GPO is configured as RF busy, the GPO goes to the low state when the M24SR64-Y is processing an RF command or when an RFsession is ongoing.

When an RF field is present, GPO is driven low after a delay (1) when M24SR64-Y detects the first command. If the RF session is ongoing and M24SR64-Y receives a not-supported command, GPO remains low. It will be released only at the end of the RF session, after (2).

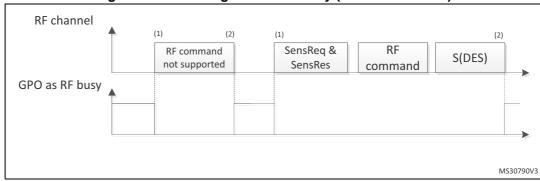


Figure 9. GPO configured as RF busy (GPO field = 0x6X)

- 1. CmdSOFtoGPlow (RF command Start of frame to GPO low)
- 2. CmdEOFtoGPHZ (RF command End of frame to GPO HZ)

# 3 M24SR64-Y memory management

### 3.1 Memory structure

The M24SR64-Y supports the NDEF Tag Application as defined in the NFC Forum Type 4 Tag. The M24SR64-Y is composed of three files:

- One Capability Container file
- One NDEF file
- One System file: this is an ST-proprietary file

The System file contains some information on the configuration of the M24SR64-Y device. The CC file gives some information about the M24SR64-Y itself and the NDEF file. The NDEF file contains the User data.

### 3.1.1 File identifier

The file identifier is the value used in the Select command to select a file.

Table 3. File identifier

File identifier	Meaning
0xE101	System file
0xE103	CC file
0x0001	NDEF file

### 3.1.2 CC file layout

The CC file gives some information about the M24SR64-Y and the NDEF file. This file is a read-only file for the RF or I<sup>2</sup>C host and cannot be modified by issuing a write command.

The T field, Read Access and Write Access fields can be changed by the RF or I<sup>2</sup>C host by issuing a specific process (refer to *Section 8: Functional procedures*).

File offset	Meaning	Value	Comments
0x0000	Number of bytes of CC file	0x000F	15 bytes
0x0002	Mapping version <sup>(1)</sup>	0x20 or 0x10	V 2.0 or V 1.0
0x0003	Maximum number of bytes that can be read	0x00F6	246 bytes
0x0005	Maximum number of bytes that can be written	0x00F6	246 bytes
0x0007		0x04 <sup>(2)</sup>	T field
0x0008		0x06	L field
0x0009		0x0001	FileID
0x000B	NDEF file control TLV	0x2000	Maximum NDEF file size
0x000D		0x00 <sup>(2)</sup>	Read access
0x000E		0x00 <sup>(2)</sup>	Write access

Table 4. CC file layout for 1 NDEF file

### 3.1.3 NDEF file layout

The NDEF file contains the NDEF message which contains the User data. The RF host or the I²C host can read and write data inside the file. The first two bytes named NDEF Message Length define the size of the NDEF message. The NDEF Message Length shall be managed by the application and the M24SR64-Y device does not check if its value is relevant vs the data written by the RF or I²C host. The M24SR64-Y device uses the NDEF Message Length, e. g. the standard read can be processed only inside the NDEF message; otherwise, the M24SR64-Y device returns an error code. For more details about the read command, refer to Section 5.6.7: ReadBinary command.

<sup>1.</sup> According to the reader.

<sup>2.</sup> Delivery state.

Table 5. NDEF file layout

File offset	Byte 0	Byte 1	Byte 2	Byte 3
0x0000	NDEF mes	sage length	User data	User data
0x0004	User data	User data	User data	User data
0x1FFF				User data

# 3.1.4 System file layout

The system file specifies the configuration of the M24SR64-Y. *Table 6* lists the different fields.

Table 6. Field list

File offset	Field name	Number of bytes	Read access	Write access	Delivery state <sup>(1)</sup>
0x0000	Length system file	2	I <sup>2</sup> C or RF	-	0x0012
0x0002	I <sup>2</sup> C protect	1	I <sup>2</sup> C or RF	I <sup>2</sup> C <sup>(2)</sup>	0x01
0x0003	I <sup>2</sup> C watchdog	1	I <sup>2</sup> C or RF	I <sup>2</sup> C <sup>(2)</sup>	0x00
0x0004	GPO	1	I <sup>2</sup> C or RF	I <sup>2</sup> C <sup>(2)</sup>	0x11
0x0005	ST reserved	1	I <sup>2</sup> C or RF	I <sup>2</sup> C <sup>(2)</sup>	0x00
0x0006	RF enable	1	I <sup>2</sup> C or RF	I <sup>2</sup> C <sup>(2)</sup>	0x01
0x0007	NDEF File number (RFU)	1	I <sup>2</sup> C or RF	none	0x00
0x0008	UID	7	I <sup>2</sup> C or RF	none	0x0284 xx xx xx xx xx <sup>(3)</sup>
0x000F	Memory Size	2	I <sup>2</sup> C or RF	none	0x1FFF
0x0011	Product Code	1	I <sup>2</sup> C or RF	none	0x84

3. x values are defined by ST to insure UID unicity.

<sup>2.</sup> The access is granted when the field I<sup>2</sup>C protect is set to the state Unprotected or when the right I<sup>2</sup>C password was correctly received (see Section 3.5: I2C password).

Table 7. Details about the GPO field

File offset	b7	b6-b4	b3	b2-b0
0x0004				
RFU				
When an RF session obtained to the control of the c	ance ened			
RFU			•	
When an I <sup>2</sup> C session 0b000: High impeda 0b001: Session ope	ance			•
0b010: WIP 0b011: I <sup>2</sup> C Answer 0b100: Interrupt 0b101: State Contro	•			
0b110: RFU 0b111: RFU				

Table 8. Details about the RF Session field

File offset	b7	b6-b4	b3-b0
0x0004			
RFU	•		
When an RF session is 0b001: Session opened		•	
RFU			

Table 9 gives some details about the ST reserved field.

Table 9. Details about the ST reserved field

File offset	b7-b0
0x0005	
0x00	

Table 10 gives some details about the RF enable field.

Table 10. Details about the RF enable field

File offset	b7	b6-b4	b3	b2-b1	b0
0x0006					
0: the RF field is 1: the RF field is					
RFU		•			
0: the RF disabl					
RFU				•	
0: the M24SR64-Y does not decode the command received from the RF interface 1: the M24SR64-Y decodes the command received from the RF interface					

<sup>1.</sup> this field is written by the M24SR64-Y.

# 3.2 Read and write access rights to the memory

An NDEF file can be locked for read or write accesses. It is also protected by a 128-bit password that the host shall present before accessing the NDEF file. There are two 128-bit passwords, one for the read access and the other one for the write access.

An NDEF file can be permanently locked for read or write accesses. Thus, the host cannot access the NDEF file.

The read password shall be sent to the M24SR64-Y device before reading a read-locked NDEF file.

The write password shall be present on the M24SR64-Y device before writing a write-locked NDEF file. The write password shall be sent to change the read or write access. The read or write access right is defined for the NDEF file.

### 3.2.1 State of the Read and Write access rights

Two bytes in the CC file are used to define the Read and Write access rights to the NDEF file. For more details, refer to Section 3.1.2: CC file layout.

Table 11. Read access right

Value	Meaning
0x00	Read access without any security
0x80	Locked (1)
0xFE	Read not authorized

<sup>1.</sup> The read password shall be sent before reading in the NDEF file.

Table 12. Write access right

Value	Meaning			
0x00	Write access without any security			
0x80	Locked (1)			
0xFF	Write not authorized			

<sup>1.</sup> The write password shall be sent before writing in the NDEF file.

The state 0xFF and 0xFE cannot be changed by using the Read or Write passwords.

#### 3.2.2 Changing the read access right to NDEF files

The state diagram on *Figure 10* shows how to change the access right to read an NDEF file.

0x00 Lock the NDEF file (1) Unlock the NDEF file (2) Permanently lock the NDEF file (3) 0x80 (4) 0xFE (4) Permanently unlock the NDEF file MS30772V4

Figure 10. Changing the read access right to an NDEF file

- 1. See the procedure to lock the read access (Section 8.4: Locking an NDEF file).
- 2. See the procedure to unlock the read access (Section 8.5: Unlocking an NDEF file).
- 3. See the procedure to permanently lock the read access (Section 8.6: Reaching the read-only state for an
- 4. Proprietary state, not defined by NFC Forum Type 4 Tag.

### 3.2.3 Changing the write access right to NDEF files

The state diagram on Figure 11 shows how to change the write access right to an NDEF file.

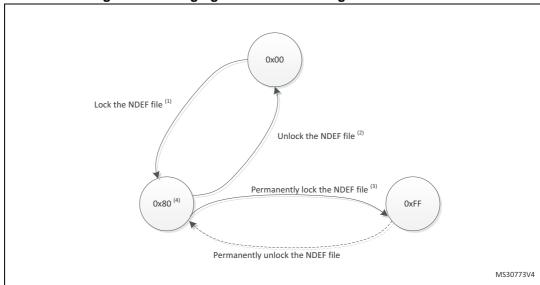


Figure 11. Changing the write access right to an NDEF file

- 1. See the procedure to lock the write access.
- 2. See the procedure to unlock the write access.
- 3. See the procedure to permanently lock the write access (Section 8.6: Reaching the read-only state for an NDEF file).
- 4. Proprietary state, not defined by NFC Forum Type 4 Tag.

# 3.3 Access right life time

The access right life time is validated while the NDEF file is selected or until the end of the RF or I<sup>2</sup>C session. Once the read or write access right is granted, the host can send one or more ReadBinary or UpdateBinary commands.

At the end of a session or when the host selects another file, the read and write access rights are initialized.

# 3.4 NDEF file passwords

The NDEF file passwords protect the read or write access from an RF or I<sup>2</sup>C interface from/to an NDEF file.

Two NDEF file passwords are available for each NDEF file:

- Read password
- Write password

The length of a password is 128 bits (16 bytes).

# 3.5 I<sup>2</sup>C password

The I<sup>2</sup>C password can be sent only by the I<sup>2</sup>C host. It activates the SuperUser rights. The I<sup>2</sup>C host with the SuperUser rights can:

- Access the NDEF file regardless of the right access and without sending the NDEF file passwords.
- Change the access rights regardless of the current state.

The length of the I<sup>2</sup>C password is 128 bits (16 bytes).

### 3.5.1 I<sup>2</sup>C password and I<sup>2</sup>C protect field of the System file

The I<sup>2</sup>C protect field in the system file can be set to:

- 0x00: the I<sup>2</sup>C host has the SuperUser right access without sending the I<sup>2</sup>C password
- 0x01: the I<sup>2</sup>C host has the SuperUser right access after sending the I<sup>2</sup>C password

For more details about the system file layout, refer to Section 3.1.4: System file layout.

# 4 Communication mechanism

This chapter describes the principle of communication between an RF or an I<sup>2</sup>C host and the M24SR64-Y device.

### 4.1 Master and slave

The M24SR64-Y acts as a slave device on either the  $I^2C$ -bus or the RF channel and therefore waits for a command from the  $I^2C$  master or the RF host before sending its response.

The RF host shall generate the RF field and the RF commands.

The I $^2$ C host shall supply the M24SR64-Y through the V $_{CC}$  pin and shall generate the I $^2$ C clock on the SCL pad.

### 4.2 M24SR64-Y session mechanism

The M24SR64-Y is a dynamic NFC/RFID tag which can be accessed either from the RF or I<sup>2</sup>C interface. The M24SR64-Y implements a token system. This token has two possible values, RF or I<sup>2</sup>C. When the token exists and is assigned to one interface (RF or I<sup>2</sup>C), the M24SR64-Y cannot communicate with the other host.

#### 4.2.1 RF token

The token is given to the RF interface once the anticollision is done. The release condition can be either an RF field cut-off, or the reception of the command deselect, or when the I<sup>2</sup>C host sends the KillRFsession.

#### 4.2.2 I<sup>2</sup>C token

The token is given to the I<sup>2</sup>C interface when the I<sup>2</sup>C host has sent the correct device Select. The release condition can be either a power down condition on V<sub>CC</sub> pin or the reception of a command deselect from the I<sup>2</sup>C host, after which M24SR64-Y goes in Standby power mode.

I<sup>2</sup>C and RF command sets M24SR64-Y

### 5 I<sup>2</sup>C and RF command sets

The command sets of the M24SR64-Y can be split in different command families. Most commands are common between the RF and the I<sup>2</sup>C interface. Some commands are specific to the RF interface and some others are specific to the I<sup>2</sup>C interface. This section describes the M24SR64-Y command sets that can be issued by the RF or the I<sup>2</sup>C host.

There are three command families:

- the NFC Forum Type 4 Tag command set
- the ISO/IEC 7816-4 command set
- · the proprietary command set

The NFC Forum Type 4 Tag command set and the ISO/IEC 7816-4 command set use the I-Block format. For more details about the I-Block format, refer to Section 5.2: I-Block format.

Two other command formats exist:

- the commands using the R-Block format
- · the commands using the S-Block format

For more details about these formats, refer to the corresponding sections: Section 5.3: R-Block format and Section 5.4: S-Block format.

This section gives a brief description of the RF and I<sup>2</sup>C host common commands. The format of these command sets is the I-Block format.

Table 13 lists the RF and I<sup>2</sup>C command sets.

Table 13. RF and I<sup>2</sup>C command sets

Family command set	Command name	Class byte	Instruction code	Brief description
	NDEF Tag Application Select	0x00	0xA4	NDEF Tag Application Select
	CC select	0x00	0xA4	Select the CC file
NFC Forum	NDEF select	0x00	0xA4	Select the NDEF file
Type 4 Tag	System select	0x00	0xA4	Select the system file
	ReadBinary	0x00	0xB0	Read data from file
	UpdateBinary	0x00	0xD6	Write or erase data to a NDEF file
	Verify	0x00	0x20	Checks the right access of a NDEF file or sends a password
ISO/IEC 7816-4	ChangeReferenceData	0x00	0x24	Change a Read or write password
	EnableVerificationRequirement	0x00	0x28	Activate the password security
	DisableVerificationRequirement	0x00	0x26	Disable the password security

Family command set	Command name	Class byte	Instruction code	Brief description			
ST Proprietary	EnablePermanentState	0xA2	0x28	Enables the Read Only or Write Only security state			
ST Proprietary	ExtendedReadBinary	0xA2	0xB0	Read data from file			

Table 13. RF and I<sup>2</sup>C command sets (continued)

### 5.1 Structure of the command sets

The exchange of data between the RF or the I<sup>2</sup>C host and the M24SR64-Y uses three kinds of data formats, called blocks:

- I-Block: to exchange the command and the response
- R-Block: to exchange positive or negative acknowledgement
- S-Block: to use either the Deselect command or the Frame Waiting eXtension (WTX) command or response

This section describes the structure of the I-Block, R-block and S-Block. This format is used for the application command set.

#### 5.2 I-Block format

The I-Block is used to exchange data between the RF or the I<sup>2</sup>C host and the M24SR64-Y. It is composed of three fields. *Table 14* details the I-Block format.

SoD **Payload EoD** Name **PCB** DID 0 **CRC** Length 1 byte 1 byte 1 to 251 bytes 2 bytes PCB field DID field (optional) RF or I2C host to M24SR64-Y: C-APDU M24SR64-Y to RF or I2C host: R-APDU 2 CRC bytes

Table 14. I-Block format

I<sup>2</sup>C and RF command sets M24SR64-Y

Table 15. PCB field of the I-Block format

	b7-b6	b5	b4	b3	b2	b1	b0
	0b00	0	0	х	0	1	х
I-Block							
RFU							
Must be set	to 0		•				
DID field, if	bit is set			•			
Must be set	to 0				•		
Must be set	to 1					•	
Block numb	er						

When the RF or I<sup>2</sup>C host sends a command to the M24SR64-Y the format of the payload is the C-APDU.

When the M24SR64-Y sends a command to the RF or I<sup>2</sup>C host, the format of the payload is the R-APDU.

# 5.2.1 C-APDU: payload format of a command

The C-APDU format is used by the RF or the I<sup>2</sup>C host to send a command to the M24SR64-Y. *Table 16* describes its format.

Table 16. C-APDU format

Name	Payload field							
Name	CLA	INS	P1	P2	LC	Data	Le	
Length	1 byte	1 byte	1 byte	1 byte	1 byte	Lc byte	1 byte	
Class byte 0x00: standa 0xA2: ST cor								
Instruction by	/te							
Param Byte	1							
Param Byte 2	2			_				
Number of by	es of the Data field							
Data bytes						•		
Number of by	ytes to be read i	n the M24SR64	1-Y memory				,	

## 5.2.2 R-APDU: payload format of a response

the M24SR64-Y uses the I-Block format to reply to a command which used the I-Block format. This format is described in *Table 17*.

Table 17. R-APDU format

Name	Payload field				
Name	Data (optional)	SW1	SW2		
Length	Le byte	1 byte	1 byte		
Data					
Status byte 1		•			
Status byte 2			•		

### 5.3 R-Block format

The R-Block is used to convey positive or negative acknowledgment between the RF or I<sup>2</sup>C host and the M24SR64-Y.

Table 18. R-Block format

РСВ	CRC
R(ACK) without the DID field: 0xA2 or 0xA3	
R(ACK) with the DID field: 0xAA or 0xAB	2 CRC bytes
R(NAK) without the DID field: 0xB2 0xB3	2 ONG bytes
R(NAK) with the DID field: 0xBA 0xBB	

There are two kinds of R-Blocks:

- R(ACK): the acknowledgement block sent by the RF or I<sup>2</sup>C host or by the M24SR64-Y
- R(NAK): the non-acknowledgement block sent by the RF or I<sup>2</sup>C host or by the M24SR64-Y

I<sup>2</sup>C and RF command sets M24SR64-Y

Table 19. R-Block detailed format

	b7-b6	b5	b4	b3	b2	b1	b0
	0b10	1	х	х	0	0	х
R-Block							
RFU							
0: NAK							
1: ACK							
0: DID field is r 1: DID field is p							
Must be set to	0				•		
RFU						•	
Block number							•

### 5.4 S-Block format

The S-Block is used to exchange control information between a reader and a contactless tag.

Table 20. S-Block format

NFC frame	SoD			EoD
NFC ITAILIE	РСВ	DID	Payload	CRC
Length	1 byte 1 byte		1 to 255 bytes	2 bytes
0xC2: for S(DES) when the 0xCA: for S(DES) when the 0xF2: for S(WTX) when the 0xFA: for S(WTX) when the	e DID field is present e DID field is not present			
DID field (optional)				
WTX field <sup>(1)</sup>				
2 CRC bytes				

<sup>1.</sup> This field is present when b5-b4 bits are set to 0b11 (S-Block is a WTX). see Table 21: S-Block detailed format.

There are two requests using the S-Block format:

- S(DES): the deselect command
- S(WTX): the Waiting Frame eXtension command or response.

A Waiting Time eXtension request occurs, in RF or  $I^2C$ , when the operating time needed by M24SRxx is greater than 9.6 ms.

The WTX field indicates the increase time factor to be used in this command execution (FDTtemp = WTX \* 9.6 ms).

	b7-b6	b5-b4	b3	b2	b1	b0
	0b11	х	Х	0	1	0
S-Block						
0b00: Deselect 0b11: WTX		•				
0: DID field is no 1: DID field is pro						
-				•		
RFU					•	
RFU						•

Note:

After receiving the deselect command, the session is released and M24SR64-Y enters the Standby power mode. In I<sup>2</sup>C, the deselect command is executed only after the host has read the M24SR64-Y deselect command response.

In response to a RATS command, M24SR64-Y returns FWI parameter (default frame waiting time used); when M24SR64-Y needs more time for a command execution, it requests a frame waiting time extension by responding 0xF2 0xWTX (Request waiting time = FWI \* WTX). If the reader accepts M24SR64-Y request, it acknowledges by sending the command 0xF2 0xWTX. The frame waiting time becomes FWI \* WTX for the current command only.

# 5.5 CRC of the I<sup>2</sup>C and RF frame

The two CRC bytes check the data transmission between the RF host or I<sup>2</sup>C host and the M24SR64-Y. For the RF frame, the CRC is computed on all the data bits in the frame, excluding parity bits, SOF and EOF, and the CRC itself.

For the I<sup>2</sup>C frames, the CRC is computed on all data bits of the frame excluding Device select and the CRC itself.

The CRC is as defined in ISO/IEC 13239. The initial register content shall be 0x6363 and the register content shall not be inverted after calculation.

# 5.6 NFC Forum Type 4 Tag protocol

#### 5.6.1 Commands set

With the NFC Forum Type 4 Tag protocol, the commands are common to RF and I<sup>2</sup>C.

I<sup>2</sup>C and RF command sets M24SR64-Y

Table 22. Command set overview

Command name	Brief description
NDEF Tag Application Select	Select the NDEF Tag Application
Capability Container Select	Select the capability container (CC) file using the Select command
NDEF Select	Select the NDEF file
System File Select	Select the system file
ReadBinary	Read data from a file
UpdateBinary	Write new data to a file

### 5.6.2 Status and error codes

This section lists the status and the error code of the M24SR64-Y.

Table 23. Status code of the M24SR64-Y

	SW1	SW2	Comment
Value	0x90	0x00	Command completed successfully

Table 24. Error code of the M24SR64-Y

	SW1	SW2	Comment
Length	1 byte	1 byte	
Value	0x62	0x80	File overflow (Le error)
Value	0x62	0x82	End of file or record reached before reading Le bytes
Value	0x63	0x00	Password is required
Value	0x63	0xCX	Password is incorrect, X further retries allowed (X can take value 0,1, 2)
Value	0x65	0x81	Unsuccessful updating
Value	0x67	0x00	Wrong length
Value	0x69	0x81	Cmd is incompatible with the file structure
Value	0x69	0x82	Security status not satisfied
Value	0x69	0x84	Reference data not usable
Value	0x6A	0x80	Incorrect parameters Le or Lc
Value	0x6A	0x82	File or application not found
Value	0x6A	0x84	File overflow (Lc error)
Value	0x6A	0x86	Incorrect P1 or P2 values

Table 24. Error code of the M24SR64-Y (continued)

	SW1	SW2	Comment
Length	1 byte	1 byte	
Value	0x6D	0x00	INS field not supported
Value	0x6E	0x00	Class not supported

### 5.6.3 NDEF Tag Application Select command

the RF or the I<sup>2</sup>C host shall send this command to activate the NDEF Tag Application.

To activate the NDEF Tag Application, the RF host sends the Select command (see *Table 25*) in addition to the sequence defined in the NFC Forum digital protocol.

To activate the NDEF Tag Application, the I<sup>2</sup>C host sends the Select command (see *Table 25*) in addition to the GetSession or the Kill RF session command.

*Table 25* defines the C-APDU of the Select command to select the NDEF Tag Application (called NDEF Tag Application Select).

Table 25. C-APDU of the NDEF Tag Application Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
Value	0x00	0xA4	0x04	0x00	0x07	0xD27600 00850101	0x00
Class byte							
Select instruct	tion code	•					
P1 field			•				
P2 field				•			
Number of by	tes of data				'		
Application ID	ı					•	
Le field							•

*Table 26* defines the R-APDU of the NDEF Tag Application Select command.

Table 26. R-APDU of the NDEF Tag Application Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	NDEF Tag Application not found
Value	-	0x6D	0x00	Class not supported

### 5.6.4 Capability Container Select command

The RF or I<sup>2</sup>C host uses the Capability Container Select procedure to select the capability container (CC) file.

The CC file is selected when this command returns "command completed" in the R-APDU. *Table 27* defines the C-APDU of the Select command to select the CC file (called Capability Container Select).

Table 27. C-APDU of the Capability Container Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
Value	0x00	0xA4	0x00	0x0C	0x02	0xE103	-
Class byte							
Select instruct	tion code	'					
P1 field							
P2 field				_			
Number of byt	tes of data				1		
CC file ID						1	
-							

Table 28 defines the R-APDU of the CC Select command.

Table 28. R-APDU of the Capability Container Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	File or application not found
Value	-	0x6D	0x00	Class not supported

### 5.6.5 NDEF Select command

The RF or I<sup>2</sup>C host uses the NDEF Select command to select the NDEF file.

The NDEF file is selected when this command returns "command completed" in the R-APDU. *Table 29* defines the C-APDU of the Select command to select the NDEF file (called NDEF Select).

Table 29. C-APDU of the NDEF Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
Value	0x00	0xA4	0x00	0x0C	0x02	0x000X	-
Class byte							
Select instruc	tion code	•					
P1 field							
P2 field							
Number of by	tes of data				1		
0x0001: first N	NDEF file					-	
-							



Table 30 defines the R-APDU of the NDEF Select command.

Table 30. R-APDU of the NDEF Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	File or application not found

### 5.6.6 System File Select command

The RF or I<sup>2</sup>C host uses this command to select the system file.

The System file is selected when this command returns "command completed" in the R-APDU.

*Table 31* defines the C-APDU of the command to select the System file (called System Select).

Table 31. C-APDU of the System File Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
	0x00	0xA4	0x00	0x0C	0x02	0xE101	-
Class byte							
Select instruct	tion code						
P1 field							
P2 field				•			
Number of by	tes of data				•		
System file ID						•	
-							

Table 32 defines the R-APDU of the System File Select command.

Table 32. R-APDU of the System File Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	Capability container not found, no data is returned

### 5.6.7 ReadBinary command

On receiving the ReadBinary command, the M24SR64-Y reads the requested memory field and sends back its value in the R-APDU response.

Before sending a ReadBinary command, a file shall be selected by using a Select command.

The Response of the ReadBinary command is successful when the data to be read is within the selected file <sup>(a)</sup>; in other words, when the sum of P1-P2 and Le fields is equal to or lower than the selected file length.

Table 33 defines the ReadBinary command.

Table 33. C-APDU of the ReadBinary command

				•		
Name	CLA	INS	P1 & P2	Lc	Data	Le
	0x00	0xB0	2 bytes	-	-	1 byte
Class byte						
Read instructi	ion code	•				
Offset in the f	ile selected		_			
-				,		
-					•	
-	tes to read bet ax(Selected Fil		5)			1

Table 34 defines the R-APDU of the ReadBinary command.

Table 34. R-APDU of the ReadBinary command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	Content read	0x90	0x00	Command completed
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6E	0x00	Class not supported

### 5.6.8 UpdateBinary command

On receiving the UpdateBinary command, the M24SR64-Y writes the data field into the selected file and sends back a status in the R-APDU response. If needed, M24SR will request a timing extension (see Section 5.4).

Before sending an UpdateBinary command, a file shall be selected by issuing a Select command.

Table 35 defines the UpdateBinary command.

a. For more details about CC file, refer to Section 3.1.2: CC file layout. For more details about NDEF file, refer to Section 3.1.3: NDEF file layout. For more details about System file, refer to Section 3.1.4: System file layout.



Table 35. C-APDU of the UpdateBinary command

Name CLA INS P1 & P2 Lc Data
0x00 0xD6 2 bytes 1 byte Lc bytes
Class byte
Write instruction code
Offset in the file selected
Number of bytes of data (0x01 ≤Lc ≤0xF6)
Data to write in the M24SR64-Y memory
-

*Table 36* defines the R-APDU of the UpdateBinary command.

Table 36. R-APDU of the UpdateBinary command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x65	0x81	Unsuccessful updating
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6E	0x00	Class not supported

Note: For further return codes and definitions, refer to Status and error codes.

### **5.7 ISO/IEC 7816-4 commands**

The ISO/IEC 7816-4 command set offers some extended features such as the protection of the NDEF file. This command set is used to manage the right access of the NDEF file.

### 5.7.1 Verify command

The Verify command has two functions:

- 1. Check if a password is required to access to the NDEF file (the LC field = 0x00).
- 2. Check that the password embedded in the Verify command allows the access to the memory (the Lc field = 0x10 and the password is present).

When the Lc field if equal to 0x00, the verify command returns a success code (0x90 00) provided that the access to the NDEF file does not require a password. When the access to the NDEF file is protected, the response to the Verify command returns an error code (0x63 00).

When the Lc field equals 0x10, on receiving the Verify command, the M24SR64-Y compares the requested password with the data contained in the request and reports whether the operation has been successful in the response.

Before sending this command, an NDEF file shall be selected by issuing the NDEF Select command. Thus, this command checks the right access condition of the last NDEF file selected.

After a successful command, an access is granted for the whole NDEF file.

Table 37 defines the Verify command.

Table 37. Verify command format

Name	CLA	INS	P1 & P2	Lc	Data	Le	
	0x00	0x20	2 bytes	1 byte	Lc bytes	-	
Class byte							
Instruction co	de						
0x0002: Write	ntification I NDEF passwo NDEF passwo assword transr	ord transmit					
0x00: the password is not present 0x10: the password is present in the data field							
Password -							

<sup>1.</sup> This code can only be issued by the I<sup>2</sup>C host.

Table 38 defines the R-APDU of the Verify command.

Table 38. R-APDU of the Verify command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the password is correct
Value	-	0x69	0x85	The conditions of use are not satisfied (e.g. no NDEF file was selected)
Value	-	0x69	0x81	Cmd incompatible with file structure
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	Incorrect parameter in cmd data field
Value	-	0x63	0x00	A password is required
Value	-	0x63	0xCX <sup>(1)</sup>	The password transmitted is incorrect and X encodes the number of further allowed retries.
Value	-	0x6E	0x00	Class not supported

<sup>1.</sup> At each session, the RF or I<sup>2</sup>C host can check a password 3 times.

### 5.7.2 Change Reference Data command

The Change Reference Data command replaces the read or write password related to the NDEF files previously selected. It can be performed only if the security status satisfies the security attributes for this command.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the reference data of the NDEF file.

Table 39 defines the Change Reference Data command.

Table 39. Change reference data command format

Name	CLA	INS	P1 & P2	Lc	Data	Le		
	0x00	0x24	2 bytes	1 byte	Lc bytes	-		
Class byte								
Instruction co	de							
0x0002: Write	ntification   password tran   password tran   assword transr	smit	•					
0x10: the password is present in the data field								
NDEF file or I <sup>2</sup> C Password								
-								

<sup>1.</sup> This code can only be issued by the I<sup>2</sup>C host.

*Table 40* defines the R-APDU of the Change Reference Data command.

Table 40. R-APDU of the Change Reference Data command

	Data	SW1	SW2	Comment
Length	0	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the access right has been changed
Value	-	0x69	0x81	Cmd is incompatible with the file structure
Value	-	0x65	0x81	Unsuccessful updating
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values
Value	-	0x6E	0x00	Class not supported

### 5.7.3 Enable Verification Requirement command

The Enable Verification Requirement command activates the protection by password of the NDEF file. When this command is successful, the read or write access to the NDEF file is protected by a 128-bit password. It can be performed only if the security status satisfies the security attributes for this command.

This command can update the right access of the NDEF file by writing into the EEPROM. In this case, the response timing will be around 5 ms.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the access right of the NDEF file.

Table 41 defines the Enable Verification requirement command.

Table 41. Enable Verification Requirement command format

Name	CLA	INS	P1 & P2	Lc	Data	Le	
	0x00	0x28	2 bytes	-	-	-	
Class byte							
Instruction co	de						
	attributes lle the read pro lle the write pro						
-							
-	<u>-</u>	<u>-</u>	<u>-</u>				
-							

The last five bits identify the password sent in the Verify command.

Table 42 defines the R-APDU of the Enable Verification Requirement command.

Table 42. R-APDU of the Enable Verification Requirement command

	Data	SW1	SW2	Comment
Length	0	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the password is correct
Value	-	0x69	0x81	Cmd is incompatible with the file structure
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

### 5.7.4 Disable Verification Requirement command

The Disable Requirement command deactivates the protection by password of the NDEF file. When this command is successful, the read or write access to the NDEF file is granted without security requirements. It can be performed only if the security status satisfies the security attributes for this command.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the access right of the NDEF file.

This command can update the right access of the NDEF file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

*Table 43* defines the Disable Verification Requirement command.

Table 43. Disable Verification Requirement command format

Name	CLA	INS	P1 & P2	Lc	Data	Le
	0x00	0x26	2 bytes	-	-	-
Class byte						
Instruction co	de					
	attributes ble the read pro ble the write pro					
-						
-	·	·	·			
-						

*Table 44* defines the R-APDU of the Disable Verification Requirement command.

Data SW<sub>1</sub> SW<sub>2</sub> Comment Length 0 1 byte 1 byte 0x00 Command completed, the password is correct Value 0x90 Value 0x69 0x81 Cmd is incompatible with the file structure Value 0x69 0x82 Security status not satisfied Value 0x6A 0x80 CC file or System file selected Value 0x6A 0x82 File or application not found Value 0x6A 0x86 Incorrect P1 or P2 values Value 0x6E 0x00 Class not supported Value 0x65 0x81 Update failed

Table 44. R-APDU of the Disable Verification Requirement command

### 5.8 ST Proprietary command set

The RF or I<sup>2</sup>C host can be issued with the command set described in this chapter.

### 5.8.1 ExtendedReadBinary command

On receiving the ExtendedReadBinary command, the M24SR64-Y reads the requested memory field and sends back its value in the R-APDU response.

Before sending an ExtendedReadBinary command, a file shall be selected by issuing an NDEF select command.

The response of the ExtendedReadBinary command will be successful even if the data to be read is beyond the NDEF message. The command returns an error code if the data to be read goes beyond the end of the file.

Table 45. C-APDU of the ExtendedReadBinary command

Name	CLA	INS	P1 & P2	Lc	Data	Le			
Length	0xA2	0xB0	2 bytes	-	-	1 byte			
ST Class byte	;								
Read instructi	on code								
Offset in the file selected									
-	-								
-	-								
-									
Number of bytes to read between 0x01 ⊴_e ⊴0xF6									

Table 46 defines the R-APDU of the read binary command.

Table 46. R-APDU of the ExtendedReadBinary command

	Data	SW1	SW2	comment
Length	Le bytes	1 byte	1 byte	-
Value	Content read	0x90	0x00	Command completed
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values
Value	-	0x6E	0x00	Class not supported

### 5.8.2 EnablePermanentState command

The command configures the NDEF file to the ReadOnly or to the WriteOnly State.

This command can update the right access to the NDEF file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

Table 47 defines the EnablePermanentState requirement command.

Table 47. EnablePermanentState command format

Name	CLA	INS	P1 & P2	Lc	Data	Le		
Length	0xA2	0x28	2 bytes	-	-	-		
Class byte								
Instruction co	de	•						
	attributes lle the read pro lle the write pro							
-								
-	-							
-								
-								

Table 48 defines the R-APDU of the EnablePermanentState command.

Table 48. R-APDU table of the EnablePermanentState command

	Data	SW1	SW2	comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x65	0x81	Update failed
Value	-	0x67	0x00	Wrong length

Data SW<sub>1</sub> SW<sub>2</sub> comment Value 0x69 0x82 Security status not satisfied Value 0x6A 0x80 CC file or System file selected Value 0x6A 0x82 File or application not found Value Incorrect P1 or P2 values 0x6A 0x86

0x00

Class not supported

Table 48. R-APDU table of the EnablePermanentState command (continued)

### 5.8.3 DisablePermanentState command

Value

The command configures the NDEF file to the Lock state.

This command can update the right access of the NDEF file by writing into the EEPROM. In this case, the response timing will be around 6 ms. This command is only valid in I<sup>2</sup>C. The SuperUser rights must have been granted to execute the command.

Before sending this command, an NDEF file shall be selected by issuing the NDEF Select command.

*Table 49* defines the DisablePermanentState requirement command.

0x6E

Table 49. DisablePermanentState command format

Name	CLA	INS	P1 & P2	Lc	Data	Le
Length	0xA2	0x26	2 bytes	-	-	-
Class byte						
Instruction co	de	•				
	attributes ble the read pro					
-						
-						
-						-

Table 50 defines the R-APDU of the DisablePermanentState command.

Table 50. R-APDU of the DisablePermanentState command

	Data	SW1	SW2	comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x65	0x81	Update failed
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied

Table 50. R-APDU of the DisablePermanentState command (continued)

	Data	SW1	SW2	comment
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values
Value	-	0x6E	0x00	Class not supported

### 5.8.4 UpdateFileType command

This command allows to modify the file type of a selected file to Proprietary file (0x05) or NDEF file (0x04).

This command is granted only, when application and file are selected and if the file length and access right have previously been set to 0X00h (message invalid, all access rights granted).

This command will update the file type located in the CC file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

Table 51 defines the UpdateFileType command.

Table 51. UpdateFileType command format

Name	CLA	INS	P1	P2	Lc	Data	Le
Value	0xA2	0xD6	0x00	0x00	0x01	0x04 or 0x05	-
Class byte							
Select instru	uction code	•					
P1 field			•				
P2 field				•			
Number of b	ytes of data				1		
File type						1	
-							ı

Table 52 describes the R-APDU of the UpdateFileType command.

Table 52. R-APDU of the UpdateFileType command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

### 5.8.5 SendInterrupt command

On receiving the SendInterrupt command, the M24SR64-Y generates a negative pulse on the GPO pin. It starts at the end of the command and ends at the end of the RF response.

Before sending this command, the system file shall be selected by issuing the System Select command.

Table 53 defines the SendInterrupt command.

Table 53. SendInterrupt command format

	CLA	INS	P1&P2	Lc	Data	Le
Length	1 byte	1 byte	2 bytes	1 byte	-	-
Value	0xA2	0xD6	0x001E	0x00	-	-

Table 54 describes the R-APDU of the SendInterrupt command.

Table 54. R-APDU of the SendInterrupt command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	The interrupt has been sent
Value	-	0x6A	0x80	The GPO is not configured as an interrupt mode
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values
Value	-	0x6E	0x00	Class not supported

### 5.8.6 StateControl command

On receiving the StateControl command with reset value: data 0x00, the M24SR64-Y drives the GPO pin low. On receiving the StateControl command with set value: data 0x01, the M24SR64-Y releases the GPO pin which returns to HZ.

Before sending this command, the system file shall be selected by issuing the System Select command.

Table 55 defines the State Control command.

Table 55. StateControl command format

	CLA	INS	P1&P2	Lc	Data	Le
Length	1 byte	1 byte	2 bytes	1 byte	-	-
Reset value	0xA2	0xD6	0x001F	0x01	0x00	-
Set value	0xA2	0xD6	0x001F	0x01	0x01	-

SW<sub>2</sub> Data SW1 Comment Length 1 byte 1 byte 0x90 0x00 The set or reset has been sent Value Value 0x6A 0x80 The GPO is not configured in StateControl mode Value 0x6A 0x82 File or application not found Value 0x6A 0x86 Incorrect P1 or P2 values Value 0x6E 0x00 Class not supported

Table 56. R-APDU of the StateControl command

## 5.9 Specific RF command set

This section describes the command set that can be issued only by the RF host.

### 5.9.1 Anticollision command set

*Table 57* lists the commands that can be issued only by the RF host. The format of these commands is described in the NFC Forum Digital Protocol specification.

	· · · · · · · · · · · · · · · · · · ·	
Family command set	Command name	Instruction code
	ALL_REQ	0x52 <sup>(1)</sup>
	SENS_REQ	0x26 <sup>(1)</sup>
NFC-A technology	SDD_REQ	0x93 or 0x95 or 0x97
	SEL_REQ	0x93 or 0x95 or 0x97
	SLP_REQ	0x50

Table 57. Commands issues by the RF host

### 5.9.2 RATS command and ATS response

RATS command and ATS response are used for NFC Forum Type 4A Tag Platform Device Activation (as defined in NFC Forum Digital Protocol specification).

*Table 58* details the RATS command. This command shall be sent after the anticollision process.

<sup>1.</sup> Code on 7 bits.

### Table 58. RATS command

Name	INS	Par	CRC	
Byte field	0xE0	1 b	2 bytes	
Bit field		b7-b4	b3-b0	
Instruction code				
FSDI		•		
DID (0 ≤DID ≤14)			•	
2 CRC bytes				•

The FSDI field codes the FSD that defines the maximum size that an RF or I<sup>2</sup>C host is able to receive. *Table 59* gives the conversion from FDSI to FSD.

Table 59. Conversion from FDSI to FSD

FSDI	0x0	0x1	0x2	0x3	0x4	0x5	0x6	0x7	0x8	0x9h- 0xE	0xF
FSD	16	24	32	40	48	64	96	128	256	RFU	256

The DID field defines the value of the addressed M24SR64-Y.

Table 60. ATS response

Name	TL	ТО	TA(1)	TB(1)		TC(1)	CRC
Byte field	0x05	0x78	1 byte	1 byte		0x02	2 bytes
Bit field				b8-b5	b4-b1		
Length of the	ATS response						
FSCI = 256 by	ytes						
The maximum	n ascending dat	a rate is 106 k	bps				
The maximum	n descending da	ata rate is 106	kbps				
FWI field (9.6	ms when TB =	0x50)					
SFGI field (302 µs when TB = 0x50)					•		
The DID is su	pported						
2 CRC bytes							'

The FSCI codes the FSC which stands for the maximum frame size that the M24SR64-Y is able to receive. The M24SR64-Y is able to receive up to 256 bytes of command. If the RF or I<sup>2</sup>C host sends a command with more than 256 bytes, the M24SR64-Y will not be able to treat the command and will not reply.

The FWI which stands for the Frame Waiting time Integer codes the FWT. This time corresponds to the maximum duration while an RF or I<sup>2</sup>C host shall send before sending the next command.



The SFGI which stands for the Start-up Frame Guard Time is the minimum time that the reader shall wait after receiving the response of the M24SR64-Y.

### 5.9.3 PPS command & response

PPS (Protocol and Parameter Selection) command and response are defined in ISO/IEC 14443-4, in the Protocol Activation of PICC Type A.

The PPS command allows to change the data rates of the ascending (RF host to M24SR64-Y) and descending (M24SR64-Y to RF host) data rates.

PPS0 PPS1 **CRC** Name INS Byte field 0xDX 0x11 1 byte 2 bytes Bit field 0b0000 b3-b2 b1-b0 b7-b4 b3-b0 Instruction code INS DID PPS1 is present **RFU** PPS1 Descending data rate Ascending data rate 2 CRC bytes

Table 61. PPS command

The ascending and descending data rates shall be coded as described in *Table 62*.

Table 62. Ascending and descending data rate coding

Value	0b00	0b01	0b10	0b11
Data rate	106 kbps	RFU	RFU	RFU

When the M24SR64-Y is able to change both data rates, it returns the following response. The data rate of this response is 106 kbps; then, the M24SR64-Y changes the ascending and descending data rates.

*Table 63* gives the details of the PPS response.

Table 63. PPS response

Name	INS	-	PPS0
Byte field	0xDX	-	0x11
Bit field	b8-b5	b4-b1	
Response code			
DID field		•	
2 CRC bytes			•

### 5.10 Specific I<sup>2</sup>C command set

Table 64 lists the commands that can only be issued by the I2C host.

Table 64. Specific I<sup>2</sup>C commands

Command name	Format	Class byte	Instruction code	Brief description
Getl2Csession	-	-	0x26	Open an I <sup>2</sup> C session when the RF session is not ongoing
KillRFsession	-	-	0x52	Kill the RF session and open an I <sup>2</sup> C session

### 5.10.1 Getl2Csession command

The Getl2Csession command opens an I<sup>2</sup>C session if an RF session is not ongoing.

Table 65 defines the Getl2Csession command.

Table 65. GetI2Csession command format

	INS
Length	1 byte
Value	0x26

The GetI2Csession command does not create a reply.

When an RF session is ongoing, the M24SRxx will not acknowledge the command.

When no RF session is ongoing, the M24SRxx will acknowledge the command and open an  $I^2C$  session.

### 5.10.2 KillRFsession command

The KillRFsession command closes the RF session and opens an I<sup>2</sup>C session.

Table 66 defines the KillRFsession command.

Table 66. KillRFsession command format

	INS
Length	1 byte
Value	0x52

The KillRFsession command does not create a reply. The RF session is closed when the device acknowledges the command.

**Caution:** A successful completion of the RF command is not certain.

RF device operation M24SR64-Y

## 6 RF device operation

# 6.1 Anticollision and Device Activation command set for the RF interface

The M24SR64-Y device supports the command set defined in the NFC-A Technology and the Type 4A Tag Platform chapters of the NFC Digital Protocol V1.0 specification.

### 6.2 Open an RFsession

Once the RF host has terminated the anticollision procedure and retrieve the ATS response, it shall send the SelectApplication command. The M24SR64-Y will open an RF session. At this point, the RF host can send the applicative command set and the I²C cannot communicate with the M24SR64-Y without closing first the RF session using the I²C KillRFsession command.

### 6.3 Close an RFsession

The RF host can close the RF session by issuing one of these methods:

- send an S(DES) command
- turn off the RF field

### 6.4 Applicative command set

The applicative command set is composed of the following command sets:

- the NFC Forum Type 4 Tag command set
- the ISO/IEC 7816-4 command set
- the proprietary command set

## 7 I<sup>2</sup>C device operation

The M24SR64-Y device supports the I<sup>2</sup>C protocol. The device that controls the data transfer is known as the bus master, and the other one as the slave device. A data transfer can only be initiated by the bus master, which also provides the serial clock for synchronization. The M24SR64-Y device is a slave in all communications.

## 7.1 I<sup>2</sup>C communication protocol

The I<sup>2</sup>C communication is built on a system of command and reply exchange. The I<sup>2</sup>C host starts the communication by sending a request. Once a valid request is received by the M24SR64-Y device, it carries out an internal operation and creates its answer.

As defined in this document, and except for the GetI2C session and Kill RF session commands, the definition of a valid request is a command with a right CRC value.

*Figure 12* shows an exchange of a command and a response between the I<sup>2</sup>C host and the M24SR64-Y. Once the I<sup>2</sup>C session is open, the I<sup>2</sup>C host can send a command. The command is composed of:

- a Device Select field with the R/W bit set to 0.
- the command field.


The M24SR64-Y acknowledges on the reception of each byte.

Once the M24SR64-Y is ready to send the answer, the I<sup>2</sup>C host shall:

- send a Device Select field with the R/W bit set to 1.
- release the SDA line and send an SCL clock.

The I<sup>2</sup>C host shall acknowledge on the reception of each byte.

Figure 12. Command and response exchange



### Legend:

S is the I<sup>2</sup>C Start bit sequence P is the I<sup>2</sup>C Stop bit sequence R/W is the 8<sup>th</sup> bit of Device Select.

Note:

A restart during a command and response exchange is not supported by the M24SR64-Y.

After a command, the I<sup>2</sup>C host can execute a Polling sequence to determine when the response is available.

Polling sequence: Loop on < START (S) + DeviceSelect with RW=0 + read NACK/ACK + STOP (P) >

The response is available as soon as the M24SR64-Y sends an ACK (host read will a '0').

**I2C** device operation M24SR64-Y

#### 7.2 Start condition

A Start condition is identified by a falling edge of serial data (SDA) while the serial clock (SCL) is stable in the high state. A Start condition must precede any data transfer command. The device continuously monitors (except during an instruction processing) the SDA and the SCL for a Start condition, and does not respond unless one is given.

#### 7.3 Stop condition

A Stop condition is identified by a rising edge of serial data (SDA) while the serial clock (SCL) is stable and driven high. A Stop condition terminates a command between the device and the bus master.

#### 7.4 I<sup>2</sup>C timeout on Start condition

I<sup>2</sup>C communication with the M24SR64-Y starts with a valid Start condition, followed by a device select code.

If the delay between the Start condition and the following rising edge of the Serial Clock (SCL) that samples the most significant of the Device Select exceeds the t<sub>START OUT</sub> time, the I<sup>2</sup>C logic block is reset and further incoming data transfer is ignored until the next valid Start condition.

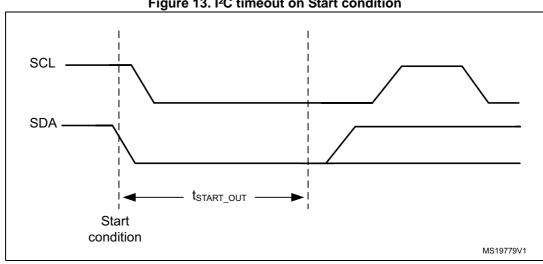


Figure 13. I<sup>2</sup>C timeout on Start condition

#### 7.5 I<sup>2</sup>C timeout on clock period

During a data transfer on the I<sup>2</sup>C bus, the serial clock high pulse width High (t<sub>CHCL</sub>) or serial clock pulse width Low (t<sub>CLCH</sub>) exceeds the maximum value specified in *Table 78*, the I<sup>2</sup>C logic block is reset and any further incoming data transfer is ignored until the next valid Start condition.

### 7.6 Acknowledge bit (ACK)

The acknowledge bit is used to indicate a successful byte transfer. The bus transmitter, whether a bus master or a slave device, releases the serial data (SDA) after sending eight bits of data. During the 9th clock pulse period, the receiver pulls the SDA low to acknowledge the receipt of the eight data bits.

## 7.7 Data input

During data input, the device samples serial data (SDA) on the rising edge of the serial clock (SCL). For a correct device operation, the SDA must be stable during the rising edge of the SCL, and the SDA signal must change only when the SCL is driven low.

### 7.8 I<sup>2</sup>C device address

The device address is the concatenation of the group number coded on 4 bits and the I<sup>2</sup>C address coded on 3 bits, as shown in *Table 67*.

b7-b4 b3 b2 b0 b1 0b1010 1 1 0 0bx Group number E2 bit E1 bit E0 bit 0 = Request 1 = Answer

Table 67. I<sup>2</sup>C device address format

### 7.9 I<sup>2</sup>C frame format

The I<sup>2</sup>C frame is composed of three fields:

- 1. SOD field: contains the device select and the PCB. The PCB field is detailed in Section 5.2.
- 2. Payload field: contains the command and its parameter, as defined in the I<sup>2</sup>C command set.
- 3. EOD field: contains the two CRC bytes computed on the SOD but excluding the device select byte field.

Table 68 shows the format of an I<sup>2</sup>C frame.

I2C device operation M24SR64-Y

### Table 68. I<sup>2</sup>C frame format

I <sup>2</sup> C frame	SOD		Payload	EOD
	0xAC or 0xAD 1 byte		1 to 251 bytes	2 bytes
Device select 0xAC: to send a request to the M24SR64-Y 0xAD: to read a response of the M24SR64-Y				
PCB field		•		
I <sup>2</sup> C command or I <sup>2</sup> C answer			•	
2 CRC bytes				,

### 7.9.1 Example of I<sup>2</sup>C frame commands

### **NDEF Tag Application command**

This example presents the I<sup>2</sup>C frame of an NDEF Tag Application Select command. The I<sup>2</sup>C frame is detailed in *Table 69*.

Table 69. I<sup>2</sup>C host to M24SR64-Y

Field	SOD		Payload	EOD
Value	0xAC 0x02 or 0x03		Command field	35 C0 or DF BE
Device select				
PCB field		•		
0x00 A4 04 00 07 D2 7	76 00 00 85 01 01 00		•	
2 CRC bytes				

Before sending a new command, the I<sup>2</sup>C host can send an I<sup>2</sup>C frame to read the M24SR64-Y answer to the NDEF tag Application Select command.

Table 70. M24SR64-Y to I<sup>2</sup>C host

Field	s	OD	EOD		
	I <sup>2</sup> C host to M24SR64-Y	M24SR64-Y to I <sup>2</sup> C host			
Value	0xAD	0x02 or 0x03	F1 09 or 2D 53		
Device select					
PCB field		_			
I <sup>2</sup> C command			•		
2 CRC bytes					

*Figure 14* shows the I<sup>2</sup>C frame of the NDEF tag Application Select command.

M24SR64-Y I2C device operation

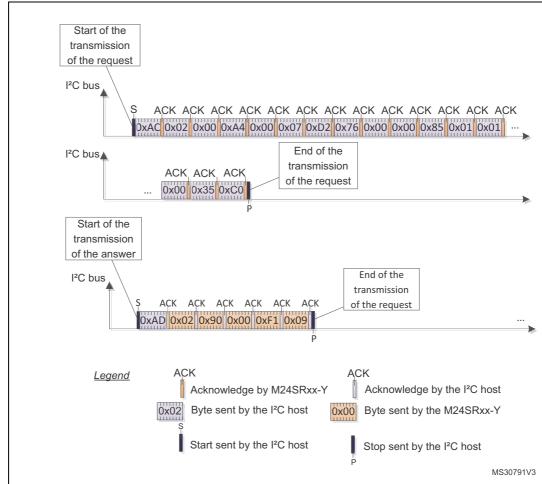


Figure 14. NDEF tag Application Select command

## 7.10 Open an I<sup>2</sup>C session

To open an I<sup>2</sup>C session, the I<sup>2</sup>C host shall send either the GetSession command or the KillRFsession command. The GetSession Command opens an I<sup>2</sup>C session if an RF session in not currently opened.

A KillRFsession command closes the current RF session if it exist and opens an I<sup>2</sup>C session.

When an I<sup>2</sup>C session is opened, the RF host cannot communicate with the M24SR64-Y and cannot close the I<sup>2</sup>C session.

I2C device operation M24SR64-Y

### 7.11 Close the I<sup>2</sup>C session

There are three ways to close an I<sup>2</sup>C session:

- turn off the Vcc power supply
- send the S(DES) command and read the response
- wait for the I<sup>2</sup>C watchdog when it is enabled
- wait for the I<sup>2</sup>C timeout.

## 8 Functional procedures

This section describes some procedure to access the memory or manage its protection.

### 8.1 Selection of an NDEF message

The RF or I<sup>2</sup>C host shall use this procedure to detect the NDEF message inside an M24SR64-Y.

The NDEF detection procedure is as follows:

- 1. Open an RF or an I2C session
- 2. Send the SelectNDEFTagApplication command
- Select the CC file
- 4. Read the CC file
- 5. Select the NDEF file.

### 8.2 Reading of an NDEF message

The RF or I<sup>2</sup>C host executes the NDEF read procedure to read the NDEF file.

- 1. Detect successfully the NDEF file using the NDEF detection procedure
- 2. Check that the read access without any security is granted for the NDEF file from the information provided by the CC file
- 3. Select the NDEF file
- 4. Read the NDEF file.

### 8.3 Reading a locked NDEF file

The RF or I<sup>2</sup>C host executes this procedure to read an NDEF file which has been locked previously.

- Select the NDEF Tag Application
- 2. Select the NDEF file
- 3. Verify the Read password by using the Verify command
- 4. Read the data in the NDEF file.

## 8.4 Locking an NDEF file

The RF or I<sup>2</sup>C host executes this procedure to protect an NDEF file.

- 1. Select the NDEF Tag Application
- 2. Check the right access provided by the CC file
- 3. Select the NDEF file
- 4. Transmit the NDEF file Write password by using the Verify command
- 5. Lock the NDEF file by sending the Enable verification command.

### 8.5 Unlocking an NDEF file

The RF or I<sup>2</sup>C host executes this procedure to read an NDEF file which has been locked previously.

- Select the NDEF Tag Application
- 2. Select the NDEF file
- 3. Verify the NDEF file Write password or the I<sup>2</sup>C password by using the Verify command
- 4. Unlock the NDEF file by sending the Disable verification command.

### 8.6 Reaching the read-only state for an NDEF file

The RF or I<sup>2</sup>C host executes this procedure to read an NDEF file which has been locked previously.

- Select the NDEF Tag Application
- Select the NDEF file
- Transmit the NDEF file Write password or the I<sup>2</sup>C password by using the Verify command
- 4. Send an EnablePermanentState command as the Write access right of the previous Select NDEF file.

### 8.7 Changing an NDEF password procedure

The RF or I<sup>2</sup>C host could use this procedure to change one NDEF password. it can be a Read or Write password.

- 1. Select the NDEF Tag Application
- Select the NDEF file
- Transmit the NDEF file Write password or the I<sup>2</sup>C password by using the Verify command
- 4. Change the password by sending a ChangeReferenceData command.

## 8.8 Changing a File type Procedure

The RF or I<sup>2</sup>C host executes this procedure to change the File Type of a file for which all access rights were previously granted.

- 1. Select the NDEF Tag Application
- 2. Select the File to be modified
- 3. Set the File Length to 0x00 using the UpdateBinary command
- 4. Send an UpdateFileType command with the New file Type as data.

M24SR64-Y UID: Unique identifier

## 9 UID: Unique identifier

The M24SR64-Y is uniquely identified by a 7 bytes unique identifier (UID). The UID is a read-only code and comprises:

- The IC manufacturer code on 1 byte (0x02 for STMicroelectronics).
- The Product code on 1 byte.
- A device number on 5 bytes.

Table 71 describes the UID format.

Table 71. UID format

	0x02	0x84	5 bytes
IC manufacturer code			
M24SR64-Y product code	)		
Device number			

Maximum rating M24SR64-Y

## 10 Maximum rating

Stressing the device above the rating listed in *Table 72* may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect the device reliability.

Table 72. Absolute maximum ratings

Symbol	Parameter		Min.	Max.	Unit
T <sub>A</sub>	Ambient operating temperature		-40	85	°C
T <sub>STG</sub> , h <sub>STG</sub> ,	Storage conditions	Sawn wafer on	15	25 6 <sup>(1)</sup>	°C months
t <sub>STG</sub>	Clorage containons	UV tape	kept in its	s original packing	
T <sub>STG</sub>	Storage temperature	UFDFPN8, SO8, TSSOP8	<b>–</b> 65	150	°C
	Storage temperature	Sawn Bumped	15	25	°C
T <sub>STG</sub>	Storage time	Wafer (kept in its antistatic bag)		6	months
T <sub>LEAD</sub>	Lead temperature UFDFPN8, during soldering SO8, TSSOP8		see note (2)		°C
V <sub>IO</sub>	I <sup>2</sup> C input or output rang	je and GPO	-0.50	6.5	V
I <sub>CC</sub> (3)	RF supply current AC0	- AC1	-	100	mA
V <sub>MAX_1</sub> (3)	RF input voltage amplitude between AC0 and AC1, GND pad left floating	VAC0-VAC1	-	10	V
V <sub>MAX_2</sub> (3)	AC voltage between AC0 and GND, or AC1 and GND	VAC0-GND or VAC1-GND	-0.5	4.5	V
V <sub>ESD</sub>	Electrostatic discharge voltage (human body model) (4)	AC0-AC1	-	1000	V
V <sub>ESD</sub>	Electrostatic discharge voltage (human body model) (4)	Other pads	-	3500	V

<sup>1.</sup> Counted from ST shipment date.

Compliant with JEDEC Std J-STD-020D (for small body, Sn-Pb or Pb assembly), the ST ECOPACK<sup>®</sup>
7191395 specification, and the European directive on Restrictions on Hazardous Substances (ROHS
directive 2011/65/EU, July 2011).

<sup>3.</sup> Based on characterization, not tested in production. Maximum absorbed power = 100 mW @ 7.5 A/m

<sup>4.</sup> AEC-Q100-002 (compliant with JEDEC Std JESD22-A114A, C1 = 100 pF, R1 = 1500  $\Omega$ , R2 = 500  $\Omega$ )

## 11 I<sup>2</sup>C DC and AC parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device in I<sup>2</sup>C mode. The parameters in the DC and AC characteristic tables that follow are derived from tests performed under the measurement conditions summarized in the relevant tables. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 73. I<sup>2</sup>C operating conditions

Symbol	Parameter	Min.	Max.	Unit
V <sub>CC</sub>	Supply voltage	2.7	5.5	V
T <sub>A</sub>	Ambient operating temperature	-40	85	°C

Table 74. AC test measurement conditions

Symbol	Parameter	Min.	Max.	Unit
C <sub>L</sub>	Load capacitance	10	00	pF
t <sub>r,</sub> t <sub>f</sub>	Input rise and fall times	-	50	ns
V <sub>hi-lo</sub>	Input levels	0.2 V <sub>CC</sub> t	o 0.8 V <sub>CC</sub>	V
V <sub>ref(t)</sub>	Input and output timing reference levels	0.3 V <sub>CC</sub> t	o 0.7 V <sub>CC</sub>	V

Figure 15. AC test measurement I/O waveform

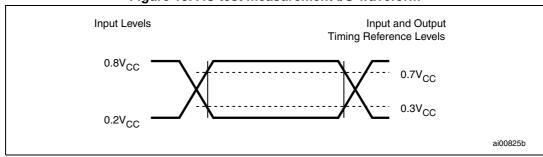


Table 75. Input parameters

Symbol	Parameter	Min.	Max.	Unit
C <sub>IN</sub>	Input capacitance (SDA)	-	8	pF
C <sub>IN</sub>	Input capacitance (other pins)	-	6	pF
t <sub>NS</sub>	Pulse width ignored (Input filter on SCL and SDA)	-	80	ns

Table 76. I<sup>2</sup>C DC characteristics

Symbol	Parameter	Test condition	Min.	Max.	Unit
I <sub>LI</sub>	Input leakage current (SCL, SDA)	V <sub>IN</sub> = V <sub>SS</sub> or V <sub>CC</sub> device in Standby mode	-	± 2	μA
I <sub>LO</sub>	Output leakage current	SDA in Hi-Z, external voltage applied on SDA: Vss or Vcc	-	± 2	μA
		V <sub>CC</sub> = 3.3 V, with RF ON	-	30	μΑ
1	Standby power mode supply current	V <sub>CC</sub> = 3.3 V, with RF OFF	-	5	
I <sub>CC0</sub>		$V_{CC} = 5.5 \text{ V, with RF ON}^{(1)}$	-	30	
		V <sub>CC</sub> = 5.5 V, with RF OFF	-	5	
	Supply current (I <sup>2</sup> C Session open)	V <sub>CC</sub> = 3.3 V, with RF ON	-	150	μΑ
I <sub>CC1</sub>		V <sub>CC</sub> = 3.3 V, with RF OFF	-	150	
		V <sub>CC</sub> = 5.5 V, with RF ON	-	150	
		V <sub>CC</sub> = 5.5 V, with RF OFF	-	150	
		$V_{CC}$ = 3.3 V ( $f_{C}$ = 1 MHz), with RF ON <sup>(3)</sup>	-	250	μΑ
I <sub>CC2</sub>	Supply current <sup>(2)</sup> (Read binary)	$V_{CC}$ = 3.3 V ( $f_C$ = 1 MHz), with RF OFF $^{(3)}$	-	200	
		$V_{CC}$ = 5.5 V ( $f_{C}$ = 1 MHz), with RF ON <sup>(3)</sup>	-	250	
		$V_{CC}$ = 5.5 V ( $f_C$ = 1 MHz), with RF OFF <sup>(3)</sup>	-	200	
I <sub>CC3</sub>		$V_{CC}$ = 3.3 V ( $f_C$ = 1 MHz), with RF ON $^{(3)}$	-	550	μА
	Supply current <sup>(2)</sup>	$V_{CC}$ = 3.3 V ( $f_C$ = 1 MHz), with RF OFF <sup>(3)</sup>	-	500	
	(Update binary)	$V_{CC}$ = 5.5 V ( $f_{C}$ = 1 MHz), with RF ON <sup>(3)</sup>	-	550	
		$V_{CC}$ = 5.5 V ( $f_C$ = 1 MHz), with RF OFF <sup>(3)</sup>	-	500	
V <sub>IL</sub>	Input low voltage (SDA, SCL)	V <sub>CC</sub> = 2.7 V V <sub>CC</sub> = 5.5 V	-0.45	0.3 V <sub>CC</sub>	V
V <sub>IH</sub>	Input high voltage (SDA, SCL)	V <sub>CC</sub> = 2.7 V V <sub>CC</sub> = 5.5 V	0.7 V <sub>CC</sub>	6.5	V
V <sub>IL</sub>	Input low voltage (RF disable)	V <sub>CC</sub> = 2.7 V V <sub>CC</sub> = 5.5 V	-	0.45	V
V <sub>IH</sub>	Input high voltage (RF disable)	V <sub>CC</sub> = 2.7 V V <sub>CC</sub> = 5.5 V	1.4	-	V
V <sub>OL</sub>	Output low voltage (SDA)	$I_{OL} = 3 \text{ mA}, V_{CC} = 5.5 \text{ V}$	-	0.4	V
	Output low voltage (GPO)	$I_{OL}$ = 1 mA, $V_{CC}$ = 2.7 to 5.5 V	-	0.4	V
	•		•		

<sup>1.</sup> When an RF session is Opened,  $\rm I_{\rm cc}$  corresponds to the standby power mode.

<sup>2.</sup> Characterized only.

3. Input levels as defined in Figure 15.

Table 77. I<sup>2</sup>C AC characteristics (400 kHz)

Test conditions specified in <i>Table 73</i> (preliminary data based on design simulations)						
Symbol	Symbol Alt. Parameter		Min.	Max.	Unit	
f <sub>C</sub>	f <sub>SCL</sub>	Clock frequency	0.05	400	kHz	
t <sub>CHCL</sub> (1)	t <sub>HIGH</sub>	Clock pulse width high	600	-	ns	
t <sub>CLCH</sub> (2)	t <sub>LOW</sub>	Clock pulse width low	1300	-	ns	
t <sub>XH1XH2</sub>	t <sub>R</sub>	Input signal rise time	(3)	(3)	ns	
t <sub>XL1XL2</sub>	t <sub>F</sub>	Input signal fall time	(3)	(3)	ns	
t <sub>DL1DL2</sub>	t <sub>F</sub>	SDA (out) fall time	20	300	ns	
t <sub>DXCX</sub>	t <sub>SU:DAT</sub>	Data in set up time	100	-	ns	
t <sub>CLDX</sub>	t <sub>HD:DAT</sub>	Data in hold time	0	-	ns	
t <sub>CLQX</sub>	t <sub>DH</sub>	Data out hold time	100	-	ns	
t <sub>CLQV</sub> (4)(5)	t <sub>AA</sub>	Clock low to next data valid (access time)	-	900	ns	
t <sub>CHDX</sub> <sup>(6)</sup>	t <sub>SU:STA</sub>	Start condition set up time	600	-	ns	
t <sub>DLCL</sub>	t <sub>HD:STA</sub>	Start condition hold time	600	-	ns	
t <sub>CHDH</sub>	t <sub>SU:STO</sub>	Stop condition set up time	600	-	ns	
t <sub>DHDL</sub>	t <sub>BUF</sub>	Time between Stop condition and next Start condition	1300	-	ns	
t <sub>W</sub>	t <sub>WR</sub>	I <sup>2</sup> C write time in one page	-	5	ms	
		I <sup>2</sup> C write time up to 246 bytes	-	150	ms	
t <sub>NS</sub> <sup>(7)</sup>	-	Pulse width ignored (input filter on SCL and SDA)	-	80	ns	

- 1. t<sub>CHCL</sub> timeout.
- 2. t<sub>CLCH</sub> timeout.
- 3. There is no min. or max. value for the input signal rise and fall times. It is however recommended by the  $^{1}$ C specification that the input signal rise and fall times be more than 20 ns and less than 300 ns when  $^{1}$ C < 400 kHz.
- 4. To avoid spurious Start and Stop conditions, a minimum delay is placed between SCL=1 and the falling or rising edge of SDA.
- 5. t<sub>CLQV</sub> is the time (from the falling edge of SCL) required by the SDA bus line to reach 0.8V<sub>CC</sub> in a compatible way with the I<sup>2</sup>C specification (which specifies t<sub>SU:DAT</sub> (min) = 100 ns), assuming that the R<sub>bus</sub> × C<sub>bus</sub> time constant is less than 500 ns (as specified in *Figure 17*).
- 6. For a restart condition, or following a write cycle.
- 7. Characterized only, not tested in production.

### Table 78. I<sup>2</sup>C AC characteristics (1 MHz)

# Test conditions specified in *Table 73* (preliminary data based on design simulations)

(p. c						
Symbol	Alt.	Parameter	Min.	Max.	Unit	
$f_{\mathbb{C}}$	f <sub>SCL</sub>	Clock frequency	0.05	1000	kHz	
t <sub>CHCL</sub> (1)	t <sub>HIGH</sub>	Clock pulse width high	260	-	ns	
t <sub>CLCH</sub> (2)	t <sub>LOW</sub>	Clock pulse width low	500	-	ns	
t <sub>XH1XH2</sub>	t <sub>R</sub>	Input signal rise time	(3)	(3)	ns	
t <sub>XL1XL2</sub>	t <sub>F</sub>	Input signal fall time	(3)	(3)	ns	
t <sub>DL1DL2</sub>	t <sub>F</sub>	SDA (out) fall time	20	120	ns	
t <sub>DXCX</sub>	t <sub>SU:DAT</sub>	Data in set up time	50	-	ns	
t <sub>CLDX</sub>	t <sub>HD:DAT</sub>	Data in hold time	0	-	ns	
t <sub>CLQX</sub>	t <sub>DH</sub>	Data out hold time	100	-	ns	
t <sub>CLQV</sub> (4)(5)	t <sub>AA</sub>	Clock low to next data valid (access time)	-	450	ns	
t <sub>CHDX</sub> (6)	t <sub>SU:STA</sub>	Start condition set up time	250	-	ns	
t <sub>DLCL</sub>	t <sub>HD:STA</sub>	Start condition hold time	250	-	ns	
t <sub>CHDH</sub>	t <sub>SU:STO</sub>	Stop condition set up time	250	-	ns	
t <sub>DHDL</sub>	t <sub>BUF</sub>	Time between Stop condition and next Start condition	500	-	ns	
t <sub>W</sub>	t <sub>WR</sub>	I <sup>2</sup> C write time in one page	-	5	ms	
		I <sup>2</sup> C write time up to 246 bytes	-	150	ms	
t <sub>NS</sub> <sup>(7)</sup>	-	Pulse width ignored (input filter on SCL and SDA)	-	80	ns	

- 1. t<sub>CHCL</sub> timeout.
- ${\it 2.} \quad t_{CLCH} \ timeout.$
- 3. There is no min. or max. value for the input signal rise and fall times. It is however recommended by the  $I^2C$  specification that the input signal rise and fall times be less than 120 ns when  $I_C < 1$  MHz.
- To avoid spurious Start and Stop conditions, a minimum delay is placed between SCL=1 and the falling or rising edge of SDA.
- 5.  $t_{CLQV}$  is the time (from the falling edge of SCL) required by the SDA bus line to reach  $0.8V_{CC}$  in a compatible way with the  $I^2C$  specification (which specifies  $t_{SU:DAT}$  (min) = 100 ns), assuming that the  $R_{bus} \times C_{bus}$  time constant is less than 500 ns (as specified in *Figure 17*).
- 6. For a reStart condition, or following a write cycle.
- 7. Characterized only, not tested in production.

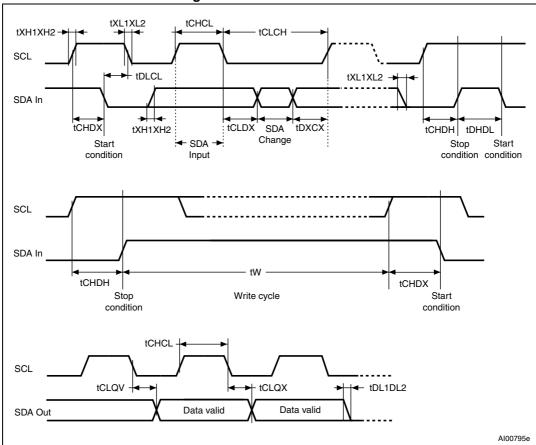


Figure 16. I<sup>2</sup>C AC waveforms

## 11.1 I<sup>2</sup>C timing measurement condition

Figure 17 represents the Maximum Rbus value versus bus parasitic capacitance (Cbus) for an  $I^2C$  bus at maximum frequency  $f_C$  = 400 kHz.

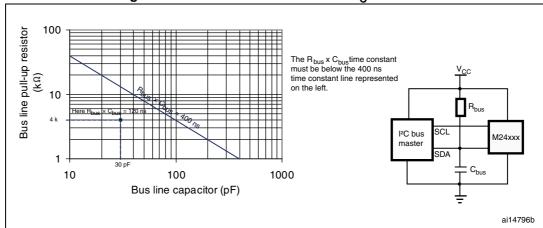
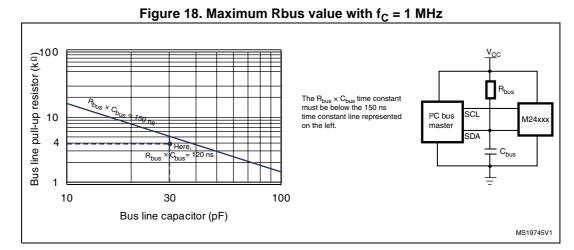


Figure 17. Maximum Rbus value with  $f_C = 400 \text{ kHz}$ 

Figure 18 represents the Maximum Rbus value versus bus parasitic capacitance (Cbus) for an  $I^2C$  bus at maximum frequency  $I_C = 1$  MHz.





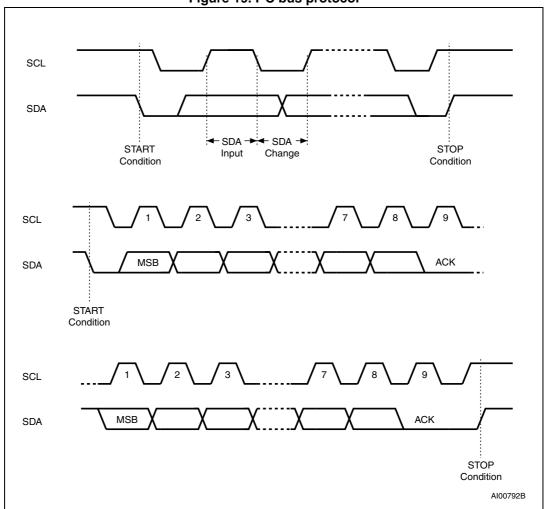


Table 79. Device select code

	Device type identifier <sup>(1)</sup>				Chip Enable address			RW
	b7 b6 b5 b4				b3	b2	b1	b0
Device select code	1	0	1	0	1	1	0	RW

<sup>1.</sup> The most significant bit, b7, is sent first.



GPO parameters M24SR64-Y

# 12 **GPO** parameters

This section lists the timing of the GPO according to its configuration.

Table 80. GPO timings measurement <sup>(1)</sup>

GPO field		I/F	Condition	Command	Symbol	Тур.	Unit
			ODO Januaria a	Kill session	CmdSTPtoGPlow	15*	μs
	0xX1	I <sup>2</sup> C	GPO low when session active	Get session	*add 100 µs for boot after POR	15*	μs
Session Open		I <sup>2</sup> C	GPO return HZ	Deselect	AnswerlbLBtoGPHZ	105	ns
	0x1X	RF	GPO low when session active	NDEF select	CmdEOFtoGPlow	170	μs
		RF	GPO return HZ	Deselect	CmdEOFtoGPHZ	370	μs
		I <sup>2</sup> C	GPO low when		CmdSTPtoGPlow	45	μs
WIP	0xX2	I <sup>2</sup> C	programming	Update Binary	Writing time duration (No time extension)	5	ms
VVII		RF	GPO low when		CmdEOFtoGPlow	75	μs
	0x2X		programming	Update Binary	Writing time duration (No time extension)	5	ms
Answer Ready	0xX3	I <sup>2</sup> C	GPO low when a command is computed	ReadBinary or UpdateBinary	CmdSTPtoGPlow	55 or 5	μs ms
		I <sup>2</sup> C	GPO return HZ on new command	All commands	After NewCmdlbFB or AnswerlbFB	105	ns
Message In	0x3X	RF	GPO low when modifying NDEF	UpdateBinary (Msg Length #0)	CmdEOFtoGPlow	75	μs
Progress	0.33.	RF	GPO low when modifying NDEF	UpdateBinary	Writing time duration (No time extension)	5	ms
Interrupt	0xX4	I <sup>2</sup> C	GPO low after receiving an Interrupt command	SendInterrupt	CmdSTPtoGPlow	50	μs
		I <sup>2</sup> C	GPO return HZ	All commands	After NewCmdlbFB or AnswerlbFB	105	ns
	0.41/	RF	GPO low after	O a a Hartana i	CmdEOFtoGPlow	75	μs
	0x4X	RF	receiving an Interrupt command	SendInterrupt	Pulse duration	540	μs

M24SR64-Y GPO parameters

Table 80. GPO timings measurement <sup>(1)</sup> (continued)

GPO fiel	ld	I/F	Condition	Command	Symbol	Тур.	Unit
	0xX5	I <sup>2</sup> C	GPO low when reset	Reset GPO	CmdSTPtoGPlow	40	μs
State Control	UXAG	I <sup>2</sup> C	GPO return HZ when set	Set GPO	CmdSTPtoGPHZ	40	μs
State Control	0v5Y	RF	GPO low when reset	Reset GPO	CmdEOFtoGPlow	60	μs
	0.35.	0x5X RF	GPO return HZ when set	Set GPO	CmdEOFtoGPHZ	60	μs
RF Busy 0x6X		RF	GPO low after receiving an RF command	Anticollision command or start of RF disturb (command using another RF protocol)	CmdSOFtoGPlow	6	μs
		RF	GPO return HZ after deselection or RF command in another protocol	Deselect or end of RF disturb (command using another RF protocol)	CmdEOFtoGPHZ	460	μs

<sup>1.</sup> Characterized only.

#### RF electrical parameters 13

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device in RF mode.

The parameters in the DC and AC characteristics tables that follow are derived from tests performed under the Measurement Conditions summarized in the relevant tables. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 81. Default operating conditions

Symbol	Parameter	Min.	Max.	Unit
T <sub>A</sub>	Ambient operating temperature	-40	85	°C

Table 82. RF characteristics (1)

Symbol	Parameter	Condition	Min	Тур	Max	Unit
f <sub>C</sub>	External RF signal frequency		13.553	13.56	13.567	MHz
H_ISO	Operating field according to ISO	T <sub>A</sub> = 0 °C to 50 °C	1500	-	7500	mA/m
H_Extended	Operating field in extended temperature range	T <sub>A</sub> = -40 °C to 85 °C	500	-	7500	mA/m
MI <sub>CARRIER</sub>	100% carrier modulation index	MI=(A-B)/(A+B)	90	-	100	%
t <sub>1</sub>	Pause A length	-	28/f <sub>C</sub>	-	40.5/f <sub>C</sub>	μs
t <sub>2</sub>	Pause A low time	-	7/f <sub>C</sub>	-	t1	μs
t <sub>3</sub>	Pause A rise time	-	1.5xt4	-	16/f <sub>C</sub>	μs
t <sub>4</sub>	Pause A rise time section	-	0	-	6/f <sub>C</sub>	μs
t <sub>MIN CD</sub>	Minimum time from carrier generation to first data	From H-field min	-	-	5	ms
W <sub>t</sub>	RF write time (including internal Verify) for one page	-	-	6	-	ms
C <sub>TUN</sub>	Internal tuning capacitor in SO8 (2)	f <sub>C</sub> = 13.56 MHz	22.5	25	27.5	pF
t <sub>RF_OFF</sub>	RF OFF time	Chip reset	-	-	5	ms

All timing characterizations were performed on a reference antenna with the following characteristics: External size: 75 mm x 48 mm Number of turns: 6

Width of conductor: 0.6 mm

Vidue of the tuning capacitor in SO8: 25 pF (M24SR64-Y) Value of the coil: 5 μH Tuning frequency: 14.2 MHz.

2. Characterized only, at room temperature only, measured at VAC0-VAC1 = 2 V peak to peak at 13.56 MHz.

### Package mechanical data 14

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK® packages, depending on their level of environmental compliance. ECOPACK® specifications, grade definitions and product status are available at: www.st.com.

ECOPACK® is an ST trademark.

#### Mechanical data for the SO8N package 14.1

□ ccc 0.25 mm GAUGE PLANE E1 L1 SO-A

Figure 20. SO8N - 8-lead plastic small outline, 150 mils body width, package outline

1. Drawing is not to scale.

Table 83. SO8N - 8-lead plastic small outline, 150 mils body width, package data

Symbol		millimeters	rs		inches <sup>(1)</sup>		
Symbol	Тур	Min	Max	Тур	Min	Max	
А	-	-	1.750	-	-	0.0689	
A1	-	0.100	0.250	-	0.0039	0.0098	
A2	-	1.250		-	0.0492		
b	-	0.280	0.480	-	0.0110	0.0189	
С	-	0.170	0.230	-	0.0067	0.0091	
ccc	-	-	0.100	-	-	0.0039	
D	4.900	4.800	5.000	0.1929	0.1890	0.1969	
Е	6.000	5.800	6.200	0.2362	0.2283	0.2441	
E1	3.900	3.800	4.000	0.1535	0.1496	0.1575	
е	1.270	-	-	0.0500	-	-	
h	-	0.250	0.500	-	-	-	

		pack	age data (ce	minucuj		
Symbol		millimeters			inches <sup>(1)</sup>	
Symbol	Тур	Min	Max	Тур	Min	Max
k	-	0°	8°	-	0°	8°
L	-	0.400	1.270	-	0.0157	0.0500
1.1	1.04			0.0410		

Table 83. SO8N - 8-lead plastic small outline, 150 mils body width, package data (continued)

## 14.2 Mechanical data for the TSSOP8 package

Pigure 21. 1950P8 - 8-lead thin shrink small outline, package outline

Figure 21. TSSOP8 - 8-lead thin shrink small outline, package outline

1. Drawing is not to scale.

Table 84. TSSOP8 - 8-lead thin shrink small outline, 169 mils width, package data

Symbol		millimeters		inches <sup>(1)</sup>			
Symbol	Тур	Min	Max	Тур	Min	Max	
Α	-	-	1.200	-	-	0.0472	
A1	-	0.050	0.150	-	0.0020	0.0059	
A2	1.000	1.800	1.050	0.0394	0.0315	0.0413	
b	-	0.190	0.300	-	0.0075	0.0118	
С	-	0.090	0.200	-	0.0035	0.0079	
CP	-	-	0.100	-	-	0.0039	
D	3.000	2.900	3.100	0.1181	0.1142	0.1220	
е	0.650	-	-	0.0256	-	-	

78/85 DocID023790 Rev 10


<sup>1.</sup> Values in inches are converted from mm and rounded to 4 decimal digits.

inches (1) millimeters **Symbol** Тур Min Max Тур Min Max 0.2520 Ε 6.400 6.200 6.600 0.2441 0.2598 E1 4.400 4.300 4.500 0.1732 0.1693 0.1772 0.600 0.450 0.750 0.02636 0.0177 0.0295 L1 1.000 0.0394 0° 8° 0° 8° а Ν 8 8

Table 84. TSSOP8 - 8-lead thin shrink small outline, 169 mils width, package data (continued)

### 14.3 Mechanical data for the UFDFPN8 package

Figure 22. UFDFPN8 - 8-lead ultra thin fine pitch dual flat package, no lead, 2x3 mm, package outline

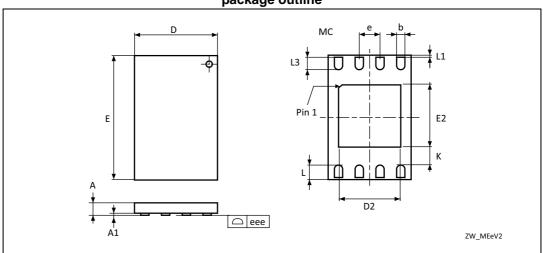

- 1. Drawing is not to scale.
- The central pad (area E2 by D2 in the above illustration) is internally pulled to V<sub>SS</sub>. It must not be connected to any other voltage or signal line on the PCB, for example during the soldering process.

<sup>1.</sup> Values in inches are converted from mm and rounded to 4 decimal digits.

Table 85. UFDFPN8 - 8-lead ultra thin fine pitch dual flat package, no lead, package data

Symbol		millimeters			inches (1)	
Symbol	Тур	Min	Max	Тур	Min	Max
Α	0.550	0.450	0.600	0.0217	0.0177	0.0236
A1	0.020	0.000	0.050	0.0008	0.0000	0.0020
b	0.250	0.200	0.300	0.0098	0.0079	0.0118
D	2.000	1.900	2.100	0.0787	0.0748	0.0827
D2 (rev MC)	-	1.200	1.600	-	0.0472	0.0630
E	3.000	2.900	3.100	0.1181	0.1142	0.1220
E2 (rev MC)	-	1.200	1.600	-	0.0472	0.0630
е	0.500	-	-	0.0197	=	-
K (rev MC)	-	0.300	-	-	0.0118	-
L	-	0.300	0.500	-	0.0118	0.0197
L1	-	-	0.150	-	-	0.0059
L3	-	0.300	-	-	0.0118	-
eee (2)	-	0.080	-	-	0.0031	-


<sup>1.</sup> Values in inches are converted from mm and rounded to 4 decimal digits.

<sup>2.</sup> Applied for exposed die paddle and terminals. Exclude embedded part of exposed die paddle from measuring.

M24SR64-Y Part numbering

## 15 Part numbering

Table 86. Ordering information scheme for packaged devices

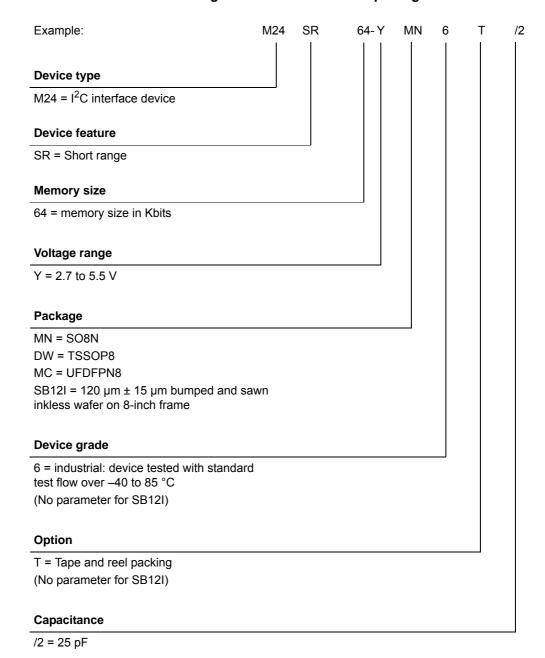

Revision history M24SR64-Y

# 16 Revision history

Table 87. Document revision history

Date	Revision	Changes
15-Jan-2013	1	Initial release.
12-Apr-2013	2	Global contents update.
16-May-2013	3	Global contents update.
17-May-2013	4	Updated "Number of bytes in CC file" value and comment in <i>Table 4:</i> CC file layout for 1 NDEF file.  Added <i>Table 77:</i> PC AC characteristics (400 kHz) and <i>Table 78:</i> PC AC characteristics (1 MHz).
21-Jun-2013	5	Added missing "TSSOP 8" below the second figure on page 1.  Removed a sentence in Section 1: Functional description and updated a sentence in Section 2.5: Supply voltage (V <sub>CC</sub> ).  Updated Section 2.7: General purpose output (GPO) including all graphics.  Updated Section 3.1.2: CC file layout and Section 3.2: Read and write access rights to the memory, Section 4.1: Master and slave, Section 4.2.2: \( \beta^2 \) C token, Section 5.5: CRC of the I2C and RF frame.  Added rows to Table 6: Field list.  Added a note to , updated Table 8: Details about the RF Session field and Table 10: Details about the RF enable field.  Updated Figure 1: See the procedure to lock the write access. and added a note below Figure 12: Command and response exchange.  Updated or added text to Section 5.7.1: Verify command to Section 5.7.4: Disable Verification Requirement command, Section 8.7: Changing an NDEF password procedure  Updated Table 62: Ascending and descending data rate coding.  Added Section 5.8: ST Proprietary command set, Section 5.10: Specific I2C command set and Section 6: RF device operation  Changed "GetRFsession command into "Getl2Csession command", and "Detection of an NDEF message" into "Selection of an NDEF message".  Updated ICCs in Table 76: I2C DC characteristics.  Removed "ASK modulated signal" figure and text before from Section 13: RF electrical parameters.

M24SR64-Y Revision history

Table 87. Document revision history (continued)

Date	Revision	Changes
29-Aug-2013	6	Added UFDFPN8 drawing on page 1.  Changed "dual interface device", "dual interface EEPROM" and "dual interface memory" into "NFC dynamic tag device".  Changed "EnablePermanentSecurity" into "EnablePermanentState" in Table 13: RF and I <sup>2</sup> C command sets.  Updated the bitfields in Table 15, Table 19, Table 21, Table 58, Table 61 and Table 67.  Changed the following commands:  — "ReadMemory" into "STReadMemory",  — "Read binary" into "STReadBinary",  — "EnablePermanentLock" into "EnablePermanentState".  Updated I <sub>CC0</sub> parameter in Table 76: I <sup>2</sup> C DC characteristics and added a note.  Added Section 14.3: Mechanical data for the UFDFPN8 package and UFDFPN8 package.
08-Nov-2013	7	Global changes.
12-Dec-2013	8	Restored the whole content of <i>Table 76: I</i> <sup>2</sup> <i>C DC characteristics</i> .  Updated the capacitor values in <i>Section 2.5.1: Operating supply voltage V<sub>CC</sub></i> .  Removed bullet (4) from <i>Section 8.6: Reaching the read-only state for an NDEF file</i> .  Updated V <sub>ESD</sub> value in <i>Table 72: Absolute maximum ratings</i> , I <sub>CC</sub> values in <i>Table 76: I</i> <sup>2</sup> <i>C DC characteristics</i> , and H_Extended value in <i>Table 82: RF characteristics</i> .  Added details to "S(WTX)" bullet in <i>Section 5.4: S-Block format</i> .  Added sentences to <i>Section 5.6.8: UpdateBinary command</i> and to <i>Section 5.8.3: DisablePermanentState command</i> .  Changed '0x001E' value into '0x001F' in <i>Table 55: StateControl command format</i> .  Updated values in <i>Table 60: ATS response</i> .

Revision history M24SR64-Y

Table 87. Document revision history (continued)

Date	Revision	Changes
18-Dec-2013	9	Changed the datasheet status from "Preliminary data" to "Production data".  Added Note (4) to Figure 10: Changing the read access right to an NDEF file and Figure 11: Changing the write access right to an NDEF file.
17-Feb-2014	10	Updated Figure 5: GPO configured as IPC answer ready (GPO field = 0xX3) and Figure 8: GPO configured as State Control (GPO field = 0xX5 or 0x5X).  Added IPC text to the Note below Table 21: S-Block detailed format.  Edited the third paragraph of Section 5.8.1: ExtendedReadBinary command.  Added Section 5.8.4: UpdateFileType command and Section 8.8: Changing a File type Procedure.  Updated bullet 3 in Section 7.9: IPC frame format, and the Payload row of Table 69: I2C host to M24SR64-Y. Updated bullet 2 in Section 7.11: Close the IPC session.  Edited VIO row and removed VESD (machine model) row from Table 72: Absolute maximum ratings.  Updated ICC rows and added a Note to Table 76: IPC DC characteristics.  Updated Figure 20: SO8N - 8-lead plastic small outline, 150 mils body width, package outline.  Fixed a typo in Figure 22: UFDFPN8 - 8-lead ultra thin fine pitch dual flat package, no lead, 2x3 mm, package outline title: UFDPFN8 changed into UFDFPN8.

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

ST PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE ST PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF ST HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY ST AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO ST PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2014 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

