
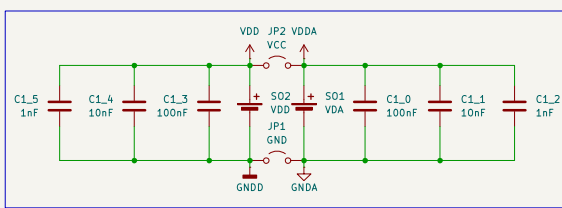





Usar o RSSI para adaptar o ganho?

Usar o RSSI para adaptar o ganho?

6.4 Power supply decoupling
Power supply decoupling and filtering must be used (not shown in the application circuit). The placement and size of the decoupling capacitors and the power supply filtering are very important to achieve the optimum performance. Chicon provides reference designs

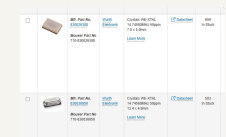

16. VCO
Only one external inductor (L101) is required for the VCO. The inductor will determine the operating frequency range of the circuit. It is important to place the inductor as close to the pins as possible in order to reduce stray inductance. It is recommended to use a high Q, low tolerance inductor for best performance.

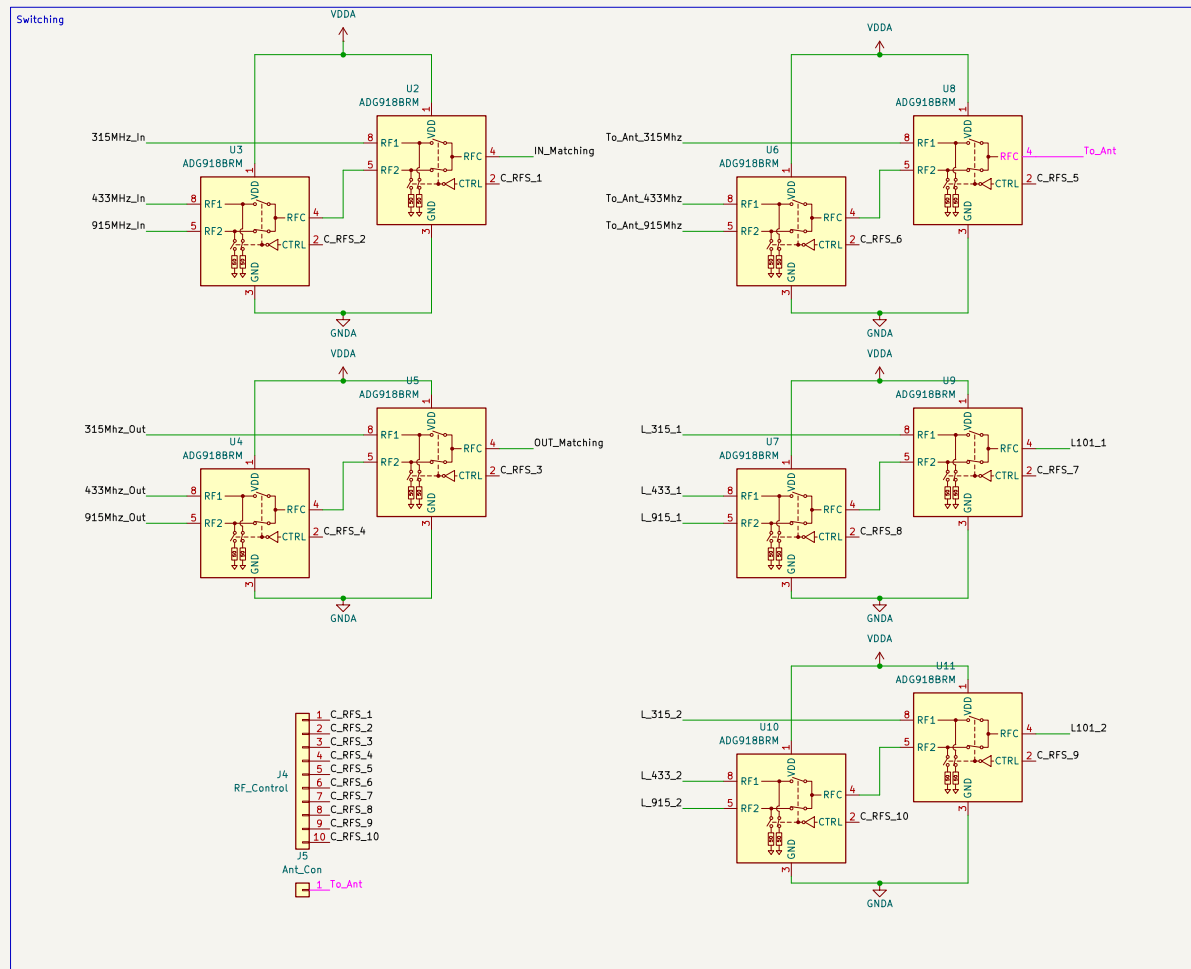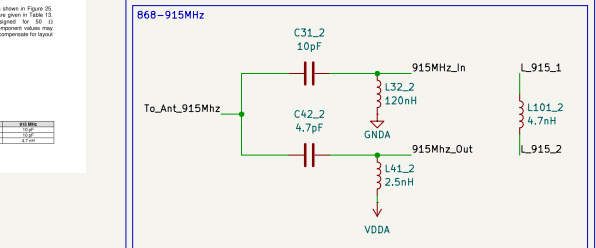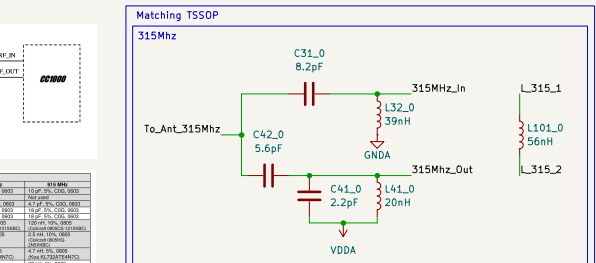

Sheet: /		
File: Ai1_CC1000.kicad_sch		
Title:		
Size: A3	Date:	Rev:
KiCad E.D.A. 10.0.3		Id: 1/1