


ii. Ex. when configured to INPUT

- check if a switch is being pressed or not
- Best to start with pin 2 IIC pins 0-1 communicate with the computer

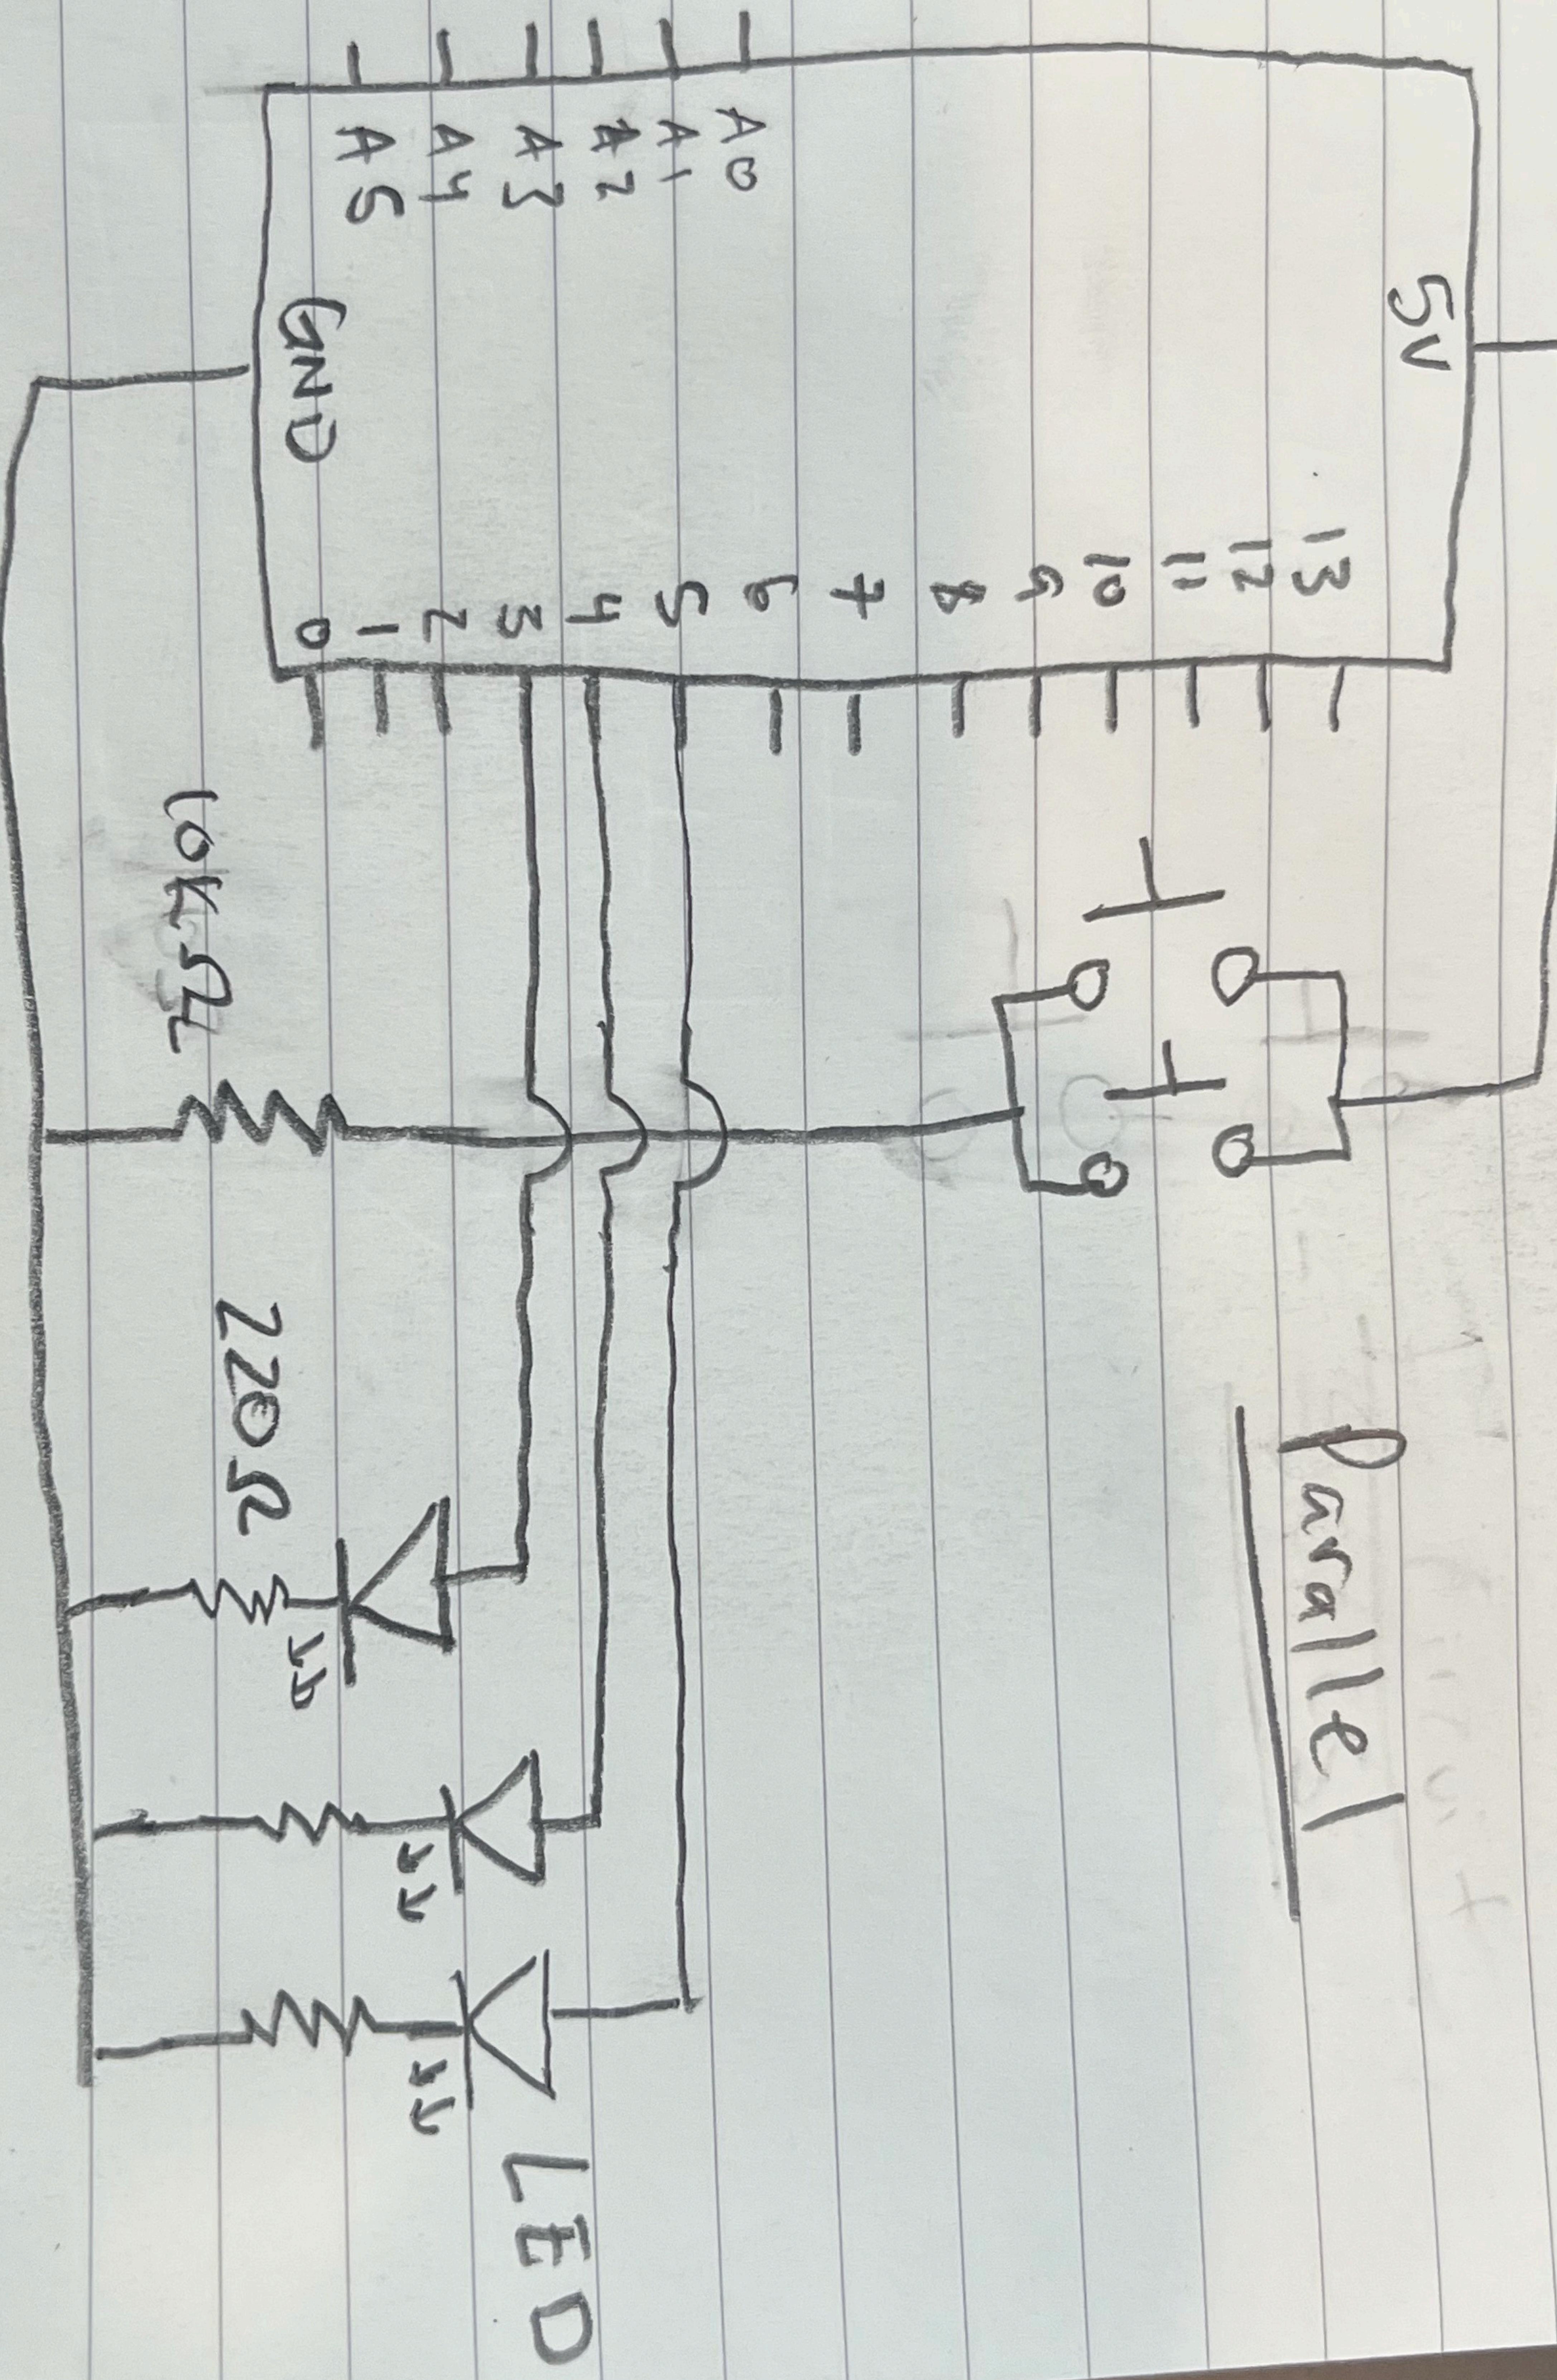

resistors  
and non-

\*R