# F28027 USB - Stick ePWM

# Introduction

This chapter is an add-on to module 7. It describes the laboratory procedures for ePWM-exercises, based on the F28027 Piccolo-USB-Stick (Texas Instruments part no: TMDX28027USB). For the description of the ePWM-unit and control registers, please refer to the documentation of chapter 7.



# **Table of contents**

F28027 USB - Stick ePWM	7-1
Introduction	
Table of contents	
Lab 7_1: Generate an ePWM signal	7-2
Lab 7_2: Generate a 3 - phase signal system	7-9
Lab 7_3: 1 kHz signal with variable pulse width	7-12
Lab 7_4: A pair of complementary 1 kHz - Signals	7-15
Lab 7_5: Independent Modulation on ePWM1A / 1B	7-17
Lab 7_6: Dead Band Unit on ePWM1A / 1B	7-20
Lab 7_7: Chopped Signals at ePWM1A / 1B	7-23
Lab 7_8: Trip Zone protection with TZ6	
Lab7_9: ePWM Sine Wave Modulation	7-30
Lab7_10: ePWM1A 1 kHz signal captured by eCAP1	7-36

# Lab 7\_1: Generate an ePWM signal

# Lab 7\_1: Generate a 1 KHz Signal at ePWM1A Objective:

- Generate a 1 KHz square wave signal at ePWM1A with a duty cycle of 50 %
- Measure it with an oscilloscope or
- Connect the signal to an external buzzer or loudspeaker
- Registers involved:

• TBPRD: define signal frequency

• TBCTL: setup operating mode and time prescale

AQCTLA: define signal shape for ePWM1A

$$TBPRD = \frac{1}{2} * \frac{T_{PWM}}{T_{SYSCLKOUT} * CLKDIV * HSPCLKDIV}$$

7 - 10


# **Objective**

The objective of this lab is to generate a square wave signal of 1 kHz at line ePWM1A. With the help of an oscilloscope connected to header J1-17 of the Piccolo USB-Stick device we can monitor the signal. A small external circuit incorporating a buzzer would allow us to make the signal audible. A possible schematic is given at the end of this exercise.

## **Procedure**

# Create a new Project File


- 1. Using Code Composer Studio Version 4, create a new project, called **Lab7A.pjt** in C:\DSP2802x\_V4\Labs (or in another path that is accessible by you; ask your teacher or a technician for an appropriate location!).
  - → File → New → CCS Project

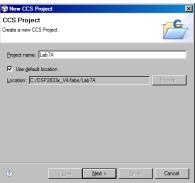






Enter the project settings according to the following image:

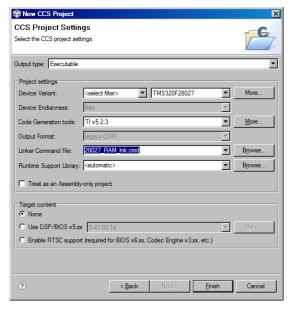

2. Define the size of the C system stack. In the project window, right click at project "Lab6" and select "Properties". In category "C/C++ Build", "C2000 Linker", "Basic Options" set the C stack size to 0x400:

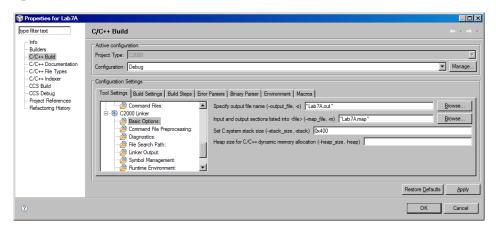

- 3. Create a new source code file "Lab7\_1.c" as part of your new project (File → New → Source File):
  - Lab7\_1.c
- 4. Next, let us link some of the files, provided by Texas Instruments, to the project:

In the C/C++ perspective, right click at project "Lab7A" and select "**Link Files to Project**". Go to folder " $C: \times 28 \times 2802x \times 10 \times 2802x = 2802x$ 


- DSP2802x\_GlobalVariableDefs.c
- 5. Repeat the "Link Files to Project" step. From  $C:\langle tidcs \rangle (28 \backslash dsp2802x \backslash v110 \backslash DSP2802x \ common \backslash source \ add:$ 
  - DSP2802x CodeStartBranch.asm
  - DSP2802x\_SysCtrl.c
  - DSP2802x\_usDelay.asm
- 6. From  $C:\langle tidcs \rangle c28 \rangle dsp2802x \rangle v110 \rangle DSP2802x\_headers \rangle cmd$  link to project "Lab7A":
  - DSP2802x\_Headers\_nonBIOS.cmd

# **Project Build Options**

7. We also have to extent the search path of the C-Compiler for include files. Right click at project "Lab7" and select "Properties". Select "C/C++ Build", "C2000 Compiler", "Include Options". In the box: "Add dir to #include search path", add the following lines:

# C:\tidcs\C28\dsp2802x\v110\DSP2802x\_headers\include C:\tidcs\c28\DSP2802x\v110\DSP2802x common\include

Note: Use the "Add" Icon to add the new paths:

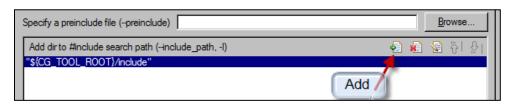

Close the Property Window by Clicking **<OK>**.

#### **Edit Source Code**

8. Now we can start to edit file "Lab7\_1.c". First include the declaration of data types used for global variables:

#include "DSP2802x Device.h"

9. Next, declare the prototypes for an external function, provided by Texas Instruments:

#### extern void InitSysCtrl(void);

10. Now continue with declarations for our own local functions:

```
void Gpio_Select(void);
void Setup_ePWM1A(void);
```

11. Now we can start to write the main function. The first activity in main is to call a function, provided by Texas Instruments, to initialize the core of the DSC:

#### InitSysCtrl();

If you would like to keep the watchdog unit running, which is always a good practice, re-enable this unit:

```
EALLOW;
SysCtrlRegs.WDCR = 0x00AF;
EDIS;
```

Next, call your two local functions to initialize ePWM1 and the multiplex registers for GPIO:

```
Gpio_Select();
Setup ePWM1A();
```

Finally, enter an endless while(1) - loop. The only activity in this loop is to permanently service the watchdog unit.

```
EALLOW;
SysCtrlRegs.WDKEY = 0x55;
SysCtrlRegs.WDKEY = 0xAA;
EDIS;
```

- 12. After "main()", add the definition of function "Gpio\_Select()". In this function set all multiplex registers to GPIO functions. For line GPIO0, set the multiplex bit to allow ePWM1A as output signal. To open the access to all multiplex registers, execute an "EALLOW" instruction at the beginning of this function and close the access protection with an "EDIS" at the end of the function.
- 13. Finally, add the definition for function "Setup\_ePWM1A()" at the end of your code. We have to set registers TBCTL, TBPRD and AQCTLA. The frequency of the output signal is given by:

$$TBPRD = \frac{f_{CPU}}{2 * f_{PWM} * CLKDIV * HSPCLKDIV}$$


For  $f_{PWM} = 1$  kHz and  $f_{CPU} = 60$ MHz we could use CLKDIV = divide by 1 and HSPCLKDIV = divide by 1 to get TBPRD = 30000.

Register TBCTL covers the bit fields for CLKDIV, HSPCLKDIV and the operation mode (CTRMODE), which should be set to "up-down-mode"


In register AQCTLA select ZRO = set and PRD = clear.

## **Build, Load and Test**

- 14. Now build the new project.
  - → Project → Rebuild Active Project
- 15. Create or activate a F28027 target configuration
  - → Target → New Target Configuration

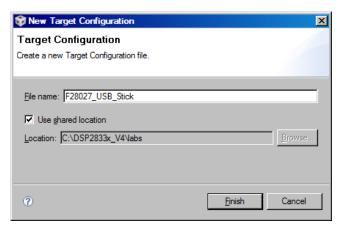

In the next window, select the "XDS100v2 USB Emulator" and the device "controlStick – Piccolo F28027. Click "Save" and close the window.

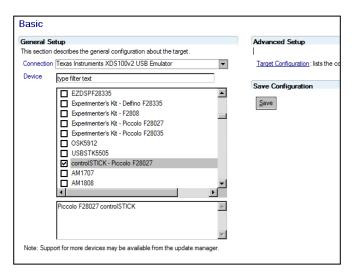

In the "Target Configurations" window, right click at the new target configuration, select "Link File to Project" and link the configuration to project "Lab7A"


16. Now start the debugger session\_

#### → Target → Debug Active Project


The "Debugger Perspective should pop up and a blue arrow should point to the beginning of main:

```
Lab7_1.c X
    #include "DSP2802x Device.h"
    extern void InitSysCtrl(void);
    void Gpio Select (void);
    void Setup_ePWM1A(void);
     void main(void)
 10
         InitSysCtrl();
                                              // Basic Core Initialization, WD disabled
         EALLOW:
         SysCtrlRegs.WDCR = 0x00AF;
                                              // re - enable watchdog
         EDIS:
         Gpio_Select();
                                              // Setup Pin multiplexing
         Setup_ePWM1A();
                                              // Initialize ePWM1A output signal
```

- 17. Run the code (F8). The program code will produce a 1 kHz signal at output ePWM1A (header J1-17 on the Piccolo-USB-Stick). Note: ground is available at pin J1-32 or J1-28.
- 18. Use a scope to inspect this signal. The output look like the following picture:

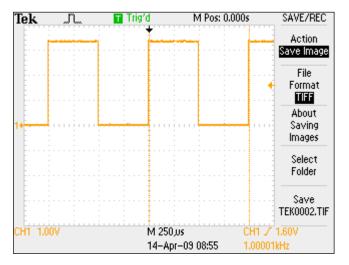

- 19. Optional exercise: experiment with different frequencies by changing the value for register TBPRD!
- 20. Optional Hardware: Make your frequency audible! By adding the following circuitry to your Piccolo-USB-Stick, we can drive a small buzzer!

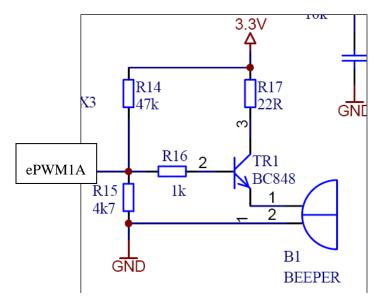

For device B1 ("beeper") you can use a Digisound F/SMD8585JSLF (Mouser Part # 847 - FSMD8585JS) or a Digisound F/PCW04A.

#### END of LAB 7\_1

# Lab 7\_2: Generate a 3 - phase signal system

Now let us experiment with a 3-phase system and phase shifts of 120° and 240° between the signals. We will use ePWM1A, ePWM2A and ePWM3A for this exercise. Signal ePWM1A will be the master phase and ePWM2A and ePWM3A will trail at 120° and 240°.

# Lab 7\_2: Generate a 3 phase system Objective:

- Generate three 1 KHz square wave signals at ePWM1A, 2A and 3A with duty cycles of 50 % and a phase shift of 120° and 240° between the signals
- Measure all three signals with an oscilloscope
- Registers involved:

• TBPRD: define signal frequency

• TBCTL: setup operating mode and time prescale

AQCTLA: define signal shape for ePWM1A

TBPHS: definition of the phase shift for 2A and 3A

$$TBPRD = \frac{1}{2} * \frac{T_{PWM}}{T_{SYSCLKOUT} * CLKDIV * HSPCLKDIV}$$

7 - 11

# **Objective**

The objective of this lab is to generate a set of 3 square wave signals of 1 kHz each at lines ePWM1A, 2A and 3A. With the help of a 4-channel oscilloscope connected to header J1-17, J1-27 and J1-21 of the Piccolo - USB - stick we can monitor the signal.

#### **Procedure**

## **Open Project File**


- 1. If not still open from Lab7\_1, re-open project **Lab7A.pjt.**
- 2. Open file "Lab7\_1.c" and save it as "Lab7\_2.c"
- 3. Exclude file "Lab7\_1.c" from build. Use a right mouse click at file "Lab7\_1.c", and enable "Exclude File(s) from Build".

# **Modify Source Code**

4. In the file "Lab7\_2.c", change the function name "Setup\_ePWM1A()". Since we will also initialize ePWM2A and ePWM3A with this function, the function name is now

- somewhat misleading. Change the name into "Setup\_ePWM()", including the function prototype and the calling line in the "main()" loop.
- 5. Next, in the local function "Gpio\_select()", add instructions to initialize the pin functions of GPIO2 and GPIO4 to ePWM2A and ePWM3A.
- 6. In the function "Setup\_ePWM()", repeat the initialization for ePWM1A with the same instructions for ePWM2A and ePWM3A. Apply identical values now to the following registers:
  - EPwm2Regs.TBCTL
  - EPwm2Regs.TBPRD
  - EPwm2Regs.AQCTLA
  - EPwm3Regs.TBCTL
  - EPwm3Regs.TBPRD
  - EPwm3Regs.AQCTLA

If you now recompile, load and test your new code, you should obtain 3 identical 1 kHz - signals with zero phase-shift between the 3 ePWM lines. Note. ePWM1A is available at J1-17, ePWM2A at J1-27 and ePWM3A at J1-19.

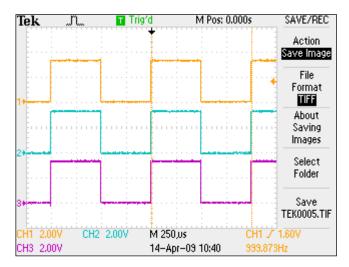

7. Now let us add the phase shifts between ePWM1A, ePWM2A and ePWM3A. To do so, we will have to program the phase registers of ePWM2A and ePWM3A. We must also define ePWM1A as the master phase to generate a SYNCOUT pulse each time its counter register TBCNT equals zero. For ePWM2, we must allow a SYNCIN - pulse and also define SYNCIN as SYNCOUT to drive it into ePWM3 unit. Recall that the period register TBPRD of ePWM1A has been initialized with a value that corresponds to a time period of 1 millisecond. Now for ePWM2A and ePWM3A we need a phase shift of 1/3<sup>rd</sup> and 2/3<sup>rd</sup> of that value preloaded in register TBPHS.

Summary: In function "Setup\_ePWM()" add the following instructions:

#### EPwm1Regs.TBCTL:

• Sync Out Select: generate a signal if CTR = 0

#### EPwm2Regs.TBCTL:

- Set phase enable
- Sync Out Select: SYNCIN = SYNCOUT

#### EPwm2Regs.TBPHS:

- Load it with 1/3<sup>rd</sup> of TBPRD
- Since TBPHS is a union type, a valid access is made like this:

#### EPwm2Regs.TBPHS.half.TBPHS = ?????;

#### Epwm3Regs.TBCTL:


• Set phase enable

#### EPwm3Regs.TBPHS:

• Load it with 2/3<sup>rd</sup> of TBPRD

## **Build, Load and Test**

8. Now build, load and test the modified project. Using an oscilloscope you should see 3 time-shifted signals on ePWM1A, ePWM2A and ePWM3A:

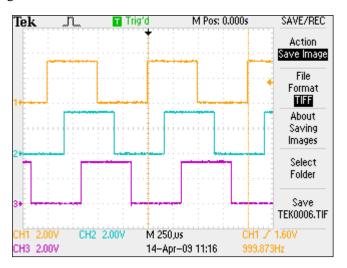

END OF LAB 7\_2

# Lab 7\_3: 1 kHz signal with variable pulse width

Now let us experiment with a variable pulse width signal. The starting point is again Lab7\_1. We will now use CpuTimer0 as the time-base, which is used to change the pulse width of the 1 kHz signal every 100 milliseconds between 0 and 100 %.

# Lab 7\_3: 1 KHz Signal with variable pulse width at ePWM1A

# **Objective:**

- Generate a 1 KHz square wave signal at ePWM1A with a variable duty cycle between 0 and 100%
- Measure the pulse with an oscilloscope
- Registers involved:

• TBPRD: define signal frequency

• TBCTL: setup operating mode and time prescale

CMPA: setup the pulse width for ePWM1A

AQCTLA: define signal shape for ePWM1A

$$TBPRD = \frac{1}{2} * \frac{T_{PWM}}{T_{SYSCLKOUT} * CLKDIV * HSPCLKDIV}$$

7 - 27

# **Objective**

The objective of this lab is to generate a square wave signal of 1 kHz at line ePWM1A. With the help of an oscilloscope connected to header J1-17 of the Piccolo - USB - Stick we can monitor the signal. Using CPU - Timer 0, we will change CMPA to generate a pulse width between 100 and 0%.

## **Procedure**

# **Open Project File**

- 1. In CCS, if not still open from Lab7\_2, re-open project **Lab7A.pjt.**
- 2. Open file "Lab7\_1.c" and save it as "Lab7\_3.c"
- 3. Exclude file "Lab7\_2.c" from build. Use a right mouse click at file "Lab7\_2.c", and enable "Exclude File(s) from Build".

4. First we have to initialize the interrupt system. To do so we have to link the following source code files to our project:

From  $C:\langle tidcs \rangle c28 \rangle dsp2802x \rangle v110 \rangle DSP2802x\_common \rangle source link:$ 

- DSP2802x\_PieCtrl.c
- DSP2802x\_PieVect.c
- DSP2802x DefaultIsr.c
- DSP2802x\_CpuTimers.c

Next, four add external function prototype declarations at the beginning of "Lab7 3.c":

```
extern void InitPieCtrl(void);
extern void InitPieVectTable(void);
extern void InitCpuTimers(void);
extern void ConfigCpuTimer(struct CPUTIMER_VARS *, float, float);
```

In main, after the function call of "Setup\_ePWM1A()" add new lines to initialize the interrupt system and CPU Timer 0:

```
InitPieCtrl();
InitPieVextTable();
EALLOW;
PieVextTable.TINT0 = &cpu_timer0_isr;
EDIS;
InitCpuTimers();
ConfigCpuTimer(&CpuTimer0,60,100);
PieCtrlRegs.PIEIER1.bit.INTx7=1;
IER |= 1;
EINT;
CpuTimer0Regs.TCR.bit.TSS = 0;
```

5. In file "Lab7 3.c" edit function "Setup ePWM1A":

We will again use count up/down mode, so we can keep the existing setup for bit field TBCTL.CTRMODE. However, now we would like to set ePWM1A to 1 on "CMPA - up match" and to clear ePWM1A on event "CMPA - down match. Change the setup for register AQCTLA accordingly!

Next, add a line to initialize CMPA to 0, which will define a pulse width of 100%:

EPwm1Regs.CMPA.half.CMPA = 0;

6. CpuTimer0 will request an interrupt every 100 microseconds. In step 4 we connected this interrupt to a function "cpu timer0 isr()". Now we have to prepare this function.

First, define a function prototype at the beginning of "Lab7 3.c":

#### interrupt void cpu\_timer0\_isr(void);

- 7. At the end of "Lab7\_3.c" add function "cpu\_timer0\_isr()". Take into account:
  - Increment the value in register CMPA with each interrupt execution until it equals the value in TBPRD thus we will change the pulse width gradually from 100% to 0%.
  - Optionally, you can add a second sequence to increase the pulse width of ePWM1A again back to 100%.
  - At the end of this function acknowledge that interrupt service:


#### PieCtrlRegs.PIEACK.all = 1;

Note: All registers of ePWM1 are readable and writable. To compare the current value of CMPA against TBPRD you can use:

if (EPwm1Regs.CMPA.half.CMPA < EPwm1Regs.TBPRD) ...

#### **Build, Load and Test**

8. Now build, load and test the modified project. A screenshot of signal ePWM1A could look like this:

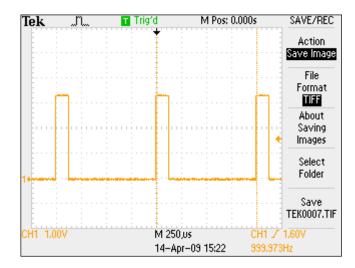

Result: The pulse width of your signal should change gradually between 100% and 0%.

END of LAB 7\_3

# Lab 7\_4: A pair of complementary 1 kHz - Signals

Most power electronic systems require pairs of PWM pulse series to control two power switches in such a way, that if one switch is on, the other switch is off. In the following exercise you will modify Lab7\_3 to generate a pair of output pulses at ePWM1A and ePWM1B. Again CpuTimer0 will be used as the time-base to change the pulse width of the 1 kHz signal every 100 milliseconds between 0 and 100 %.

# Lab 7\_4: a pair of complementary 1 KHz signals at ePWM1A and ePWM1B

# **Objective:**

- Generate a 1 KHz square wave signal at ePWM1A with a variable duty cycle between 0 and 100%
- Generate a complementary signal at ePWM1B
- Measure the pulses with an oscilloscope
- Registers involved:

• TBPRD: define signal frequency

TBCTL: setup operating mode and time prescale
 CMPA: setup the pulse width for ePWM1A / 1B

AQCTLB: define signal shape for ePWM1B
 AQCTLA: define signal shape for ePWM1A

7 - 28

# **Objective**

The objective of this lab is to generate a square wave signal of 1 kHz on the ePWM1A line and a second signal at ePWM1B with opposite voltage levels. With the help of an oscilloscope connected to header J1-17 (ePWM1A) and J1-21 (ePWM1B) of the Piccolo-USB-Stick, we can monitor the signals. Using CPU - Timer 0, we will change CMPA between 0 and TBPRD to generate a pulse width between 100 and 0%.

#### **Procedure**


# **Open Project File**

- 1. If not still open from Lab7 3, re-open project **Lab7A.pit** in Code Composer Studio.
- 2. Open file "Lab7 3.c" and save it as "Lab7 4.c"
- 3. Exclude file "Lab7\_3.c" from build. Use a right mouse click at file "Lab7\_3.c", and enable "Exclude File(s) from Build".

- 4. In file "Lab7\_4.c" edit function "Gpio\_select()". In the multiplex block enable line GPIO1 to drive ePWM1B.
- 5. In "Setup\_ePWM1A()" add a line to initialize register EPwm1Regs.AQCTLB. Recall that we initialized EPwm1Regs.AQCTLA to set ePWM1A on CMPA up and to clear ePWM1A on CMPA down match. For register EPwm1Regs.AQCTLB we will have to modify this setup to generate a complementary signal at ePWM1B.

## **Build, Load and Test**

6. Now build, load and test the modified project. An oscilloscope screenshot of signal ePWM1A (J1-17) and ePWM1B (J1-21) should look like the following picture:

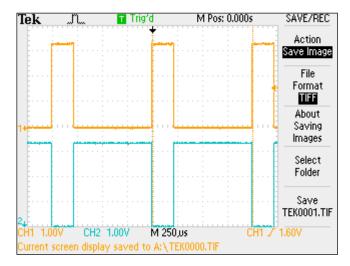


Result: The pulse width of your pair of signals should change gradually between 100% and 0 %.

END of LAB 7\_4

# Lab 7\_5: Independent Modulation on ePWM1A / 1B

Before we continue to discuss other modules of the ePWM - units we will perform an exercise to produce the pulse pattern, shown in Slide 7-29:

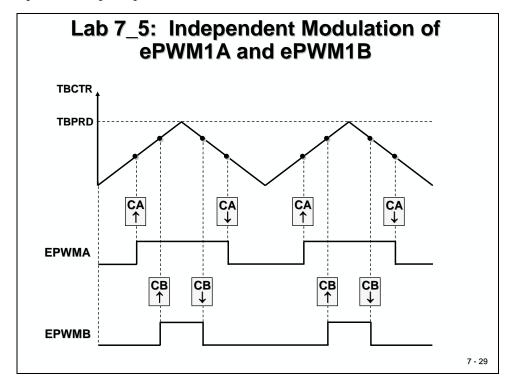

# **Objective**

The objective of this lab is to generate a square wave signal of 1 kHz at line ePWM1A and a second signal at ePWM1B with independent modulation of the pulses width. Signal ePWM1A will be controlled by register CMPA and ePWM1B by register CMPB. This time we will also use a real-time operating mode to change the values of CMPA and CMPB in a variable watch window while the program is running.

#### **Procedure**

# **Open Project File**

- 1. If not still open from Lab7\_4, re-open project **Lab7A.pjt** in Code Composer Studio.
- 2. Open file "Lab7\_4.c" and save it as "Lab7\_5.c"
- 3. Exclude file "Lab7\_4.c" from build. Use a right mouse click at file "Lab7\_4.c", and enable "Exclude File(s) from Build".
  - 4. In function "Setup\_ePWM1A()" change the line to initialize register EPwm1Regs.AQCTLB. The new setup for AQCTLB should be to set ePWM1B on CMPB - up and to clear ePWM1B on CMPB - down match.

5. After the line to initialize register TBPRD, add two lines to set register CMPA and CMPB to initially generate a pulse width of 50%.


# EPwm1Regs.CMPA.half.CMPA = EPwm1Regs.TBPRD / 2; EPwm1Regs.CMPB = EPwm1Regs.TBPRD / 2;

Note the difference between the structure data types of the two registers. This difference is caused by a second operating mode, called "High Resolution PWM" (HRPWM), which is available only for the signal line(s) ePWMxA. To support this mode, TI has enhanced the structure type for register CMPA.

6. In function "cpu\_timer0\_isr()" remove all instructions to change the pulse width by register CMPA. We will use a fixed pulse width for this exercise, initially 50% for both ePWM1A and ePWM1B.

## **Build, Load and Test**

7. Now build, load and test the modified project. A oscilloscope screenshot of signal ePWM1A and ePWM1B should look like this:

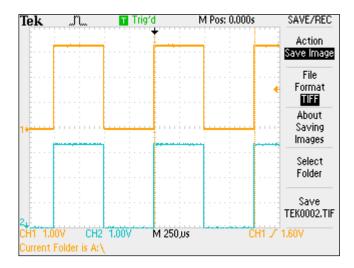

8. Stop the code execution:

Target → Halt, followed by

Target → Reset CPU

9. Now open a Watch Window:

#### View → Watch

In window "Watch (1)" add the two variables:


EPwm1Regs.CMPA.half.CMPA and EPwm1Regs.CMPB

# **Realtime Debug Mode**

10. Enable and Run "Real Time Debug Mode":

#### Scripts → Realtime Emulation Control → Run\_Realtime\_with\_Restart


In the Watch Wiindow, enable "Continuous Refresh":

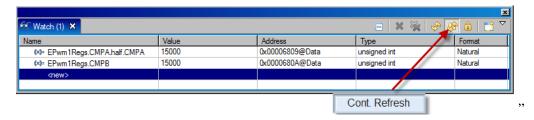

Your Watch window should display the current values for CMPA and CMPB.

Now, while the code is still running, change the values in CMPA and CMPB to 7500 and 22500 respectively.

The result should look like:

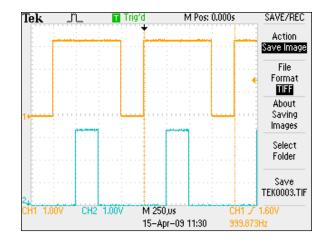

Try other combinations for CMPA and CMPB and verify the changes with your scope!

11. If you are done with this exercise, it is important to fully halt the DSC. Since we are currently running in real time mode, we have to apply a different command sequence:

Scripts → Realtime Emulation Control → Full\_Halt\_with\_Reset

END of LAB 7\_5

# Lab 7 6: Dead Band Unit on ePWM1A / 1B

# **Objective**

The objective of this lab is to introduce a delay time for rising edges in a pair of complementary PWM signals at ePWM1A and ePWM1B. The desired operating mode is "Active High Complementary" (AHC) and the two output signals are generated from input signal ePWM1A - in from the action qualifier unit.

# Lab 7\_6: Dead Band Unit for ePWM1A and ePWM1B

# **Objective:**

- Add a delay time for rising edges on a pair of complementary signals ePWM1A and ePWM1B
- Active High Complementary (AHC) Mode
- Input signal to Dead-Band Unit is ePWM1A
- Dead Band Unit will generate ePWM1A and ePWM1B
- Use Lab7\_4 as starting point
- New Registers involved:

DBRED: Dead Band Unit Rising Edge Delay
 DBFED: Dead Band Unit Falling Edge Delay
 DBCTL: Dead Band Unit Control Register

7 - 36

#### **Procedure**

# **Open Project File**

- 1. If not still open from Lab7 5, re-open project **Lab7A.pit** in Code Composer Studio.
- 2. Open file "Lab7\_4.c" and save it as "Lab7\_6.c"
- 3. Exclude file "Lab7\_5.c" from build. Use a right mouse click at file "Lab7\_5.c", and enable "Exclude File(s) from Build".
- 4. In function "cpu\_timer0\_isr()" remove all instructions to change the pulse width by register CMPA. We will use a fixed pulse width of 50% for this exercise, both for ePWM1A and ePWM1B.
- 5. In the function "Setup\_ePWM1A()", initialize the pulse width to 50% of TBPRD:

#### EPwm1Regs.CMPA.half.CMPA = EPwm1Regs.TBPRD / 2;

- 6. Next, in the function "Setup\_ePWM1A()", remove the instruction to initialize register AQCTLB. When using the dead band unit both output pulse sequences ePWM1A and ePWM1B are usually derived from a single input signal, usually from internal signal ePWM1A of the action qualifier module.
- 7. Finally, in the function "Setup\_ePWM1A()", add lines to initialize the dead band unit. Delay times are calculated in multiples of TBCLK, which we calculated at the beginning of Lab7\_1 directly from SYSCLKOUT with CLKDIV and HSPCLKDIV set to 1. In case of the F28027USB stick at 60 MHz TBCLK equals to 16.666 ns. In our example we will setup a delay time of 10 microseconds, just as an example.

#### EPwm1Regs.DBRED = 600;


#### EPwm1Regs.DBFED = 600;

To initialize register DBCTL, we have to take into account switches S0 to S5 of slide 7-33:


- Set S4 and S5 to 0: this way we will solely use input signal ePWM1A from unit AQCTL to generate the two output signals ePWM1A and ePWM1B.
- Set S2 = 0 and S3=1 to invert the polarity of signal ePWM1B against input ePWM1A.
- Set S0 = 1 and S1 = 1 to include a time delay for both switching points

# **Build, Load and Test**

8. Now build, load and test the modified project. A oscilloscope screenshot of signal ePWM1A and ePWM1B should look like this, when you trigger at the rising edge of channel 1 (ePWM1A, J1-17):

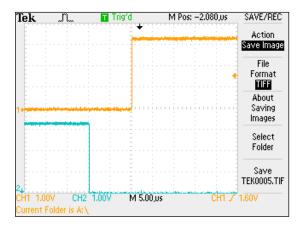

If you trigger at the falling edge of channel 1 (ePWM1A, yellow), you should see again a delayed rising edge, now on signal ePWM1B (blue, J1-21):

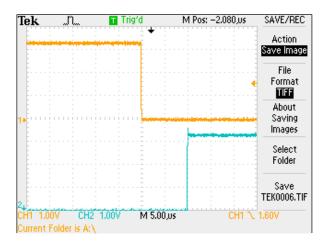

END of LAB 7\_6

# Lab 7\_7: Chopped Signals at ePWM1A / 1B


# **Objective**

We will add a chopper frequency modulation to a solution of one of the previous labs, that is -Lab7\_5. In Lab7\_5 we controlled the pulse width of ePWM1A by register CMPA independently of ePWM1B, which was controlled by CMPB. The objective now is to chop the active phase of the pulses at ePWM1A and ePWM1B with a higher frequency.

# Lab 7\_7: Chopper Mode Signals add ePWM1A and ePWM1B

# **Objective:**

- The pair of complementary signals ePWM1A and ePWM1B will be modulated by a chopper frequency of 1.5625 MHz
- Chopper Mode Duty Cycle = 50%
- One shot pulse width = 800 ns
- Use Lab7 5 as starting point

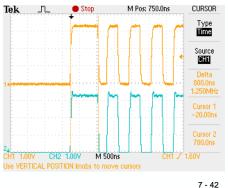

## **Procedure**


# **Open Project File**

- 1. If not still open from Lab7 6, re-open project **Lab7A.pit** in Code Composer Studio.
- 2. In project "Lab7" open file "Lab7\_5.c" and save it as "Lab7\_7.c"
- 3. Exclude file "Lab7\_6.c" from build. Use a right mouse click at file "Lab7\_6.c", and enable "Exclude File(s) from Build".
- 4. In function "Setup\_ePWM1A()", initialize the chopper module. Recall that SYSCLKOUT has been set to 60 MHz. For the chopper unit the input clock is 60MHz / 8 = 7.5MHz, e.g. a period of 133.33 ns. In register "EPwm1Regs.PCCTL":

- Set chopper frequency to 1.5 MHz, e.g. a period of 666 ns
- Set chopper duty cycle to 50%
- Set one shot pulse to 800 ns
- Enable the chopper unit.

# **Build, Load and Test**

5. Build, load and test the modified project. A oscilloscope screenshot of signal ePWM1A and ePWM1B should look like this, when you trigger at the rising edge of channel 1 (ePWM1A):

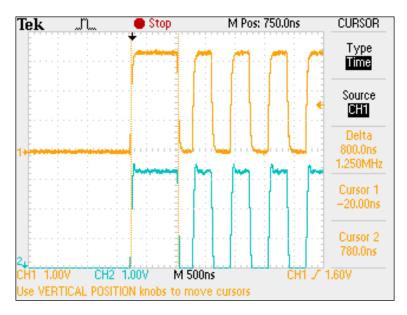

The active phases of the signals have been chopped with a frequency of 1.5 MHz and the first pulse is active for 800 ns.

END of LAB 7\_7

# Lab 7\_8: Trip Zone protection with TZ6

# **Objective**

Unfortunately the Piccolo - USB Stick does not have a push-button. However, we can use a standard GPIO - pin (GPIO18) as the source for an over-current signal. We can toggle this pin periodically every 2 seconds by software. We will use Trip Zone signal /TZ1 which is multiplexed with input signal GPIO12. The objective is to force both ePWM1A and ePWM1B "cycle by cycle" to low in case of a low active /TZ1.

# Lab 7\_8: Over Current Protection with Trip Zone Signals TZx Objective:

- Trip Zone Signal TZ1 (GPIO12) will be connected to GPIO18
- Output GPIO18 will be toggled every 2 seconds. If low, ePWM1A and ePWM1B will be forced to low on a cycle by cycle base
- Use Lab7\_5 as starting point
- New registers in this lab:

TZCTL: Trip Zone ControlTZSEL: Trip Zone Select

TZEINT: Trip Zone Enable InterruptTZCLR: Trip Zone Clear Interrupt Flags

#### **Procedure**

# **Open Project File**

- 1. In project "Lab7A" open file "Lab7\_5.c" and save it as "Lab7\_8.c"
- 2. Exclude file "Lab7\_7.c" from build. Use a right mouse click at file "Lab7\_7.c", and enable "Exclude File(s) from Build".
- 3. In the function "Gpio\_select()", set multiplex register GPAMUX2 to use /TZ1 for GPIO12. In Register GPADIR set GPIO18 to output and in GPADAT set bit GPIO18 to 1.
- 4. In the function "Setup\_ePWM1A()", initialize the trip zone registers.

- In register "EPwm1Regs.TZCTL" set TZA and TZB to force ePWM1A and ePWM1B to zero in case of an active TZ1.
- In register "EPwm1Regs.TZSEL" selects TZ6 as source for a one shot over current signal. In the event of an active TZ6 (we push button PB1), both lines ePWM1A and ePWM1B will be switched off permanently.
- Remember that both registers are EALLOW protected, so please do not forget to open / close the access to these registers.
- 5. Next, in the Interrupt Service Routine "cpu\_timer0\_isr()", add a line to increment the interrupt counter:

#### CpuTimer0.InterruptCount++;


If this variable has reached value 10, toggle pin GPIO18 and clear CpuTimer0.InterruptCount.

6. In function "main()", change parameter 3 of the function call "ConfigCpuTimer()" to 200 milliseconds:

#### ConfigCpuTimer(&CpuTimer0,60,200000);

#### **Build, Load and Test**

- 7. Use a wire and connect J1-8 (GPIO12) to J1-29 (GPIO18).
- 8. Build, load and test the modified project. A oscilloscope screenshot of signal ePWM1A and ePWM1B should show the desired pattern at ePWM1A an ePWM1B:

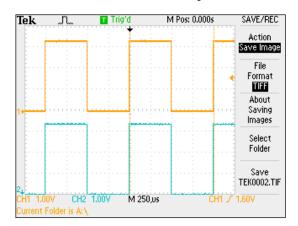

9. After a runtime of two seconds, the signals should disappear and both lines should be permanently zero. That is the result of the over current signal (GPIO18), which was generated after that time.

## **One Shot Mode**

10. Now let us modify the code in such a way, that a low active GPIO18 will request a cycle-by-cycle switch off of the two signals ePWM1A and ePWM1B.

• In the function "Setup\_ePWM1A()", change register "EPwm1Regs.TZSEL" so that TZ6 will now be the source for a cycle-by-cycle over current signal, and no longer for a one-shot procedure.

## Re-Build, Load and Test

- 11. Build, load and test the modified project. Please do not forget to reset the DSC before you perform a new test. This is always a good practice, since the chip will always start from a known state! Here once more is the sequence:
  - Debug → Reset CPU
  - Debug → Restart
  - Debug 

    Go Main
  - Debug → Run

The scope should again show the pulse sequences at ePWM1A and ePWM1B.

Now every 2 seconds the signals ePWM1A and ePWM1B should fade out to ground and remain at this ground voltage. Then 2 seconds later, the pulse pattern at ePWM1A and ePWM1B should reappear again. That's why we this time initialized the F2833x to resume the PWM operation on a cycle-by-cycle basis!

# Add an Interrupt Service

Although we do not have a real power stage system and just the Piccolo-USB-Stick, it still allows us also to perform an exercise, which uses an interrupt service - routine in the event of an over-current situation.

12. At the beginning of "Lab7\_8.c", add a prototype for an interrupt service routine:

#### interrupt void ePWM1\_TZ\_isr(void);

13. In "main()", look for the line in which we change the entry in PieVectTable for TINT0. After this line, add a new line to replace the entry for EPWM1\_TZINT:

PieVectTable.EPWM1\_TZINT = &ePWM1\_TZ\_isr;

14. Interrupt EPWM1\_TZINT is wired to PIE - interrupt line INT2 bit 1. We have to enable this line. In "main()", search for the line where we enabled PIEIER1.bit.INTx7. Add a new line to also enable interrupt 2.1:

#### PieCtrlRegs.PIEIER2.bit.INTx1 = 1;

15. Change the line "IER = 1;" so that the two lines INT1 and INT2 are enabled:

#### IER |= 3;

- 16. In the function "Setup\_ePWM1A()", add a line to enable cycle-by-cycle interrupts in register EPwm1Regs.TZEINT. Include this new instruction in the EALLOW EDIS block!
- 17. At the end of "Lab7\_8.c", add the definition for the function "ePWM1\_TZ\_isr()". In this function include the following actions:
  - Clear the two flags "CBC" and "INT" in register "EPwm1Regs.TZCLR" to reenable TZ1 for the next interrupt service:

#### EPwm1Regs.TZCLR.bit.CBC = 1; EPwm1Regs.TZCLR.bit.INT = 1;

Remember that this register is EALLOW - protected!

• Now, because we "simulate" our over current signal TZ1 by a 2 seconds toggle signal, the duration of the "over-current" signal is exactly 2 seconds long. It means that TZ1 will trigger a next interrupt immediately after we return from interrupt function "ePWM1\_TZ\_isr()".

Recall that we have three different software activities in Lab7\_8:

- the "main()" loop, where we execute the watchdog service #1;
- the interrupt service "cpu\_timer0\_isr()", with watchdog service #2;
- the new interrupt service "ePWM1\_TZ\_isr()".

Because interrupt service "cpu\_timer0\_isr()" has higher priority than "ePWM1\_TZ\_isr()", it will interleave with our finger triggered series of interrupt requests. The problem is that the "main()" loop, and consequently our watchdog service #1, will be locked out!

Solution: Include the watchdog service #1 into the new interrupt service function "ePWM1\_TZ\_isr()":

#### SysCtrlRegs.WDKEY = 0x55;

Remember that this register is also EALLOW - protected!

• To indicate, that we are executing code from the new interrupt service routine "ePWM1\_TZ\_isr()", add a line to toggle LED GPIO34:

#### GpioDataRegs.GPBTOGGLE.bit.GPIO34 = 1;

• To acknowledge that we are done with the interrupt service in PIE group 2, add:

#### PieCtrlRegs.PIEACK.all = 2;

## Re-Build, Load and Test

- 18. Build, load and test the modified project. Please do not forget to reset the device before you perform a new test. This is always a good practice, since the chip will always start from a known state! Here's ones more the sequence:
  - Debug → Reset CPU
  - Debug → Restart
  - Debug → Go Main
  - Debug → Run

The oscilloscope should again show the pulse sequences at ePWM1A and ePWM1B.

As before, every 2 seconds the signals should fade out to ground and reappear after that pause.

LED LD2 (GPIO34) should be OFF for 2 seconds, then half on for 2 seconds (that is where we permanently get TZ1- interrupts and toggle the LED frequently, and then 2 seconds ON.

END of Lab7\_8

# Lab7\_9: ePWM Sine Wave Modulation


# **Objective**

The F28027 Piccolo USB Stick is used to generate a sine wave signal at ePWM1A. Channel ePWM1A is set up in standard 16-bit resolution. The generated signal is connected to a first order passive low pass filter R12 / C15. The filter output signal can be monitored at header J1-31 ("HR-DAC") of the stick.

# Lab 7\_9: Sine Wave PWM signal at ePWM1A


# **Objective:**

- Generate a sine wave modulated pulse sequence at ePWM1A
- ePWM1A carrier frequency is 500 KHz
- Sine wave frequency is 976 Hz

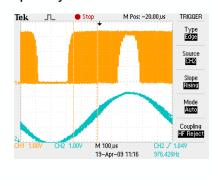

7 - 55

Channel ePWM1A is set up for a 500 kHz PWM frequency, ePWM1 compare down event triggers an interrupt service routine (ISR), according to the frequency the trigger appears every 2.000 ns.

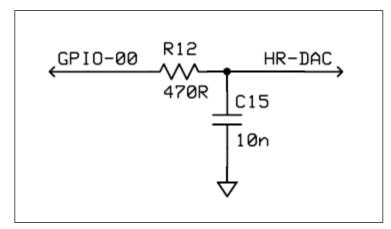


The ISR with a code execution time of 630ns takes advantage of the Boot-ROM sine wave lookup-table to calculate the next compare value for the next ePWM1A period. The lookup-table consists of 512 values in I2Q30-format and is located at address 0x3FE000. Every ISR call is used to read the next entry of this table, thus a full period of the resulting sine wave takes 512 \* 2000 ns = 1024  $\mu$ s. The synthesized sine wave signal has a frequency of  $1/1024\mu s = 976$  Hz. Due to the type of look-up values in I2Q30-format, functions of a library called "IQmath" are used to calculate the next value for the duty cycle.

Although we have not discussed the background of fixed-point binary mathematics and especially of Texas Instruments IQMath yet, we will use this library in a "black box" method. We will resume the discussion of this mathematical approach in a later chapter of this teaching course.

#### **Procedure**

#### Install IQMath

If not already installed on your PC, you will have to install the IQMath library now. The standard installation path is "C:\tidcs\c28\IQmath":

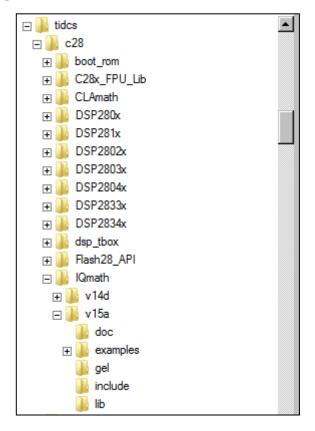


If you are in a classroom and you do not have administrator installation rights, ask your teacher for assistance. You can find the installation file under number "sprc087.zip" in the utility part of this CD-ROM or at the Texas Instruments Website (www.ti.com).

# **Open Project File**

- 1. In project "Lab7A" open file "Lab7\_8.c" and save it as "Lab7\_9.c"
- 2. Exclude file "Lab7\_8.c" from build. Use a right mouse click at file "Lab7\_8.c", and enable "Exclude File(s) from Build".
- 3. Change Build options.

We have to extend the preprocessors include search path. In the "C/C++" perspective, in the project window right click at project "Lab7" and open "Properties". In the "C/C++ Build" category, open "Include Options:" and add a new entry:

#### C:\tidcs\c28\IQmath\v15a\include

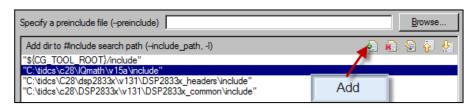

Close the "C/C++ Build" options menu with <OK>

4. Link the IQmath library to your project. Right click at project "Lab7A" and select function "Link Files to Project. Link:

#### C:\tidcs\c28\IQmath\v15a\lib\IQmath\_fpu32.lib

5. At the beginning of "Lab7\_9.c" include the header file for IQmath:

#### #include "IQmathLib.h"

Next and also at the beginning of "Lab7\_9.c", add a new global variable "sine\_table[512]" of data type "\_iq30" to "Lab7\_9.c":

# #pragma DATA\_SECTION(sine\_table, "IQmathTables"); \_iq30 sine\_table[512];

The pragma statement is a directive for the compiler to generate a new data section for "sine\_table". The linker command file "28027\_RAM\_lnk.cmd", which is already part of our project, will connect the section "IQmathTables" to physical address 0x3FE000, which is where our lookup table is stored in ROM.

In "Lab7\_9.c" remove everything that is related to CpuTimer0, including external function prototypes, the call of functions "InitCpuTimers()", "ConfigCpuTimer()" and Interrupt Service Routine "cpu\_timer0\_isr()", including its prototype and definition.

6. Also at the beginning of "Lab7\_9.c" replace the function prototype of ISR "ePWM1\_TZ\_isr()" by a new interrupt service function prototype:

#### interrupt void ePWM1A\_compare\_isr(void);

7. In main, remove the entry instruction to write into "PieVectTable.EPWM1\_TZINT" and add a new instruction:

#### PieVectTable.EPWM1\_INT = &ePWM1A\_compare\_isr;

PWM1 interrupts are connected to PIE group 3, bit 1. Therefore change the line to enable PIE interrupts into:

#### PieCtrlRegs.PIEIER3.bit.INTx1 = 1;

Change register IER to allow interrupts at line 3:

#### IER |= 4;

- 8. In the while(1) loop of "main()" keep just the instruction to service the watchdog instruction #1 (value 0x55) to register WDKEY. Recall that register WDKEY is EALLOW protected!
- 9. Next, in the function "Gpio\_select()", just keep ePWM1A as the PWM output signal. Remove the instructions to enable lines ePWM1B and TZ1.
- 10. In the function "Setup\_ePWM1A()", change the period of ePWM1 to 500 kHz. In up/down mode the value for TBPRD is calculated by:

$$TBPRD = \frac{1}{2} * \frac{T_{PWM}}{T_{SYSCLKOUT} * CLKDIV * HSPCLKDIV}$$

with CLKDIV and HSPCLKDIV both set to "divide by 1" and  $T_{SYSCLKOUT} = 16.666$  ns. TBPRD should be initialized to 60.

- 11. Then in the function "Setup\_ePWM1A()", remove the initialization lines for registers CMPB an AQCTLB, since we will not generate a signal on ePWM1B.
- 12. At the end of function "Setup\_ePWM1A()", remove the code to initialize the trip zone unit, including all instructions for registers TZCTL, TZSEL and TZEINT.
- 13. At the end of function "Setup\_ePWM1A" add code to initialize the Event Trigger module. In register "ETSEL" enable bit "INTEN" and set bit field "INTSEL" to select an interrupt request, if CTRD = CMPA (counter down matches CMPA). In register "ETPS" set bit field "INTPRD" to request an interrupt on first event.
- 14. At the end of "Lab7\_9.c" add the definition of function "ePWM1A\_compare\_isr()":

# interrupt void ePWM1A\_compare\_isr(void) {

First define a static variable "index" and initialize it to zero. This variable will be used as an index into lookup-table "sine\_table[512]":

#### static unsigned int index = 0;

Next we have to service the second half of the watchdog - key sequence to register WDKEY (value 0xAA). Remember that this register is EALLOW protected!

Now we have to calculate a new value for register CMPA. Here is the line:

#### EPwm1Regs.CMPA.half.CMPA =

#### EPwm1Regs.TBPRD -\_IQsat( \_IQ30mpy((sine\_table[index]+\_IQ30(0.9999))/2, EPwm1Regs.TBPRD), EPwm1Regs.TBPRD,0);

Confusing, isn't it?

Here is an attempt to explain it, should you be interested in the details:

- Recall, the difference between TBPRD and CMPA defines the pulse width of the PWM signal. The bigger the difference, the bigger the pulse. It means that we have to subtract a percentage value from TBPRD to define the next pulse width and store this percentage value in CMPA.
- To find that next value to be subtracted from TBPRD we have to access the sine table. Variable "index" points into this table, which consists of 512 entries for a unit circle of 360 degree. The value taken from this table is in I2Q30-Format and between 0 for sin(0), 1 for sin(90°), 0 for sin(180°), -1 for sin(270°) and again 0 for sin(360°).
- So we read a number between +1 and -1, which corresponds to the current amplitude of the sine. However, we cannot use a negative number for the calculation of a result between 0 and 100% of TBPRD. What we do is we add an offset of +1 in front of an IQ-number (\_IQ30(0.9999)) to obtain numbers between 0 and +2. Next we divide the result by 2 to scale it into a range between 0 and 1 (or 0% and 100%).
- Now we multiply this relative number (0 to 1) by TBPRD with a call of function "\_IQ30mpy()". If TBPRD has been set to 100, the result will be a number between 0 and 100.
- The function "\_IQsat()" is a saturation function that will limit the first parameter (our result) between maximum (parameter 2, TBPRD) and minimum (parameter 3, zero). To call this function is just a precaution to avoid any calculation overflows, which could result in catastrophic output signals, where a large positive signal suddenly becomes a large negative signal.

After this calculation, still inside "ePWM1A\_compare\_isr()", we have to increment variable "index" and to reset it, if we are at the end of the sine\_table:

```
index +=1;
if( index > 511) index = 0;
```

Finally we have to clear the interrupt flags of the event trigger module and the PIE-unit:


```
EPwm1Regs.ETCLR.bit.INT = 1;
PieCtrlRegs.PIEACK.all = 4;
```

Close the function "ePWM1A\_compare\_isr()" with a closing curly brace (}).

# **Build, Load and Test**

15. Build, load and test the modified project. Please do not forget to reset the DSC before you perform a new test. This is always a good practice, since the chip will always start from a known state! Here's the sequence:

- Project → Rebuild Active Project
- Target → Debug Active Project
- Target → Reset → Reset CPU
- Target → Restart
- Target → Go main
- Target → Run (F8)
- 16. An oscilloscope should show the 500 kHz pulse sequence at ePWM1A (Header J1-17) and a sine wave signal of 976 Hz at HR-DAC (Header J1-31).

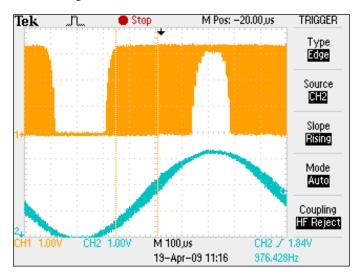

END of LAB 7\_9

# Lab7\_10: ePWM1A 1 kHz signal captured by eCAP1

# **Objective**

The F28027 Piccolo-USB-Stick is used to generate a 1 kHz square wave signal with a duty cycle of 50% on ePWM1A. We will use the eCAP1 unit to measure period and duty cycle of this signal.

Note: for this exercise you will need to connect header J1-17 (ePWM1A) to header J1-15 (eCAP1) of the Piccolo-USB-Stick.

#### **Procedure**

# **Open Project File**

- 1. In project "Lab7A", open the file "Lab7\_3.c" and save it as "Lab7\_10.c"
- 2. Exclude file "Lab7\_9.c" from build. Use a right mouse click at file "Lab7\_9.c", and enable "Exclude File(s) from Build".

#### **Edit Source File**

- 3. In the function "Gpio\_select()", select eCAP1 function for pin GPIO5. On the Piccolo-USB-Stick we can access eCAP1 via header J1-15, which is wired to pin GPIO5. Adjust register GPAMUX1 accordingly.
- 4. At the beginning of "Lab7\_10.c", add a function prototype for a new local function "Setup\_eCAP1()":

#### void Setup\_eCAP1(void);

We will also need a new interrupt service routine for eCAP1. Add a new prototype:

#### interrupt void eCAP1 isr(void);

- 5. At the end of "Lab7\_10.c" add the definition of the new function "Setup\_eCAP1()". The objective is to initialize eCAP1 to capture 3 edges of signal ePWM1A:
  - 1<sup>st</sup> capture: rising edge
  - 2<sup>nd</sup> capture: falling edge
  - 3<sup>rd</sup> capture: rising edge

#### For register ECCTL2:

- use continuous mode
- set wrap counter to "wrap after 4 captures"
- · do not re-arm
- enable counter
- disable the sync features
- select capture mode

For register ECCTL1:

- stop TSCTR immediately on Emulation Suspend
- prescaler : divide by 1
- enable capture load results
- edge select: CAP1 falling; CAP2 rising; CAP3 falling; CAP4 rising
- reset TSCTR on CAP4 event

#### For register ECEINT:

- enable event CAP3 interrupt request
- 6. In function "main()" add a line to call the function "Setup\_eCAP1()". The best position is directly after the function call "Setup\_ePWM1A()".
- 7. Next, in function "main()", add a line to enable eCAP1 interrupt. Recall that eCAP1 is connected to bit 0 in PIE group 4. Also, change the code line to enable core interrupts in register IER. For this new exercise we have to enable INT1 (CPU Timer 0) and INT4 (eCAP1).
- 8. Also, in function "main()", search for the line in which we changed the PieVectTable entry for the CPU Timer 0 interrupt service (TINT0) and add a new line to load a new interrupt service routine address into PieVectTable for eCAP1:

#### PieVectTable.ECAP1 INT = & eCAP1 isr;

9. At the beginning of "Lab7\_10.c" add two global variables:

```
Uint32 PWM_Period;
Uint32 PWM_Duty;
```

We will use the two variables to calculate the difference between CAP2 and CAP1 (duty) and CAP3 and CAP1 (period).

- 10. At the end of "Lab7\_10.c", add the definition of the interrupt service function "eCAP1\_isr()". Add the following commands to this function:
  - Clear flag "INT" in register ECCLR.
  - Clear flag "CEVT3" in register ECCLR. This will re-enable the CAP3 interrupt.
  - Calculate the differences:

```
PWM_Duty = (int32) ECap1Regs.CAP2 - (int32) ECap1Regs.CAP1;
PWM_Period = (int32) ECap1Regs.CAP3 - (int32) ECap1Regs.CAP1;
```

• Acknowledge the PIE - group interrupt 4:

#### PieCtrlRegs.PIEACK.all = 8;

- 11. In interrupt service routine "cpu\_timer0\_isr()", remove everything but the watchdog service instruction and the PIE acknowledge line.
- 12. Finally, in the function "Setup\_ePWM1A()", initialize register EPwmRegs.CMPA for a duty cycle of 50%, e.g. with the value of TBPRD/2.

# **Build, Load and Test**

13. Build the modified project.

#### Project → Rebuild Active Project


- 14. Use a wire to connect header J1-17(ePWM1A) to header J1-15 (eCAP1).
- 15. Load the modified code:

#### **Target** → **Debug Active Project**

16. Test the code:

#### Scripts → Realtime Emulation Control → Run\_Realtime\_with\_Restart

17. Open the Watch Window and add the variables "PWM\_Duty", "PWM\_Period" and "ECap1Regs.TSCTR" to it. By pushing the "Continuous Refresh" button (top left corner) update the window in realtime.

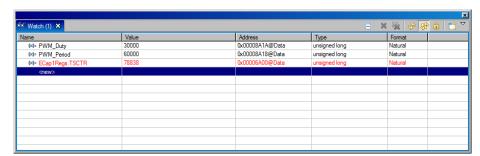

What do the values in "PWM\_Duty" and "PWM\_Period" mean? Remember that ePWM1A is a signal of 1 kHz with a period of 1 ms and a pulse width of 0.5 milliseconds. Our measurement unit has a resolution of 1/60MHz = 16.667 ns. Therefore the value of 60.000 for "PWM\_Period" translates into 60.000 \* 16.667ns = 1 ms.

18. Finally halt the DSC:

#### Scripts → Realtime Emulation Control → Full\_Halt\_with\_Reset

**END of LAB 7\_10**