


Lynx DATV receiver — on-screen overlay

Generated from source, not a live screenshot — layout, positions, and colour logic match the actual drawing code

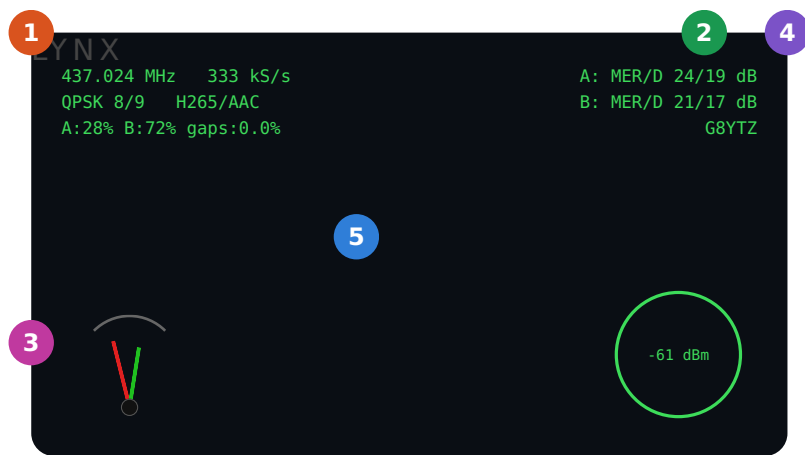

1 Top-left: tuning info

Frequency and symbol rate on one line, modcod and codec on the next, and (diversity only) a live A/B/gaps split from the combiner's own rolling stats as the third line. Left margin is ~1 character in from the screen edge. Moved here from bottom-left to make room for the PPM meter below.

2 Top-right: signal quality

Diversity mode: one row per tuner (A/B) with MER and margin in dB, suppressed individually if that tuner has no valid lock. Non-diversity: a single row, no A/B: prefix. Callsign is always the last row.

3 Bottom-left: stereo PPM meter

A BBC-style Peak Programme Meter, calibrated PPM4 = -18dBFS, with genuine IEC 60268-10 ballistics. Independent red (left) and green (right) needles, driven by a live audio tap running separately from mpv. Optional round housing ("Full Fat" style, toggled from the Config page) shown here without it ("Skeleton").

4 Bottom-right: magic eye

A signal-strength gauge showing receive level in dBm (or stream bitrate in kbps when playing a network stream), independent of the text blocks above.

5 Opaque background and logo

Shown whenever mpv isn't actively displaying a locked picture (searching, idle, or mid-transition). Covers whatever mpv last decoded underneath, so a stale or frozen frame is never visible during acquisition or a mode switch.

Colour coding



Green = that tuner is genuinely locked.



Orange = searching, or a stale reading not currently trusted.