

Maintenance sheet version 9 for accumulation area (single mast, two levels)

Station name	NSE
People present	ARV, NBR, Pilots
Purpose	Maintenance installation / take-down / quick visit / emergency
Date	23-06-2022

Notes: 1 sonic ranger shipped, replace the broken one
 1xnew lufft shipped, replace the broken and 1xlufft assembly mount shipped to use on the upper lufft


AWS to do list		Check after maintenance			
Part	Shipped? (Y/N)	Replaced? (Y/N)	Number shipped/arrival	Number departure	
Radiometer	N	N	300534062416	350	Clean? ☒ Y / N
Iridium modem IMEI number	N	N	↓	↓	
Inclinometer/compass	N	N	Attached to the radiometer? Y / N		
Satellite antenna	N	N			
Wind sensor upper	N	N	Black box pointing toward the radiometer (i.e., along the boom)? Y / N		
Wind sensor lower	N	N	Black box pointing same direction as the radiometer? Y / N		
Temperature / humidity assembly upper	Y	Y	Fan spins? ☒ Y / N Sounds, OK? ☒ Y / N		
Temperature / humidity assembly lower	Y/N	N	Fan spins? ☒ Y / N Sounds, OK? ☒ Y / N		
Sonic ranger upper	Y/N	N	Old sensor with new membrane? Y / N		
Sonic ranger lower	Y/N	N	Old sensor with new membrane? Y / N		
Thermistor string	N	N			
Solar panel	N	N	Clean? ☒ Y / N NB: is not effective when partially covered		
GPS antenna	N	N	At top of logger enclosure? ☒ Y / N		
Data logger	N	N	CR1000 or <u>CR1000X</u> ?		
Logger enclosure	N	N	Replaced (including everything inside)? Y / N New desiccant bags? ☒ Y / N		
Battery box	Y	N	New box? Y / N New desiccant bags? Y / N		
Mast extension inserted?	N	N	How many inserted? How long? Notes:		
Mast	Y	N	New mast? Y / N New sensor boom? Y / N		

Metadata maintenance

	Arrival	Departure
Time difference between logger clock and UTC ($\pm$ mm:ss)	10 sec	
Download data to PC and/or change SD card (wait for green light)	☒ Y / N	☒ Y / N
Name of logger program		
Screen dump of values in fast scan mode	☒ Y / N	☒ Y / N
Photos of mast, sensors, logger box wiring etc. (more is better)	☒ Y / N	☒ Y / N
Mast tilt towards radiometer (- if looking up)	- 4.5 °	°
Mast tilt across boom looking from radiometer (- if clockwise)	1 °	°
Upper boom direction with radiometer relative to north	348° true/magn.	° true/magn.
Lower boom perpendicular to upper boom. If not, measure.	☒ Y / N °	Y / N °
Box on upper wind sensor exactly same direction as radiometer? If not, measure.	☒ Y / N °	Y / N °
Box on lower wind sensor exactly same direction as radiometer? If not, measure.	☒ Y / N °	Y / N °
Upper temperature / humidity height (bottom of casing – surface)	232 cm	232 cm
Lower temperature / humidity height (bottom of casing – surface)	110 cm	163 cm
Upper sonic ranger height (bottom of casing – surface)	210 cm	210 cm
Lower sonic ranger height (bottom of casing – surface)	81 cm	138 cm
Length of thermistor string on surface from surface marking	* cm	* cm
Apparent damage to sensors? If yes, which?	Y / N	Y / N

Notes:

- Distance between upper & lower boom: 63 cm
- we cut two wires due to wheel sensor not being able to spin after raising the boom

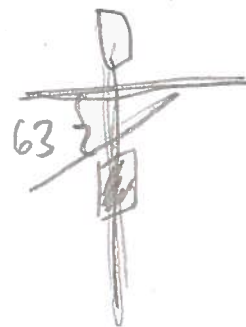

* not measured

Must-do at next visit:

- Asp-temp @ upper hull gives NaN (new and old both) which suggest problem w. wiring in box
- did not replace SR: bolted to boom