## B.2 Sizes and Applications of Individual Signs

Appendix B.2 provides:

- images of traffic signs
- dimensions of each sign in millimetres
- intended use of each sign

Sign sizes used in work zones should not be smaller than those normally required on the roadway.

Sign sizes are related to the roadway type—local road, low-speed road, arterial road, expressway, or freeway. Refer to the Ministry's Catalogue of Traffic Signs for specific sizes based on the sign and roadway type. Generally:

- Smaller dimensions apply to urban roadways where the regular posted speed is ≤ 60 km/h.
- Larger dimensions apply to rural roadways with a regular posted speed limit of ≥70 km/h, provided that there is sufficient room to accommodate the larger signs.
- Multilane divided roadways typically use oversized signs on both the right and the left side of the roadway. Signs erected on the left side may be erected in a closed lane, shoulder, or median. If sufficient width is not available on the left shoulder or median, a smaller sized sign may be used.

**Sign Sizes Marked with Asterisk (*)**

Sign sizes marked with an asterisk (*) may not be in the Ministry's Catalogue of Standard Traffic Signs. Confirm appropriate sign sizes for specific roadways and work activities.

*This page is intentionally blank.*


### B.2.1 Construction and Maintenance Signs


Construction signs are used to give notification of a roadway condition that is changed for, or potentially hazardous to, public traffic and workers.

The fluorescent orange sign colour indicates the temporary nature of the condition.

Signs should generally be placed sufficiently in advance of the condition to provide drivers with time to understand the information and respond appropriately. See *Section 6.6: Positioning of Temporary Traffic Control Devices* and *Sections 7 through 19.*

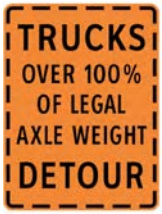
| **C-001 Series Traffic Control Person Ahead** | | |
|---|---|---|
|  <br>C-001-1<br><br>  <br>C-001-2 | Sign sizes (mm)<br><br>C-001-1 (750 x 750)<br><br>C-001-1xx (1200 x 1200)<br><br>C-001-2 (750 x 750)<br><br>C-001-2xx (1200 x 1200) | The TRAFFIC CONTROL PERSON AHEAD C-001-1 sign should be used in advance of any point at which a Traffic Control Person is stationed to control traffic through a work activity area.<br><br>It is always used in conjunction with other construction and maintenance signs.<br><br>The FLAGGER AHEAD C-001-2 sign may be used in advance of the C-001-1 sign in areas that require additional advance warning.<br><br>C-001-1 and C-001-2 signs should be promptly removed or covered whenever a Traffic Control Person is not on the roadway. |

| C-002 Series Crew Working - Maximum XX km/h | | |
|---|---|---|
|  <br>C-002-1 | Sign sizes (mm)<br><br>C-002-1<br>(450 x 900)<br><br>C-002-1x<br>(600 x 1200) | • The SURVEY CREW WORKING – MAXIMUM XX km/h C-002-1 sign is used to establish a Temporary Speed Zone, typically when survey crews are working on the travelled portion of the roadway (road lanes and shoulders).<br><br>It may also be used as a supplement to an R-004 Construction Speed Limit to remind drivers of the reduced speed as they approach, or are within, the work area.<br><br>See also the SURVEY CREW WORKING AHEAD C 003 sign below. |
|  <br>C-002-1 OL | C-002-1 OL<br>(175 x 280)<br><br>C-002-1 OL-x<br>(233 x 372) | • The CREW WORKING – MAXIMUM XX km/h C-002-2 sign is used to establish a Temporary Speed Zone, typically when crews are working on the travelled portion of the roadway (road lanes and shoulders). It may also be used as a supplement to an R-004 Construction Speed Limit to remind drivers of the reduced speed as they approach, or are within, the work area. |
|  <br>C-002-2 | C-002-2<br>(450 x 900)<br><br>C-002-2x<br>(600 x 1200) | • The FLAGGER WORKING – MAXIMUM XX km/h C-002-3 sign is used to establish a Temporary Speed Zone, typically when Traffic Control People are directing traffic. It may also be used as a supplement to an R-004 Construction Speed Limit to remind drivers of the reduced speed as they approach, or are within, the work area.<br><br>Distance overlays C-002-1 OL and C-002-2 OL may be used to show alternative speed options. |
|  <br>C-002-2 OL | C-002-2-OL<br>(175 x 280)<br><br>C-002-2-OL-x<br>(233 x 372) | |
|  <br>C-002-3 | C-002-3<br>(450 x 900)<br><br>C-002-3x<br>(600 x 1200) | |

| C-003 Survey Crew Working Ahead | | |
|---|---|---|
|  <br>C-003 | Sign sizes (mm)<br><br>C-003<br>(750 x 750)<br><br>C-003-x<br>(900 x 900) | • The SURVEY CREW WORKING C-003 sign should be used where survey work is in progress on or immediately adjacent to a travelled roadway that has not been closed to traffic.<br><br>• The SURVEY CREW WORKING AHEAD C-003-A sign may also be used, in conjunction with the C-003 sign, to provide additional advanced warning, especially in locations with high speeds and/or high traffic volumes.<br><br>• When drones are used, the C-003 and C-003-A signs may be supplemented by the DRONE SURVEY C-003-Ta or DRONE C-003-Tb tabs to provide additional information for motorists.<br><br>• The DRONE IN USE C-003-2 sign may also be used to supplement the C-003 sign if the drone is within sight of motorists on the highway.<br><br>• All signs in this series may be used in conjunction with the SURVEY CREW – MAXIMUM XX km/h C-002-1 sign if the survey crew supervisor decides that conditions warrant the temporary speed zone. |
|  <br>C-003-A | C-003-A<br>(750 x 750)<br><br>C-003-A-x<br>(900 x 900) | |
|  <br>C-003-Ta | C-003-Ta<br>(600 x 300)<br><br>C-003-Ta-x<br>(750 x 400) | |
|  <br>C-003-Tb | C-003-Tb<br>(750 x 750)<br><br>C-003-Tb-x<br>(900 x 900) | |
|  <br>C-003-2 | C-003-2<br>(750 x 750)<br><br>C-003-2-x<br>(900 x 900) | |
| **C-004 Crew Working Ahead** | | |
|  <br>C-004 | Sign sizes (mm)<br><br>C-004<br>(750 x 750)<br><br>C-004-xx<br>(1200 x 1200) | The CREW WORKING AHEAD C-004 sign is the primary warning sign for short-duration work.<br><br>It provides advance warning of crews and equipment carrying out a variety of tasks on or adjacent to a travelled roadway. |

**C-005 Series Detour Markers**

| | Sign sizes (mm) | |
|---|---|---|
|  C-005A | C-005A (600 x 450)<br>C-005-5Ax (750 x 600) | The DETOUR C-005 signs are used to mark detour routes. For all work other than short-duration work, C-005 markers should be post-mounted.<br>• C-005 markers with appropriate directional arrows should be used in advance of and beyond all decision points (and for confirmation where necessary) to assure drivers that they are following the detour.<br>• Where the detour involves a numbered route, appropriate C-005 markers should be erected with the appropriately numbered route marker.<br>• The DETOUR ROUTE C-005-B sign may be used as a supplemental confirmatory sign after a turn to inform motorists they are on the detour route<br>• The END DETOUR C-005-C sign is used to mark the end of the detour and informs motorists they are back on the original roadway.<br>• The STREET DETOUR custom C-005-D sign may be used as a supplement to detour signs within this series on local low-speed roadways or arterials. The street name utilized on these signs is the road where the closure occurs. It provides confirmatory information to motorists that they are following the correct detour, especially in locations with many alternative routes.<br>• The DETOUR LEFT/RIGHT C-005-LR1 signs are used in advance of a turn for the detour route. It tells motorists which direction to turn in order to continue following along the detour. |
|  C-005-B | C-005-B (600 x 400)<br>C-005-Bx (750 x 450) | |
|  C-005-C | C-005-C (600 x 400)<br>C-005-Cx (750 x 450) | |
|  C-005-D | C-005-D (W.T.S. x 400) | The approach to the beginning of a detour will generally be indicated by the DETOUR AHEAD C-006 series signs.<br>See *Section 19.6: Roadway Closure with Detour (≤ 60 km/h)* and *Section 19.7: Roadway Closure with Detour (≥ 70 km/h)* for how these signs may be used.<br>*continued →* |
|  C-005-LR1 | C-005-LR1 (600 x 450)<br>C-005-LR1x (750 x 600) | |

| **C-005 Series Detour Markers (continued)** | | |
|---|---|---|
|  <br>C-005-LR2 | Sign sizes (mm)<br><br>C-005-LR2<br>(600 x 450)<br><br>C-005-LR2x<br>(750 x 600) | The DETOUR LEFT/RIGHT AHEAD C-005-LR2 signs may be used as a supplement to the DETOUR LEFT/RIGHT C-005-LR1 signs to provide additional information and better prepare drivers for the turn ahead to stay on the detour route.<br><br>See *Section 19.6: Roadway Closure with Detour (≤ 60 km/h)* and *Section 19.7: Roadway Closure with Detour (≥ 70 km/h)* for how these signs may be used. |
| **C-006 Series Detour Ahead** | | |
|  <br>C-006-A | Sign sizes (mm)<br><br>C-006-A<br>(750 x 750)<br><br>C-006-Axx<br>(1200 x 1200) | The DETOUR AHEAD C-006-A sign is used to warn traffic of the beginning of a detour.<br><br>If the departure is abrupt, which is often the case in an urban block system, it may be necessary to:<br>• substitute for DETOUR AHEAD C-006-LR signs, or<br>• in higher speed/volume situations, use C-006-LR signs in advance of the detour, and a C-006-A signs further upstream. |
|  <br>C-006-LR | C-006-LR<br>(750 x 750)<br><br>C-006-LRxx<br>(1200 x 1200) | If the bypass route is short and adjacent to a work activity area—i.e., within the highway right-of-way—it is better to use a ROADSIDE DIVERSION AHEAD C-052-L/R sign.<br><br>They may also be used for turns on a detour route instead of DETOUR C-005-LR markers where special emphasis is required. |
|  <br>C-006-4Tx | C-006-4X<br>(900 x 1200) | For work zones which require overweight trucks to detour onto another route, the TRUCKS OVER 100% OF LEGAL AXLE WEIGHT DETOUR C-006-4X sign, in conjunction with the ARROW TAB C-006-4Tx should be used to direct heavy trucks onto the detour route.<br><br>Other custom signs for trucks may be developed for over height and over width purposes. |
|  <br>C-006-4X | C-006-4Tx<br>(900 x 300) | |

<table>
<tr><td colspan="3">C-007 Broken Pavement</td></tr>
<tr><td> 

C-007</td><td>Sign sizes (mm)<br><br>C-007<br>(750 x 750)<br><br>C-007-x<br>(900 x 900)</td><td>The BROKEN PAVEMENT C-007 sign should be used where sections of badly broken or potholed pavement exceed 20 metres in length.<br><br>Where a speed reduction is deemed necessary because of the pavement condition, an ADVISORY SPEED C-022 tab may be posted with the C-007 sign.<br><br>If the length of broken pavement is 2 kilometres or more, an ADVISORY DISTANCE C-024 distance tab may be included.<br><br>TEMPORARY HAZARD C-090 markers should be used with C-007 signs to mark the actual locations of the irregularities.</td></tr>
<tr><td colspan="3">C-008-1 Paving Next X km – Please Obey Signs<br>C-008-2 Seal Coating – Loose Gravel Next X km</td></tr>
<tr><td> 

C-008-1<br><br> 

C-008-2<br><br> 

C-008-OL</td><td>Sign sizes (mm)<br><br>C-008-1<br>(1200 x 900)<br><br>C-008-1xx<br>(2440 x 1220)<br><br>C-008-2<br>(1200 x 900)<br><br>C-008-2xx<br>(2440 x 1220)<br><br>C-008-OL<br>(230 x 200)<br><br>C-008-OLxx<br>(350 x 230)</td><td>The PAVING NEXT X km – PLEASE OBEY SIGNS C-008-1 sign should be installed in advance of all paving projects. The C-008-1 specifies the distance in kilometres of the paving project.<br><br>The SEAL COATING – LOOSE GRAVEL NEXT X km C-008-2 sign should be installed in advance of all seal coating projects. The C-008-2 specifies the distance in kilometres of the sealcoating project.<br><br>Distance overlays C-008-OL are available for revising existing C-008-1 and C-008-2 signs that are in good condition.</td></tr>
</table>

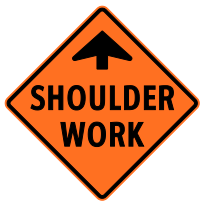
| C-009 Milling in Progress – Rumble Strips | | |
|---|---|---|
|  <br>C-009-1<br><br>  <br>C-009-2 | Sign sizes (mm)<br><br>C-009-1 (750 x 750)<br><br>C-009-1x (900 x 900)<br><br>C-009-2 (750 x 750)<br><br>C-009-2x (900 x 900) | The MILLING IN PROGRESS SHOULDER RUMBLE STRIPS C-009-1 sign is used to warn motorists of equipment, workers and potentially uneven surfaces caused by milling for shoulder rumble strips.<br><br>The MILLING IN PROGRESS CENTRE LINE RUMPLE STRIPS C-009-2 sign is used to warn motorists of equipment, workers and potentially uneven surfaces caused by milling for centre line rumble strips.<br><br>ADVISORY DISTANCE C-024 tabs should be used with both signs in the C-009 series to inform drivers of the expected distance for this condition. |
| **C-010 Uneven Pavement on Left/Right** | | |
|  <br>C-010-LR | Sign sizes (mm)<br><br>C-010-LR (750 x 750)<br><br>C-010-LRxx (1200 x 1200) | The UNEVEN PAVEMENT ON LEFT/RIGHT C-010 sign warns of a difference in elevation between pavement lifts on adjacent travel lanes.<br><br>(The LOW SHOULDER C-013 sign warns of a difference in elevation between the shoulder and the outer edge of a newly paved roadway.)<br><br>On two-lane, two-way roadways, the uneven hazard (high or low) will generally be on the centreline, and C-010-L signs are used for both directions of travel in advance of the section (and as required for confirmation throughout).<br><br>On multilane roadways, the uneven hazard will generally be on the lane line. In such cases, C-010-L signs are placed on the right shoulder and, where space is available, C-010-R signs are placed on the left or median shoulder.<br><br>The UNEVEN PAVEMENT ENDS C-016 sign is be used to mark the end of an uneven section of pavement. |

| | | |
|---|---|---|
| **C-011 Grooved Pavement**<br>**C-011-T Median and Shoulders Tab** | | |
|  <br>C-011<br><br>  <br>C-011-T | Sign sizes (mm)<br><br>C-011<br>(750 x 750)<br><br>C-011-xx<br>(1200 x 1200)<br><br>C-011-T<br>(600 x 300)<br><br>C-011-Txx<br>(900 x 450) | The GROOVED PAVEMENT C-011 sign should be used in advance of sections of milled pavement (and as required for confirmation throughout) which affects the handling of vehicles.<br><br>The MEDIAN AND SHOULDERS C-011-T tab may be used with the C-011 sign only where the grooved pavement condition is found on the median and shoulders and not in the travel lane(s). |
| **C-012 Soft Shoulder** | | |
|  <br>C-012 | Sign sizes (mm)<br><br>C-012<br>(750 x 750)<br><br>C-012-x<br>(900 x 900) | The SOFT SHOULDER C-012 sign should be used in advance of a section of shoulder that is either newly laid and not compacted or so softened by weather or other conditions that it presents a hazard to vehicles pulling off the travelled roadway.<br><br>If the soft shoulder condition is extensive, confirmatory C-012 signs may be required. |
| **C-013 Low Shoulder on Left/Right** | | |
|  <br>C-013-LR | Sign sizes (mm)<br><br>C-013-LR<br>(750 x 750)<br><br>C-013-LRxx<br>(1200 x 1200) | The LOW SHOULDER ON LEFT/RIGHT C-013 sign should be used on unfinished paving projects where the shoulders have not been brought up to the level of the new pavement and the drop-off is potentially hazardous.<br>• The C-013-R sign is erected on the right side of the roadway in advance of a low shoulder.<br>• Where traffic is required to use the left side of a roadway with a low shoulder, a C-013-L sign is erected on the left shoulder. |

| C-014 Fresh Oil | | |
|---|---|---|
|  <br>C-014 | Sign sizes (mm)<br><br>C-014<br>(750 x 750)<br><br>C-014-x<br>(900 x 900) | The FRESH OIL C-014 sign should be used to warn drivers of freshly sprayed liquid asphalt (prime or tack coat) on the road surface on paving, extensive machine patching, and seal coating projects. Asphalt can be slippery until it has cured, and the work may damage other vehicles.<br><br>Even after the spray has cured, C-014 signs should be retained until the sprayed area has been covered with new pavement or a sand/chip seal coat.<br><br>The C-014 sign is placed in advance of the sprayed area and repeated at intervals for confirmation throughout long sections.<br><br>If a cured sprayed section is to remain exposed when work is not in progress, C-014 signs should be augmented with SLIPPERY WHEN WET C-141 signs to warn of potentially increased slipperiness in the event of rain. |

| C-015 Loose Gravel | | |
|---|---|---|
|  <br>C-015 | Sign sizes (mm)<br><br>C-015<br>(750 x 750)<br><br>C-015-x<br>(900 x 900) | The LOOSE GRAVEL C-015 sign should be placed in advance of a loose gravel condition that is potentially hazardous.<br><br>It may also be required at intervals throughout the length of roadway on which the condition exists, especially in advance of curves.<br><br>Examples of scenarios in which the C-015 sign may be required include:<br>• freshly-graded gravel roads<br>• sections of new, unswept chip seal coat<br>• areas where gravel has been deposited on the pavement edge by shouldering<br>• construction areas with uncompacted gravel |
| **C-016 Uneven Pavement Ends** | | |
|  <br>C-016 | Sign sizes (mm)<br><br>C-016<br>(600 x 600)<br><br>C-016-x<br>(900 x 900) | The UNEVEN PAVEMENT ENDS C-016 sign should be used to mark the end of an uneven section of pavement.<br><br>It is typically used on paving jobs in conjunction with one of the following signs:<br>• C-007 Broken Pavement<br>• C-010-LR Uneven Pavement on Left/Right<br>• C-011 Grooved Pavement<br>• C-013-LR Low Shoulder on Left/Right<br>• C-017 Bump or Rough Roadway Ahead<br>Note: The positioning of C-016 and other signs requires frequent adjustment as paving progresses. |

| C-017 Bump, Rough Roadway, or Steel Plate | | |
|---|---|---|
| | Sign sizes (mm) | The BUMP OR ROUGH ROADWAY C-017 sign should be used to warn of sharp changes in the road profile that are sufficiently abrupt to create a potentially hazardous condition, and in advance of temporary rumble strips.<br><br>This sign should replace the TEMPORARY SLOW C-090 marker in advance of short potholed sections, frost heaves, fill settlements, etc. when the hazards are unlikely to be removed promptly.<br><br>The STEEL PLATE C-017-2b sign should be used to warn motorists of a steel plate on the road surface and to exercise caution when travelling over the steel plate as there may be an uneven surface.<br><br>The STEEL PLATE AHEAD C-017-a sign may be used in conjunction with the STEEL PLATE C-017-2b sign to provide additional warning.<br><br>The STEEL PLATE LEFT C-017-3l or STEEL PLATE RIGHT C-017-3r signs may be used in place of, or in conjunction of the STEEL PLATE C-017-2b sign to better indicate the location of the steel plate. |
|  <br>C-017-1 | C-017-1<br>(750 x 750)<br><br>C-017-1x<br>(900 x 900)<br><br>C-017-1xx<br>(1200 x 1200) | |
|  <br>C-017-2A | C-017-2A<br>(750 x 750)<br><br>C-017-2Ax<br>(900 x 900)<br><br>C-017-2Axx<br>(1200 x 1200) | |
|  <br>C-017-2B | C-017-2B<br>(750 x 750)<br><br>C-017-2Bx<br>(900 x 900)<br><br>C-017-2Bxx<br>(1200 x 1200) | |
|  <br>C-017-3L | C-017-3L<br>(750 x 750)<br><br>C-017-3Lx<br>(900 x 900)<br><br>C-017-3Lxx<br>(1200 x 1200) | |
|  <br>C-017-3R | C-017-3R<br>(750 x 750)<br><br>C-017-3Rx<br>(900 x 900)<br><br>C-017-3Rxx<br>(1200 x 1200) | |

| C-018 Series Construction Ahead | | |
|---|---|---|
|  <br>C-018-1A | Sign sizes (mm)<br><br>C-018-1A<br>(750 x 750)<br><br>C-018-1Axx<br>(1200 x 1200) | • The CONSTRUCTION AHEAD C-018-1A sign should be erected in the advance warning area on long duration work, typically no further than one kilometre in advance of the work activity area.<br><br>• The CONSTRUCTION AHEAD – 2 km C-018-2A sign may be used for long-duration work zones on roadways where the normal speed limit is 70 km/h or higher to extend the advance warning. |
|  <br>C-018-2A | C-018-2A<br>(750 x 750)<br><br>C-018-2Axx<br>(1200 x 1200) | • The ROAD WORK AHEAD C-018-3A sign or ROAD SURVEY AHEAD C-018-4A sign may be erected in advance warning areas for short-duration work instead of—or in addition to—the CREW WORKING AHEAD C-004 sign or SURVEY CREW WORKING AHEAD C-003 sign. |
|  <br>C-018-3A | C-018-3A<br>(750 x 750)<br><br>C-018-3Axx<br>(1200 x 1200) | • The SHOULDER WORK AHEAD C-018-6A sign and the SHOULDER WORK C-018-7 sign may be used in advance of short-duration work on a shoulder as a supplement to the C-004 sign or vehicle lights. For long-duration work on a shoulder, the SHOULDER WORK AHEAD C-018-6A sign may be used instead of the CONSTRUCTION AHEAD C-018-1A sign. |
|  <br>C-018-4A | C-018-4A<br>(750 x 750)<br><br>C-018-4Ax<br>(900 x 900) | • For work in progress, the SHOULDER WORK C-018-7 sign may be positioned at the beginning of the shoulder taper in advance of the work.<br><br>*continued →* |
|  <br>C-018-6A | C-018-6A<br>(750 x 750)<br><br>C-018-6Ax<br>(900 x 900)<br><br>C-018-6Axx<br>(1200 x 1200) | |
|  <br>C-018-7 | C-018-7<br>(750 x 750)<br><br>C-018-7x<br>(900 x 900)<br><br>C-018-7xx<br>(1200 x 1200) | |

| C-018 Series Construction Ahead (continued) | | |
|---|---|---|
|  <br>C-018-8L | Sign sizes (mm)<br><br>C-018-8L<br>(750 x 750)<br><br>C-018-8Lx<br>(900 x 900)<br><br>C-018-8Lxx<br>(1200 x 1200) | • The CONSTRUCTION AHEAD C-018-8L and C-018-8R signs may be used when the construction zone is at or near an intersection.<br><br>If there is a need to place the CREW WORKING C-004 sign or the CONSTRUCTION AHEAD C-018-1A sign on roadways other than the one where the work area is, especially in urban conditions, the CONSTRUCTION AHEAD C-018-8L and C-018-8R signs may be used in place of the CREW WORKING C-004 sign or the CONSTRUCTION AHEAD C-018-1A sign.<br><br>If used, CONSTRUCTION AHEAD C-018-8L and C-018-8R signs should be placed in advance of the intersection to inform drivers of where the work area is, and whether or not it will be on their desired route. These signs should be placed in a location upstream of the adjacent intersection so as not to confuse drivers which street the construction is on. |
|  <br>C-018-8R | C-018-8R<br>(750 x 750)<br><br>C-018-8Rx<br>(900 x 900)<br><br>C-018-8Rxx<br>(1200 x 1200) | |
|  <br>C-018-8A | C-018-8A<br>(750 x 750)<br><br>C-018-8Ax<br>(900 x 900) | • The CENTRELINE WORK AHEAD C-018-8A sign and the CENTRELINE WORK C-018-9 sign may be used in advance of centreline short-duration work as a supplement.<br><br>For long-duration work on the centreline, the CENTRELINE WORK AHEAD C-018-8A sign may be used instead of the CONSTRUCTION AHEAD C-018-1A sign. |
|  <br>C-018-9 | C-018-9<br>(750 x 750)<br><br>C-018-9x<br>(900 x 900) | |

| | | |
|---|---|---|
| **C-019 Series Motorcycle Rough Surface** | | |
|  <br>C-019<br><br>  <br>C-019-T | Sign sizes (mm)<br><br>C-019<br>(750 x 750)<br><br>C-019-x<br>(900 x 900)<br><br>C-019-T<br>(600 x 300)<br><br>C-019-Tx<br>(750 x 400) | The MOTORCYCLE ROUGH SURFACE C-019 sign should be used when construction activity has created a rough or irregular riding surface (e.g., a temporary gravel surface, scarified or milled asphalt, etc.).<br><br>Whenever a temporary gravel surface is present, the GRAVEL SURFACE C-019-T tab should be used in conjunction with the C-019 sign. |
| **C-020 Series One Way Arrow** | | |
|  <br>C-020-1LR<br><br>  <br>C-020-2L<br><br>  <br>C-020-2R | Sign sizes (mm)<br><br>C-020-1LR<br>(900 x 300)<br><br>C-020-1LRx<br>(1200 x 400)<br><br>C-020-2L<br>(900 x 300)<br><br>C-020-2Lx<br>(1200 x 400)<br><br>C-020-2R<br>(900 x 300)<br><br>C-020-2Rx<br>(1200 x 400) | The ONE WAY ARROW C-020 series signs indicates to motorists that a road is restricted to travel in only one direction.<br><br>The text “ONE WAY” may be added within the arrow, as shown in the C-020-2L and C-020-2R signs. This is the Ministry’s preferred option as it is in wide use throughout North America and is well recognized by road users. |

| C-022 Advisory Speed Tab | | |
|---|---|---|
|  <br>C-022 | Sign sizes (mm)<br><br>C-022<br>(600 x 600)<br><br>C-022-x<br>(750 x 750)<br><br>C-022-xx<br>(900 x 900) | The ADVISORY SPEED C-022 tab may be used with construction signs to indicate the maximum advisory speed around a curve or through a hazard.<br><br>This tab should never be used as a standalone device.<br><br>The C-022 tab should be mounted below the sign it supplements, with the bottom edge of the tab at least 1.2 metres above the travelled roadway edge.<br><br>Except in emergencies, C-022 tabs should not be erected until a suitable speed has been determined by applying an accepted engineering analysis.<br><br>The C-022 tab is only used when traffic must slow at least 20 km/h below the normal speed limit. |
| **C-024 Advisory Distance Tab** | | |
|  <br>C-024 | Sign sizes (mm)<br><br>C-024<br>(600 x 600)<br><br>C-024-x<br>(750 x 750)<br><br>C-024-xx<br>(900 x 900) | The ADVISORY DISTANCE C-024 tab may be used below construction signs when the distance over which the warning is in effect is 2 kilometres or more.<br><br>The C-024 tab should be mounted below the sign it supplements, with the bottom edge of the tab at least 1.2 metres above the travelled roadway edge. |

| C-027 Traffic Control Paddle | | |
|---|---|---|
|  <br>C-027 | Sign sizes (mm)<br><br>C-027<br>(400 x 400) | The TRAFFIC CONTROL PADDLE C-027 is used by Traffic Control Persons to control traffic.<br><br>See *Section 5: Traffic Control Persons* and Part 18 of WorkSafeBC's Occupational Health and Safety Regulations for approved methods of using the paddle and associated devices.<br><br>When it is to be used for an extended period, the handle can be extended by fitting a dowel approximately 2.5 cm in diameter and 1.3 metres long into the short handle, thereby allowing the Traffic Control Person to display the paddle comfortably at the recommended height.<br><br>If only the message on one side of the paddle is required, the message on the other side is covered or shielded to avoid showing an inappropriate message to drivers approaching from the opposite direction.<br><br>LED lights matching the colour of the sign face may be used around the perimeter of the sign. These lights should be steady burn but may flash at 60 Hz. |
| **C-028 Proceed only when Directed** | | |
|  <br>C-028 | Sign sizes (mm)<br><br>C-028<br>(600 x 450)<br><br>C-028-xx<br>(900 x 600) | The PROCEED ONLY WHEN DIRECTED C-028 sign should be used when a partially controlled work zone or a pilot car system is in place.<br><br>The C-028 sign should accompany one of these signs:<br>• C-001-1 Traffic Control Person Ahead<br>• C-029 Prepare To Stop<br>• C-049 Follow Pilot Car |
| **C-029 Prepare to Stop** | | |
|  <br>C-029 | Sign sizes (mm)<br><br>C-029<br>(750 x 750)<br><br>C-029-xx<br>(1200 x 1200) | The PREPARE TO STOP C-029 sign should be used in advance of these signs to give additional notice:<br>• C-001-1 Traffic Control Person Ahead<br>• C-111 Stop Ahead<br>• C-112 Signal Ahead<br>• R-056-1 Yield to Oncoming Traffic<br><br>The C-029 sign must never be used alone to warn of a hazard. |

| C-030 Series Roadway/Lane Closed | | |
|---|---|---|
|  C-030-1A | Sign sizes (mm)<br><br>C-030-1A (750 x 750)<br><br>C-030-1Axx (1200 x 1200) | • The CENTRE LANE CLOSED AHEAD C-030-1A and CENTRE LANE CLOSED C-030-2 signs are used advance of a centre lane closure where approaching traffic is directed to the right or left of a work zone in the centre lane.<br><br>The upstream C-030-1A sign may also display a bottom-mounted C-130-T distance tab indicating the distance to the beginning of the lane closure taper.<br><br>If space is available in the median, secondary C-030-1A and C-030-2 signs should be erected in the median across from the shoulder signage. |
|  C-030-2 | C-030-2 (750 x 750)<br><br>C-030-2xx (1200 x 1200) | • The LEFT LANE CLOSED C-030-3A sign and the RIGHT LANE CLOSED C-030-4A sign may be used in addition to the LANE CLOSURE C-130-L/R signs to provide additional advance notice of a lane closure.<br><br>The C-030-3A and C-030-4A signs may also be used to indicate a lane closure in complex lane arrangements where the graphical C-130-L/R signs may not be sufficiently clear. |
|  C-030-3A | C-030-3A (750 x 750)<br><br>C-030-3Axx (1200 x 1200) | • The LEFT/RIGHT TWO LANES CLOSED C-030-5A sign may be used in advance of, and in addition to, C-130-L/R signs to inform drivers that there are two lane closures ahead.<br><br>The C-030-5A sign provides drivers with advance warning that two lanes are closed ahead. Lane closures should be established one at a time with adequate tangent length between lane closure tapers. |
|  C-030-4A | C-030-4A (750 x 750)<br><br>C-030-4Axx (1200 x 1200) | |
|  C-030-5AL | C-030-5AL (750 x 750)<br><br>C-030-5ALxx (1200 x 1200) | *continued →* |
|  C-030-5AR | C-030-5AR (750 x 750)<br><br>C-030-5ARxx (1200 x 1200) | |

| C-030 Series Roadway/Lane Closed (continued) | | |
|---|---|---|
|  <br>C-030-6A | Sign sizes (mm)<br><br>C-030-6A<br>(750 x 750)<br><br>C-030-6Axx<br>(1200 x 1200) | • The ROAD CLOSED C-030-6A sign and ONE LANE ROAD C-030-7A sign provide advance notice of a complete or partial road closure ahead.<br><br>The C-030-7A sign is applicable only to a two-lane, two-way roadway. It is typically followed by a single lane alternating traffic setup or a "yield to oncoming traffic" situation.<br><br>The C-030-6A and the C-030-7A should typically be positioned following the CREW WORKING AHEAD C-004 sign or the CONSTRUCTION AHEAD C-018-1A sign. |
|  <br>C-030-7A | C-030-7A<br>(750 x 750)<br><br>C-030-7Axx<br>(1200 x 1200) | • The SINGLE LANE TRAFFIC C-030-8 sign should be used in advance of work activity areas on two-lane, two-way roadways where the usable roadway width has been reduced, and where traffic in both directions is therefore restricted to the alternating use of a single lane.<br><br>*continued →* |
|  <br>C-030-8 | C-030-8<br>(750 x 750)<br><br>C-030-8xx<br>(1200 x 1200) | |

| C-030 Series Roadway/Lane Closed (continued) | | |
|---|---|---|
|  <br>C-030-14 | Sign sizes (mm)<br><br>C-030-14<br>(750 x 750)<br><br>C-030-14x<br>(900 x 900)<br><br>C-030-14xx<br>(1200 x 1200) | • The LEFT TWO LANES CLOSED C-030-14 sign may be used in advance of a closure of the left two lanes where there are three or more lanes per direction.<br><br>It should typically be applied in advance of the first LANE CLOSED AHEAD C-130 sign with a bottom-mounted tab indicating the distance to the beginning of the first lane closure taper.<br><br>This sign provides drivers with advance warning that two lanes are closed ahead. Lane closures should be established one at a time with adequate tangent length between lane closure tapers.<br><br>Where adequate space is available on the left or median side, the signing should be repeated on the median across from the shoulder signage. |
|  <br>C-030-15 | C-030-15<br>(750 x 750)<br><br>C-030-15x<br>(900 x 900)<br><br>C-030-15xx<br>(1200 x 1200) | • The RIGHT TWO LANES CLOSED C-030-15 sign may be used in advance of a closure of the right two lanes where there are three or more lanes per direction.<br><br>It should typically be applied in advance of the first LANE CLOSED AHEAD C-130 sign with a bottom-mounted tab indicating the distance to the beginning of the first lane closure taper.<br><br>This sign provides drivers with advance warning that two lanes are closed ahead. Lane closures should be established one at a time with adequate tangent length between lane closure tapers.<br><br>Where adequate space is available on the left or median side, the signing should be repeated on the median across from the right shoulder signage. |

| | | |
|---|---|---|
| **C-031 Oncoming Traffic** | | |
|  <br>C-031 | Sign sizes (mm)<br><br>C-031<br>(750 x 750)<br><br>C-031-x<br>(900 x 900) | The ONCOMING TRAFFIC C-031 sign should be used where the normal traffic pattern has been changed such that there may be unexpected oncoming traffic.<br><br>For example, it may be used for a median crossover, or when traffic is directed to travel in an oncoming lane. |
| **C-032 Reduce Speed** | | |
|  <br>C-032 | Sign sizes (mm)<br><br>C-032<br>(750 x 750)<br><br>C-032-xx<br>(1200 x 1200) | The REDUCE SPEED C-032 sign may be used in conjunction with LANE CLOSED C-030 and C-130 signs in the advance warning area on multilane highways where the speed limit is 70 km/h or higher.<br><br>It is not required where a Construction Speed Zone has been established, but can be useful in slowing traffic without imposing a lower legal speed limit. |
| **C-033 and C-034 Blasting Zone** | | |
|  <br>C-033<br><br>  <br>C-034 | Sign sizes (mm)<br><br>C-033<br>(600 x 750)<br><br>C-033-x<br>(750 x 900)<br><br>C-034<br>(600 x 600)<br><br>C-034-x<br>(750 x 750) | The BLASTING ZONE C-033 and C-034 signs should be used on all occasions when blasting is carried out in the vicinity of a public roadway.<br><br>The signs should be positioned as follows:<br>• The C-033 sign is placed at least 500 metres in advance of the blasting zone.<br>• The C-034 sign is placed 300 metres beyond the blasting area.<br><br>The C-033 and C-034 signs should be removed or covered immediately after a set of charges has been exploded, and should not be displayed again until just before the commencement of further drill-hole loading. |

## C-035 Construction Project

CONSTRUCTION PROJECT C-035 signs must be erected for capital rehabilitation and expansion projects with an approximate value of $500,000 or greater. They may also be erected for a smaller project if its construction duration is expected to be longer than two months and the project is located in a high-traffic area.

The Project Manager is responsible for:

- Ordering the C-035 signs from a sign manufacturer
- Providing the appropriate project information to be applied to the signs
- Arranging delivery to the Prime Contractor.

For federal C-035 signs, the project manager must contact Government Communications and Public Engagement (GCPE) who will liaise with the federal government to provide the bilingual information required for project signs.

C-035 signs should be erected prior to the commencement of a project.

For provincial projects, the sign information must specify:

- Project Name
- Project Description
- Expected Completion Date (by season) - e.g., Complete: Summer 2020
- Full Project Value - e.g., Value $8.8 Million

For federal-provincial partnership projects, the sign information must specify (in both English and French):

- Project Name
- Full Project Value - e.g., $0.5 M
- Expected Completion Date (by season) - e.g., Complete: Fall 2018

The C-035 sign fabrication records for manufacturing purposes are available at:

https://www2.gov.bc.ca/gov/content/transportation/transportation-infrastructure/engineering-standards-guidelines/traffic-engineering-safety/traffic-signs-markings

The C-086-1 or C-086-2 “End of Project” sign should be erected just beyond the project’s “limit of construction”.

At the completion of the project, the C-035-CMP “Completed” tab is to be applied to the C-035 sign. The sign and tab should remain installed for no longer than six months after completion of the project at which time, weather dependent, the signs and tabs should be removed from the right-of-way. The “Completed” tab may be stored and re-used if it remains in good condition.

Policy information and sign design for the C-035 sign are updated frequently so Project Managers should check the Ministry’s current technical circulars for updated information:

https://www2.gov.bc.ca/gov/content/transportation/transportation-infrastructure/engineering-standards-guidelines/technical-circulars

| C-036 Slow Moving Vehicle | | |
|---|---|---|
|  <br>C-036 | Sign sizes (mm)<br><br>C-036 (350 x 350 x 350) | In accordance with Sections 7B.01 to 7B.04 of the Motor Vehicle Act Regulation, the SLOW MOVING VEHICLE C-036 marker is displayed temporarily on the rear of any vehicle or mobile equipment employed in a work area and required to travel on a roadway at a speed of 40 km/h or less.<br><br>This requirement applies to any vehicle involved in continuously slow-moving road work.<br><br>When the vehicle is travelling at normal highway speeds, the C-036 marker should be covered or removed.<br><br>The C-036 marker should also be displayed on the rear of mobile equipment units involved in road work which is incapable of moving consistently at speeds above 40 km/h. It may be displayed permanently on these units.<br><br>The SLOW MOVING VEHICLE C-036 marker must be mounted in the orientation shown, as close as possible to the rear/centre of the unit, and 90 to 150 cm above ground level. |
| **C-037 Series Wet Paint and Wet Paint – Keep Off** | | |
|  <br>C-037-1<br><br>  <br>C-037-2 | Sign sizes (mm)<br><br>C-037-1 (600 x 200)<br><br>C-037-2 (600 x 300) | The WET PAINT C-037-1 and WET PAINT – KEEP OFF C-037-2 signs may be used in areas where road markings have been applied to advise that wet paint has been applied to the roadway and drivers should refrain from driving on the freshly-painted lines. |

| | | |
|---|---|---|
| **C-038 Truck Stopped on Road Next 2 km** | | |
|  C-038 | Sign sizes (mm)<br><br>C-038 (750 x 750)<br><br>C-038-xx (1200 x 1200) | The TRUCK STOPPED ON ROAD NEXT 2 km C-038 sign should be used in advance of intermittently-moving work such as crack sealing, temporary patching, Benkleman beam testing, retroreflective road stud installation, etc.<br><br>The maximum distance between two opposing C-038 signs should not exceed 2 kilometres. |
| **C-039 Caution – This Truck Stops Frequently** | | |
|  C-039 | Sign sizes (mm)<br><br>C-039 (750 x 300)<br><br>C-039-x (1525 x 600) | The CAUTION – THIS TRUCK STOPS FREQUENTLY C-039 sign is a special-purpose sign that should be displayed on the rear of vehicles involved with intermittently-moving work on an open travel lane.<br><br>It should be removed or covered when work is not in progress. |
| **C-040D Prepare to Stop** | | |
|  C-040D | Sign sizes (mm)<br><br>C-040D (2440 x 915) | The PREPARE TO STOP C-040D sign is a double-sided plywood sign that may be mounted atop Benkleman beam testing vehicles and other vehicles involved in intermittently-moving work in a travel lane on a two-lane, two-way roadway.<br><br>It should be lowered or removed when the vehicle is not blocking the travel lane.<br><br>To address difficulties mounting the C-040D sign on some types of vehicles, a squarer version may be used if the face area and letter height are not compromised. |