
NOTES

BEACON HARNESS

Schematic #1016701

TO MAIN HARNESS
1016076
UNDER CAB
DT06-2S

TO BEACON
DT06-3S



BEACON HARNESS		
2S SOCKETS	COLOR	3S SOCKETS
1	ORG/WHT	A
2	BLK	B

Figure 6-12. Beacon Harness

NOTES

OIL COOLER SCHEMATIC/HARNESS

Schematic #1016141


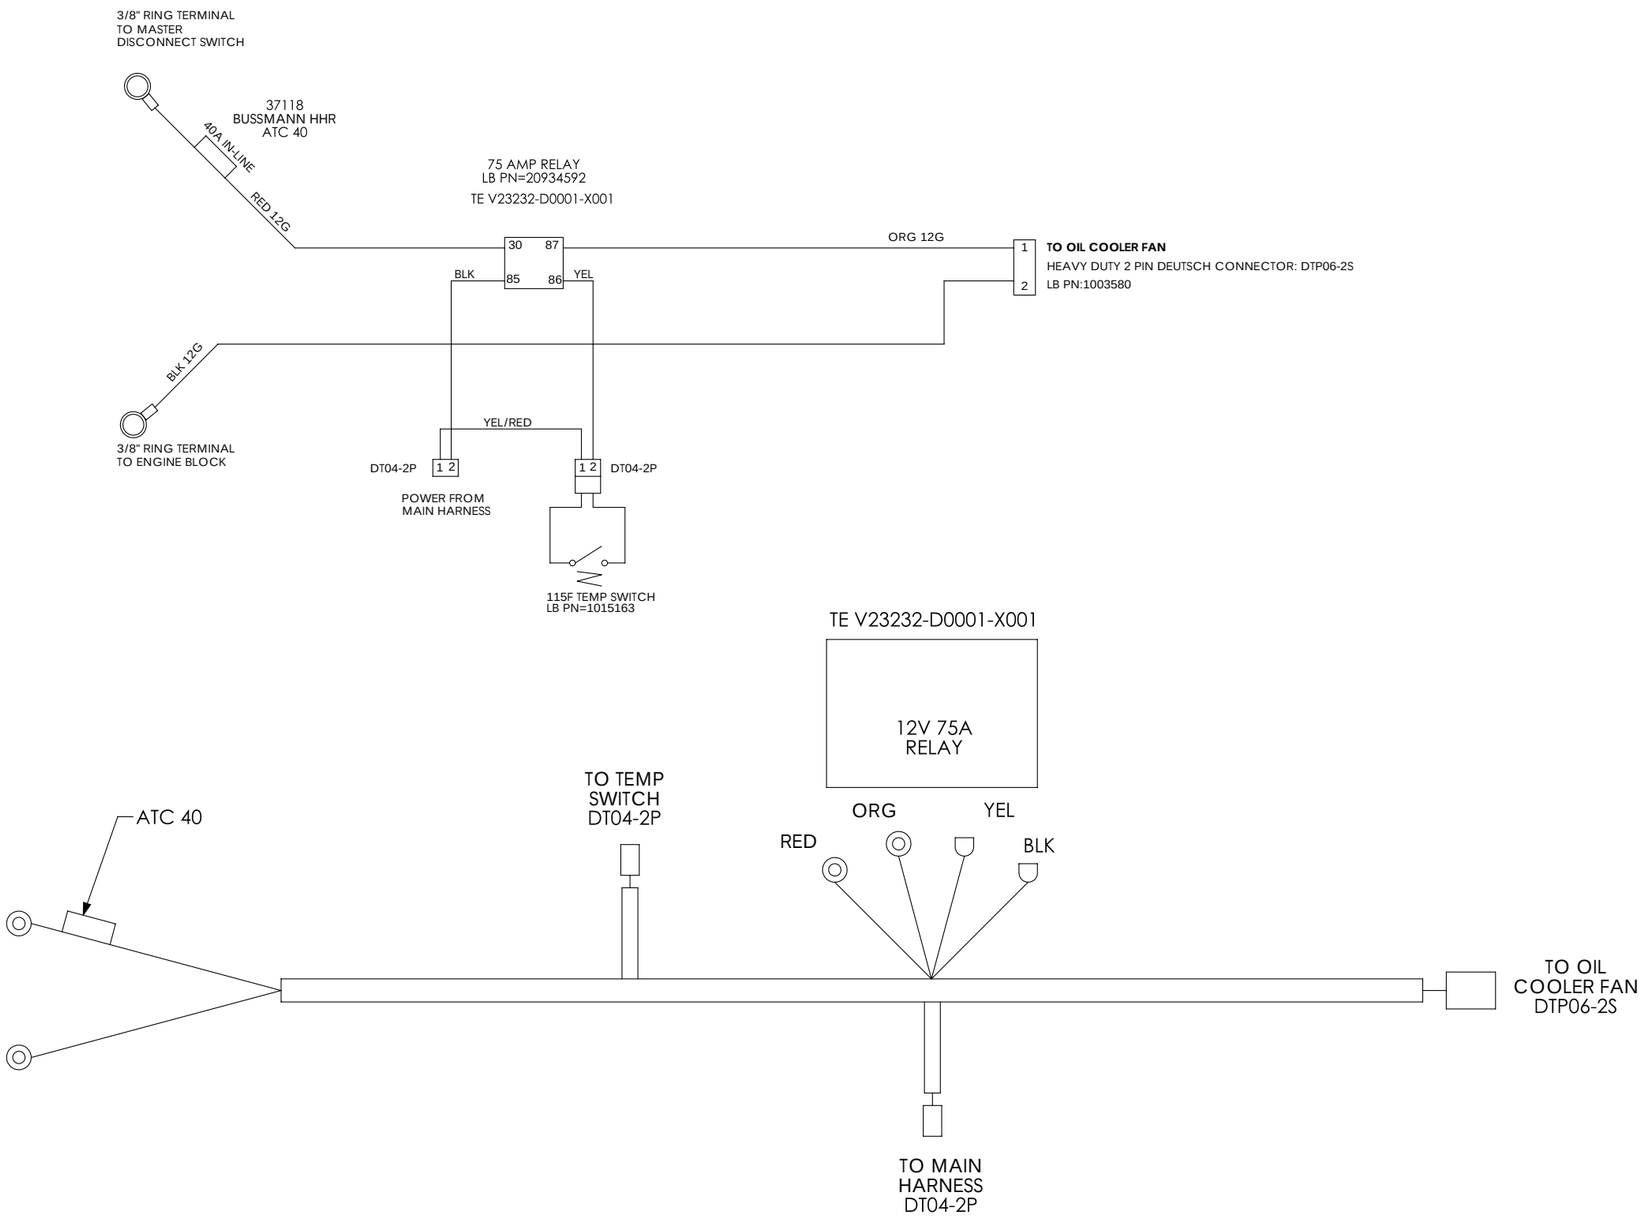


Figure 6-13. Oil Cooler Harness/Schematic

NOTES

OPTION - WINDSHIELD WASHER PUMP HARNESS

Schematic #1016079

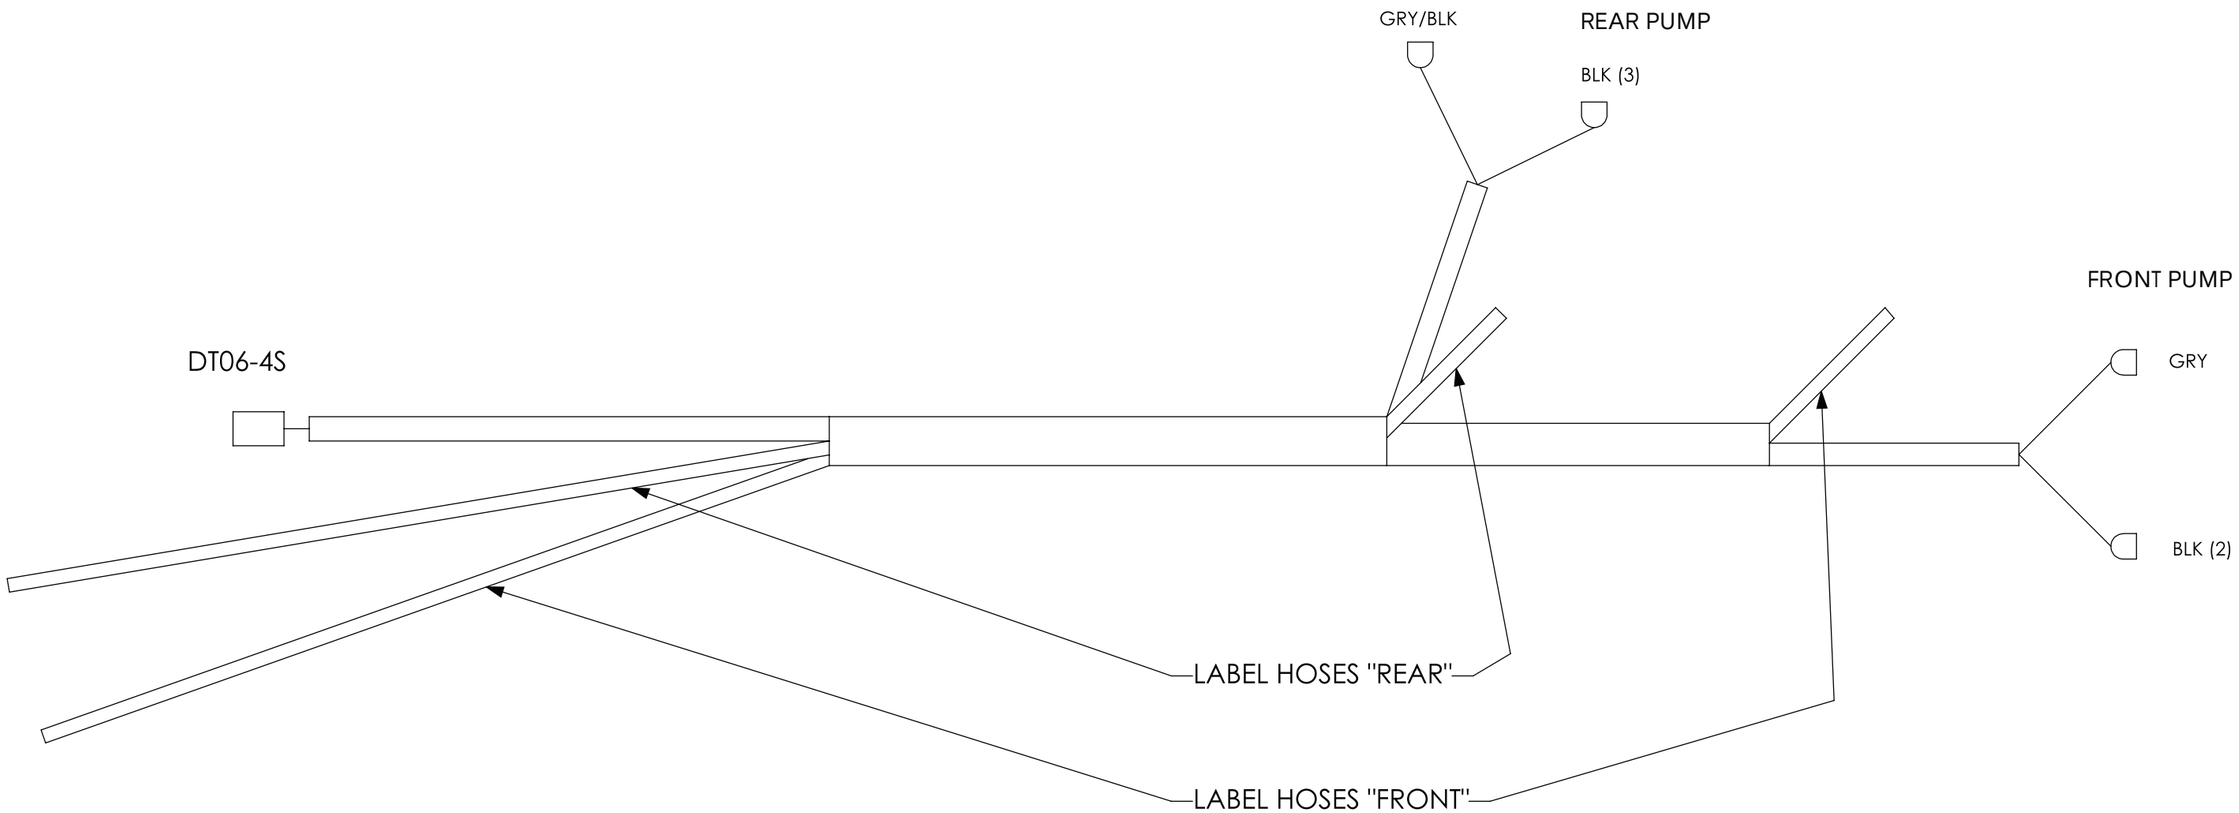

DT06-4S TO CONTROL CONSOLE		
PIN	COLOR	FUNCTION
1	GRA	FRONT PUMP
2	BLK (2)	GND
3	BLK (3)	GND
4	GRA/BLK	REAR PUMP

1/4" INSULATED FEMALE SPADE TERMINAL

Figure 6-14. Option - Windshield Washer Pump Harness


NOTES

OPTION - SPRAY PUMP HARNESS

Schematic #1016078

TO MAIN HARNESS
1016076
IN STEERING PEDESTAL
DT04-2P

TO SPRAY PUMP
DT06-2S



HARNESS, SPRAY PUMP EXTENSION		
2P PIN	COLOR	2S SOCKET
1	BLU/WHT	1
2	BLK	2

Figure 6-15. Option - Spray Pump Harness

NOTES

OPTION - CURB BRUSH HARNESS

Schematic #1022418

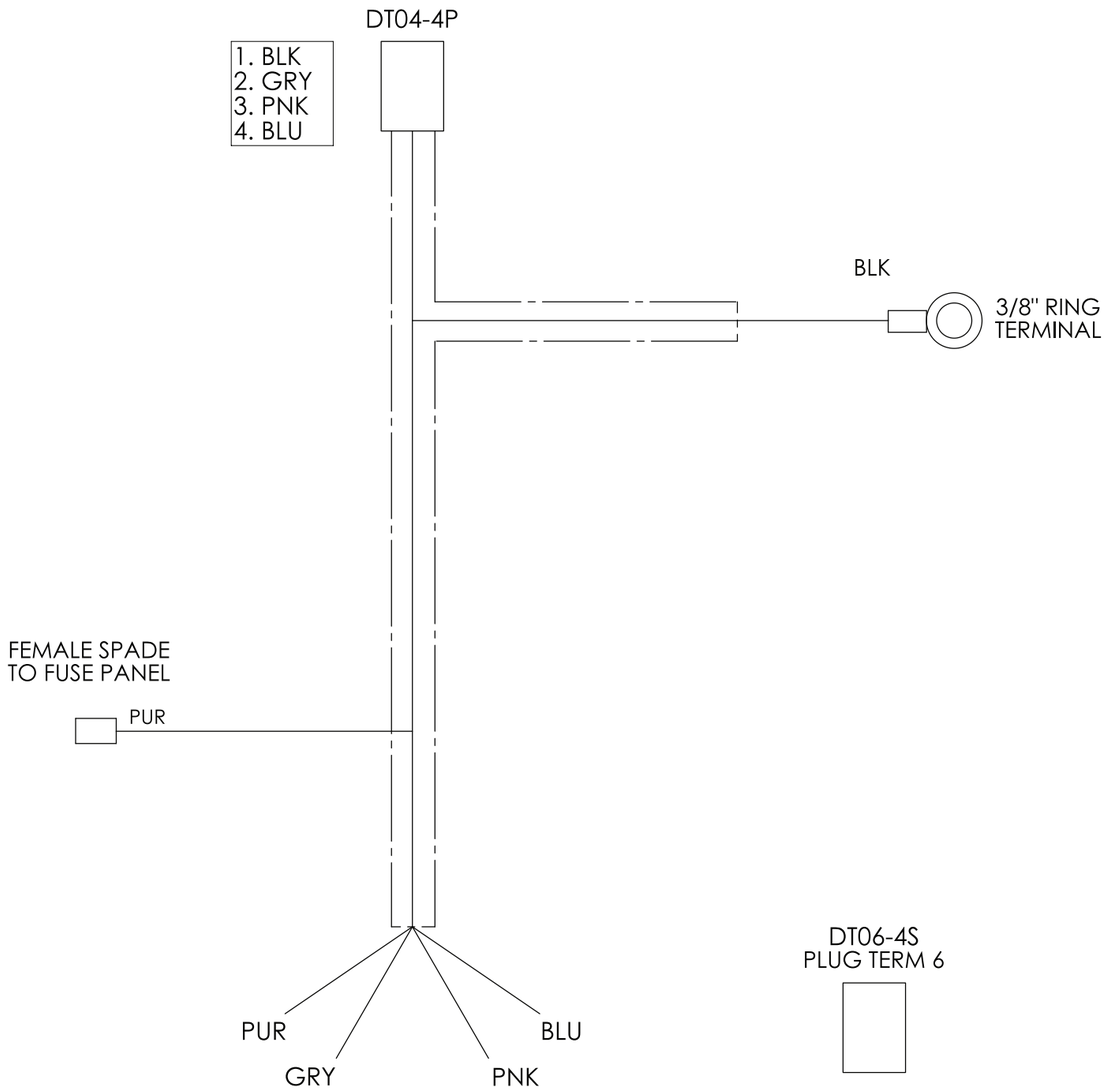


Figure 6-16. Option - Curb Brush Harness

NOTES

OPTION - SNOW PLOW HARNESS

Schematic #1022419

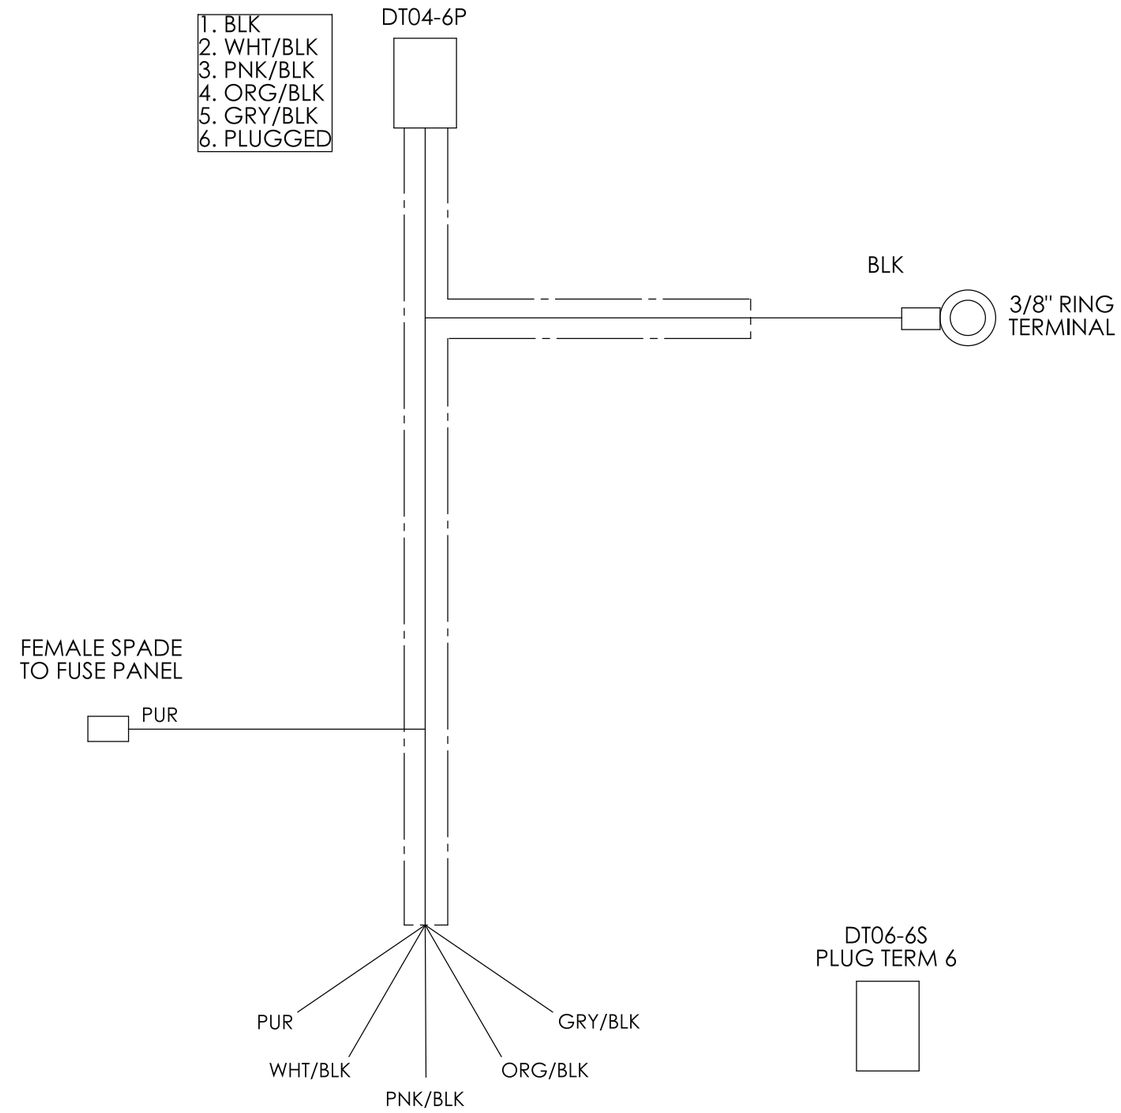


Figure 6-17. Option - Snow Plow Harness

NOTES

OPTION - FNR PEDAL MAIN HARNESS (1 OF 2)

Schematic #1023520

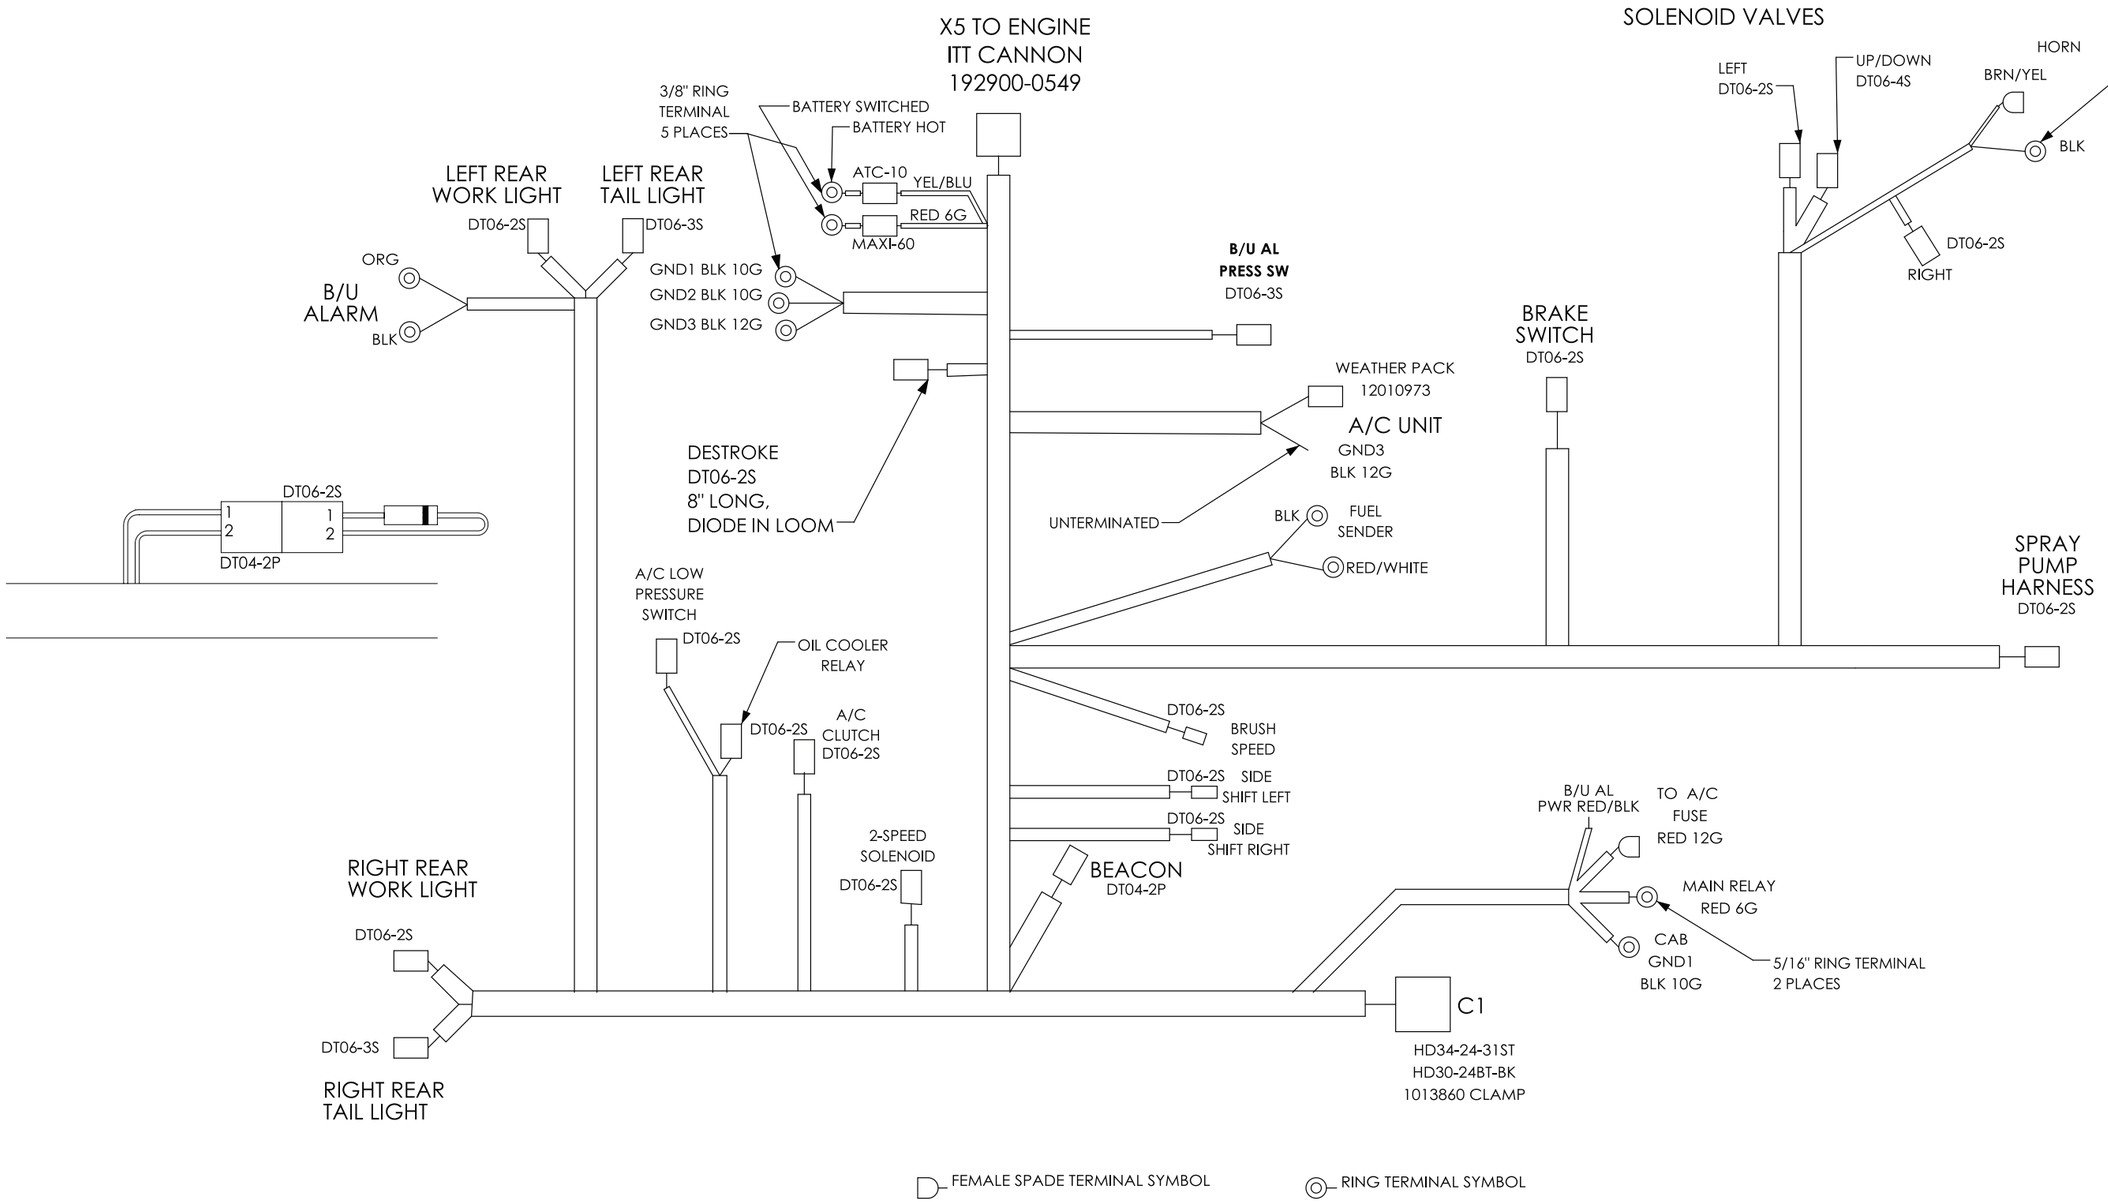


Figure 6-18. Option - FNR Pedal Main Harness (1 of 2)

NOTES

OPTION - FNR PEDAL MAIN HARNESS (2 OF 2)

Schematic #1023520

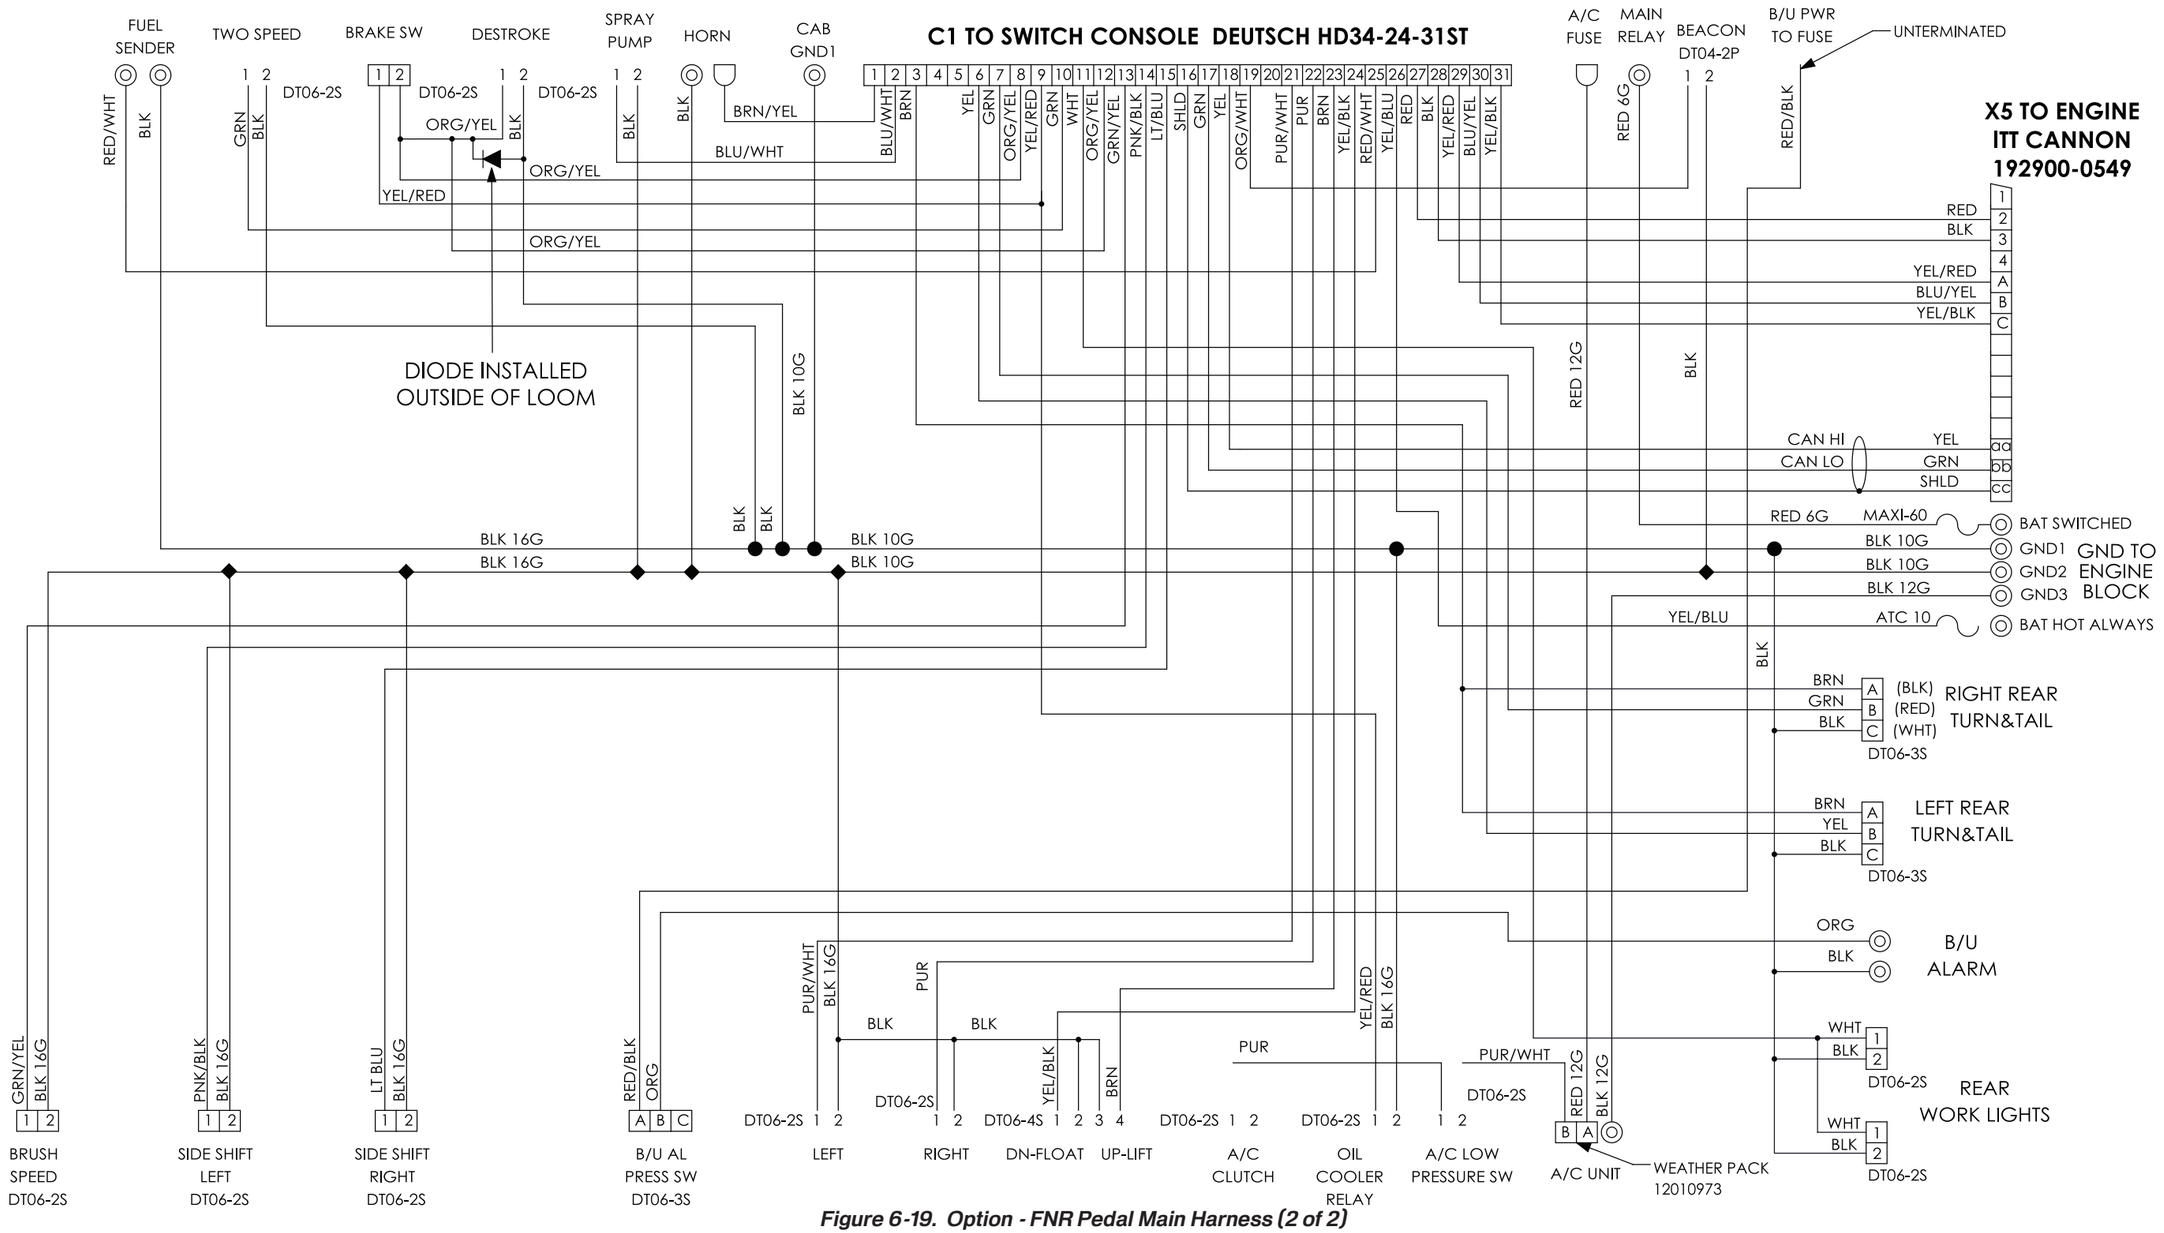


Figure 6-19. Option - FNR Pedal Main Harness (2 of 2)

NOTES

OPTION - FNR PEDAL BROOM CONTROLS

Schematic #1023493

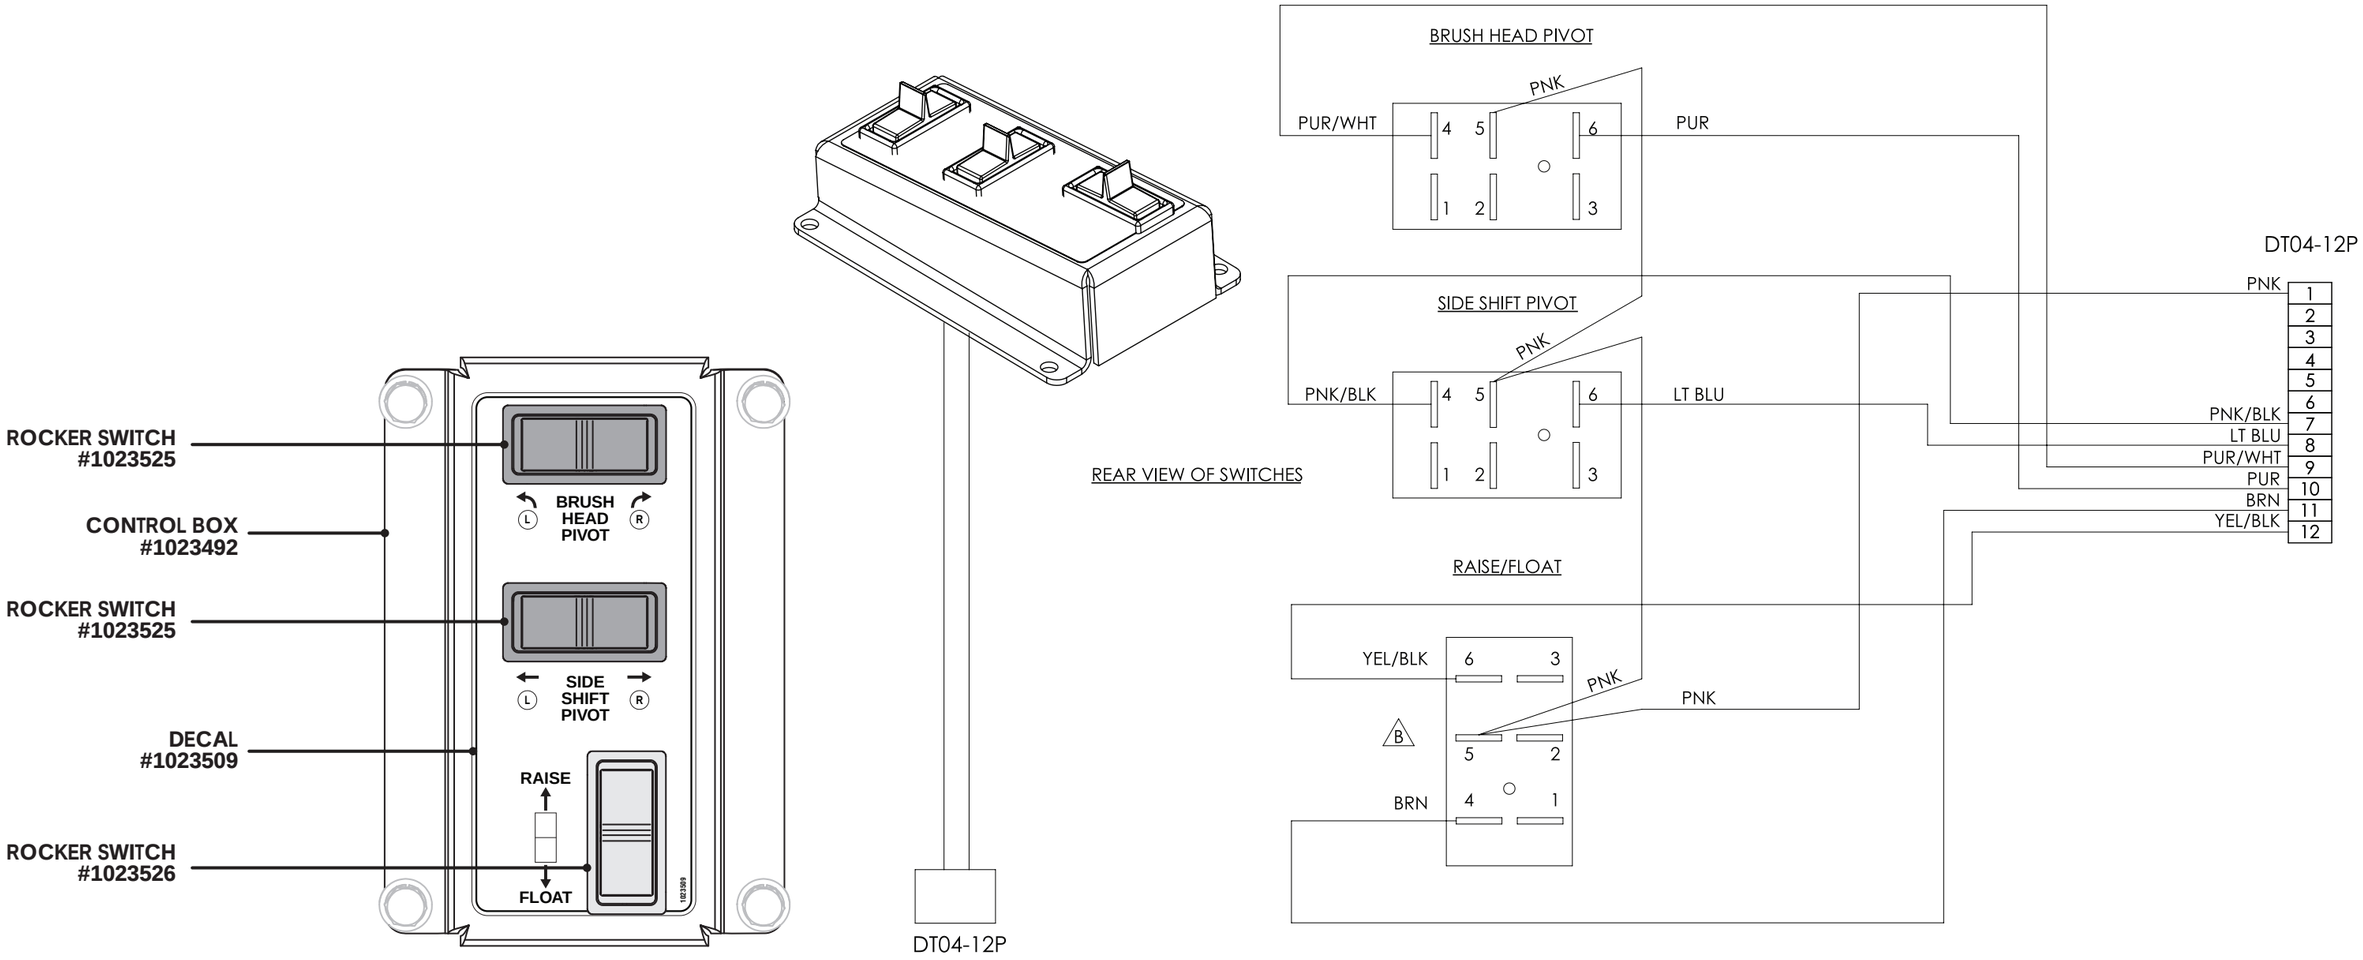
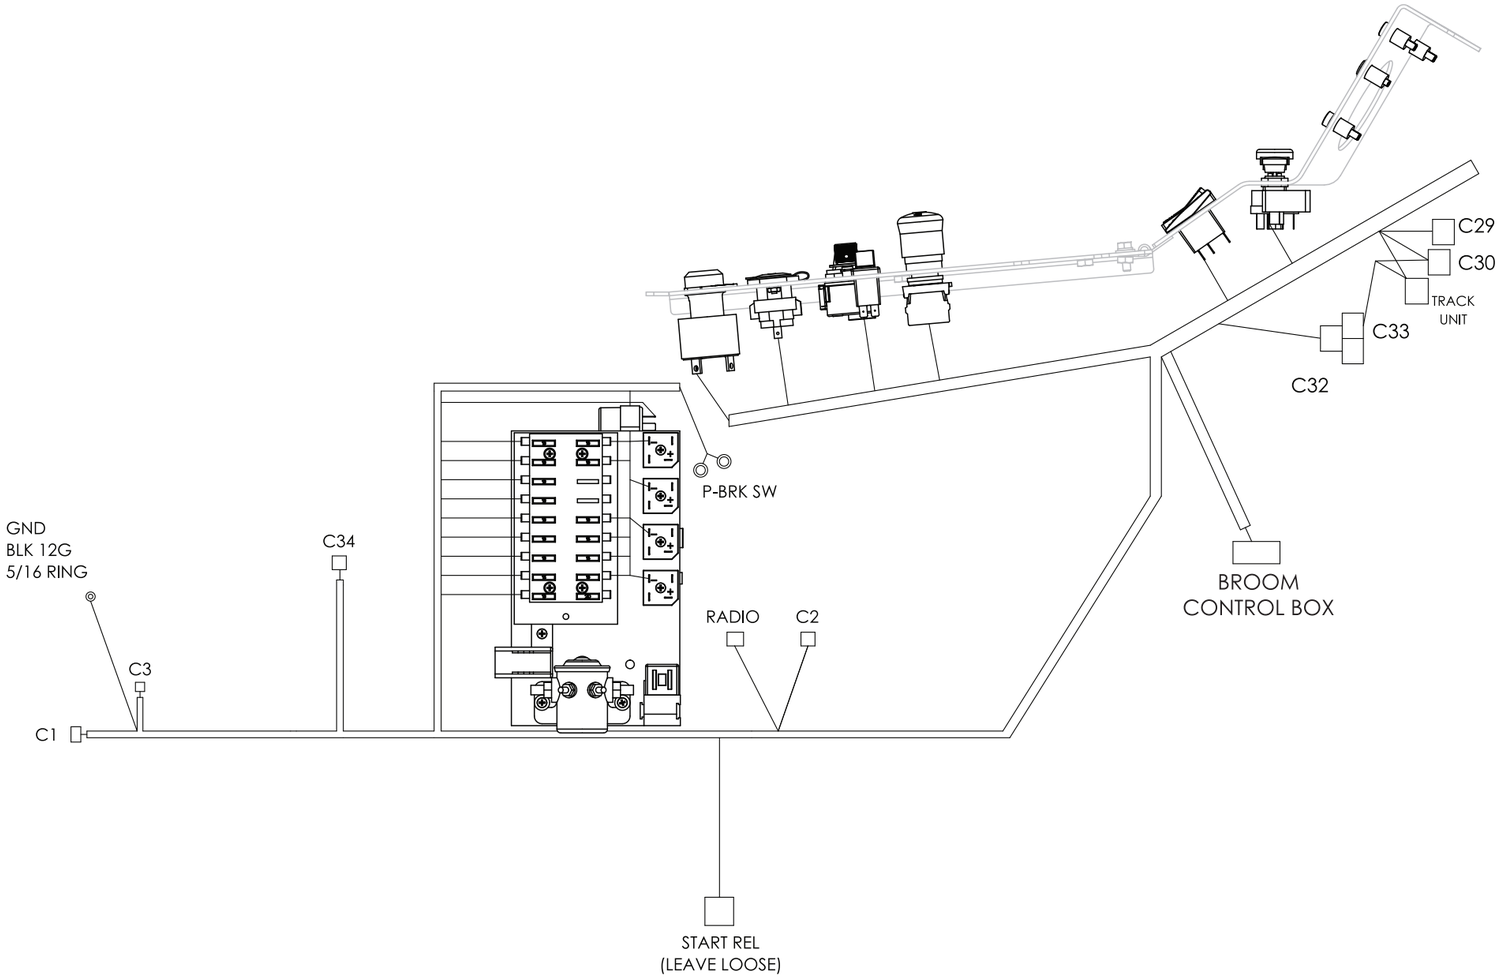


Figure 6-20. Option - FNR Pedal Broom Controls

NOTES

OPTION - FNR PEDAL CONTROL CONSOLE (1 OF 2)

Schematic #1023489



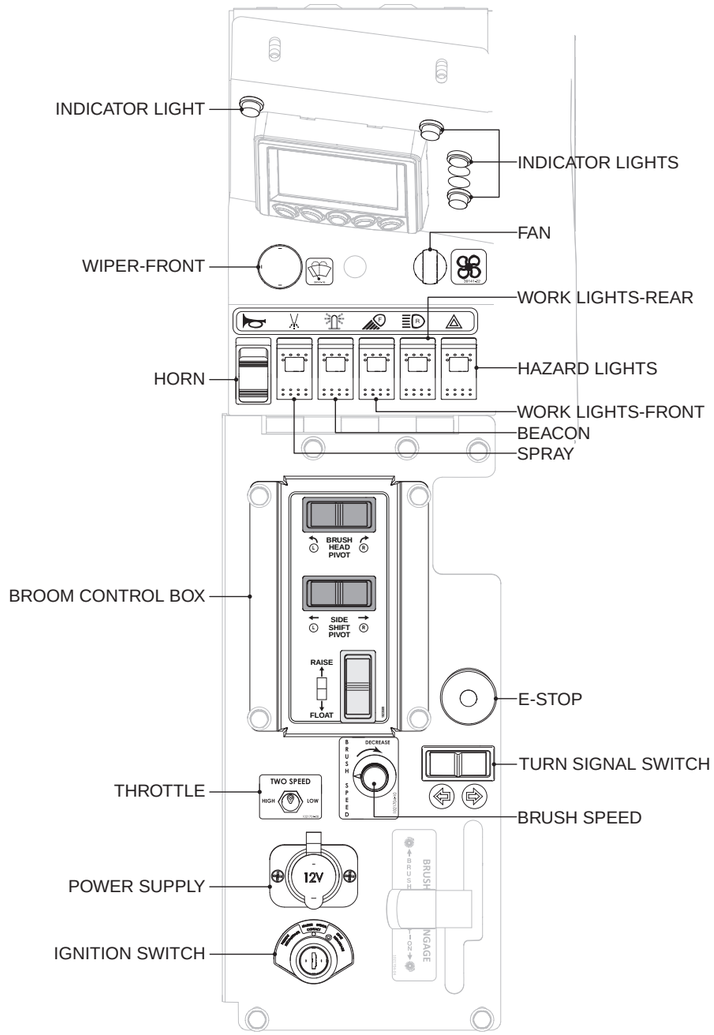


Figure 6-21. Option - FNR Pedal Control Console (1 of 2)

NOTES

OPTION - FNR PEDAL CONTROL CONSOLE (2 OF 2)

Schematic #1023489


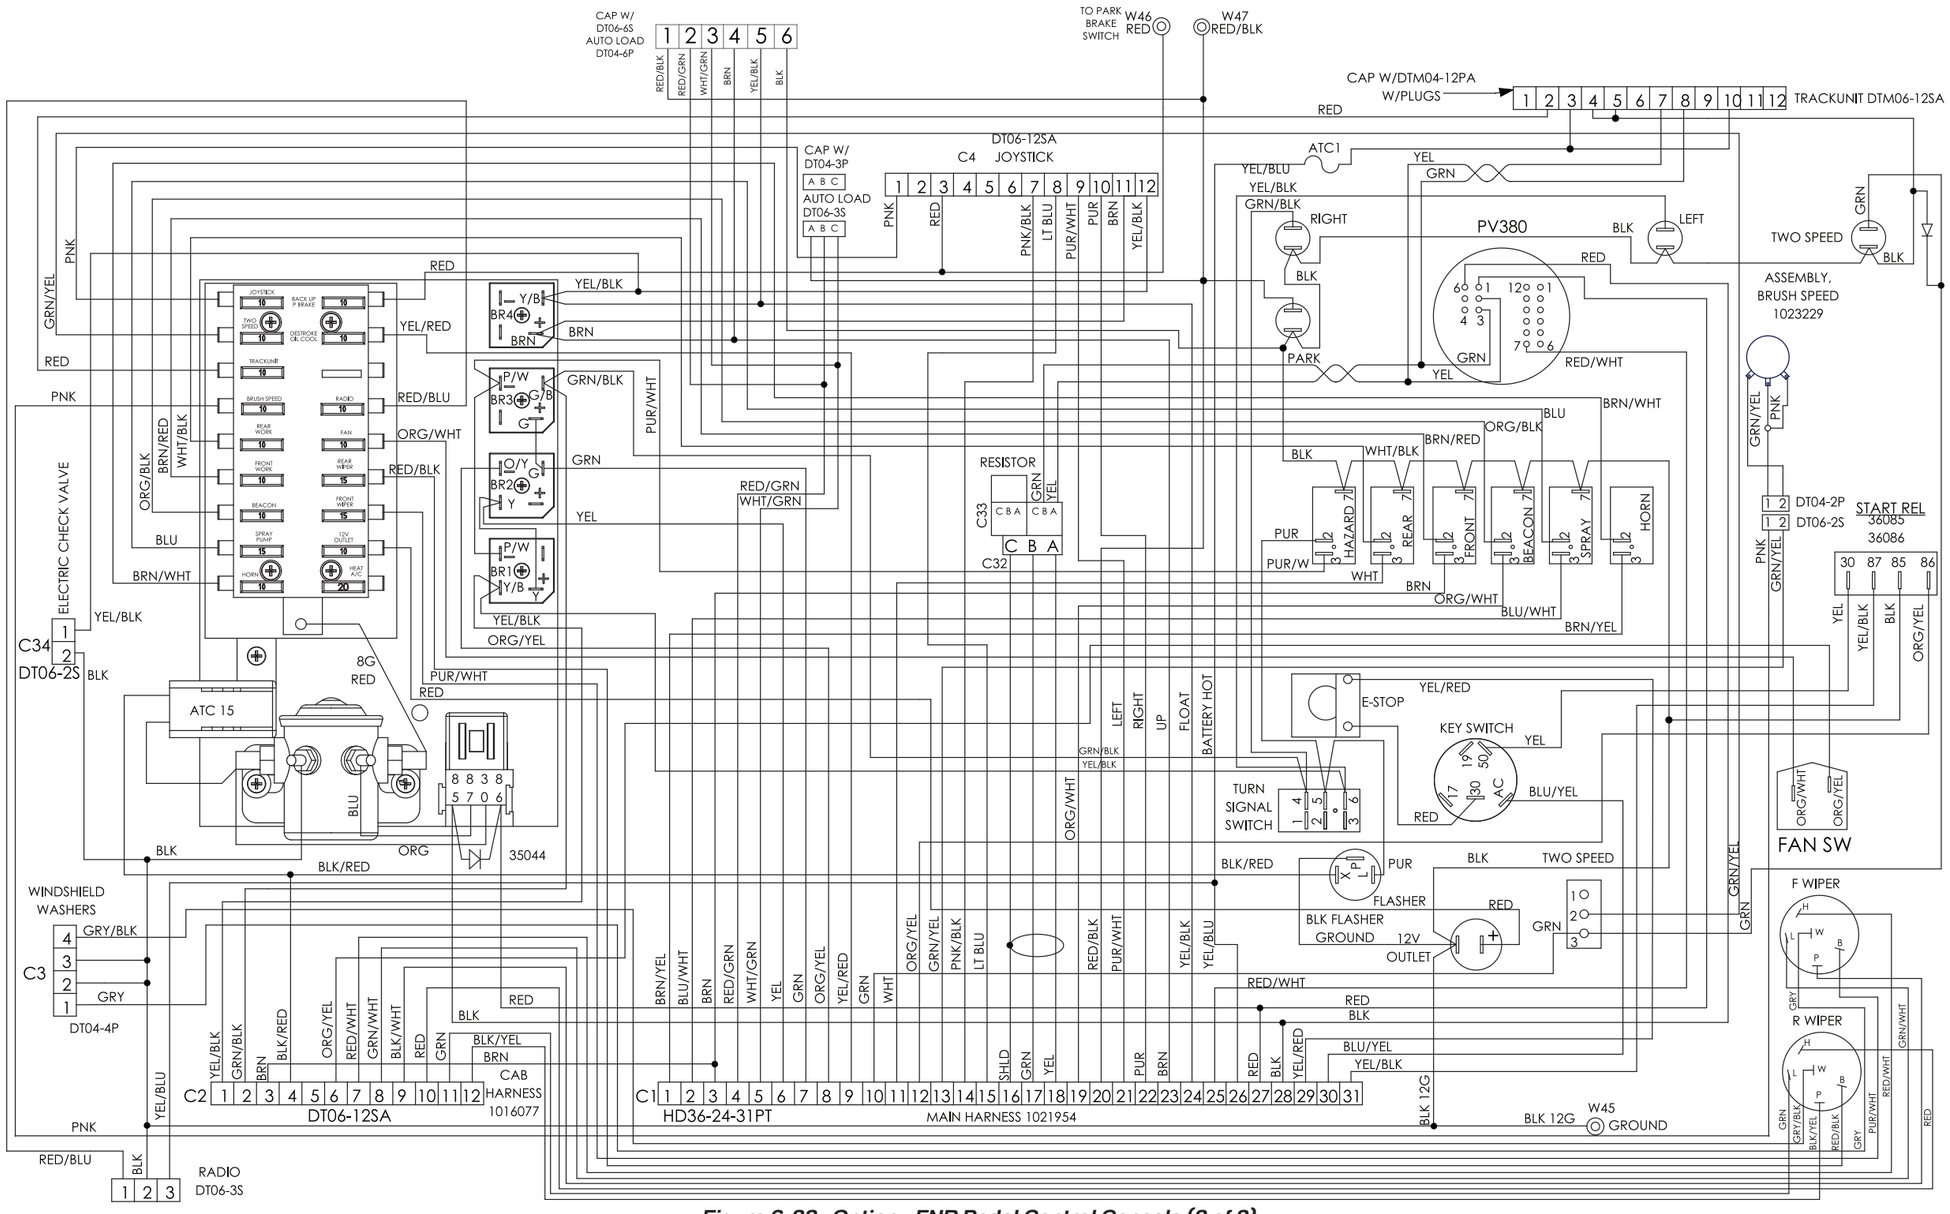


Figure 6-22. Option - FNR Pedal Control Console (2 of 2)

NOTES

HYDRAULIC SYSTEM - STANDARD (1 OF 5)

Schematic #1016638

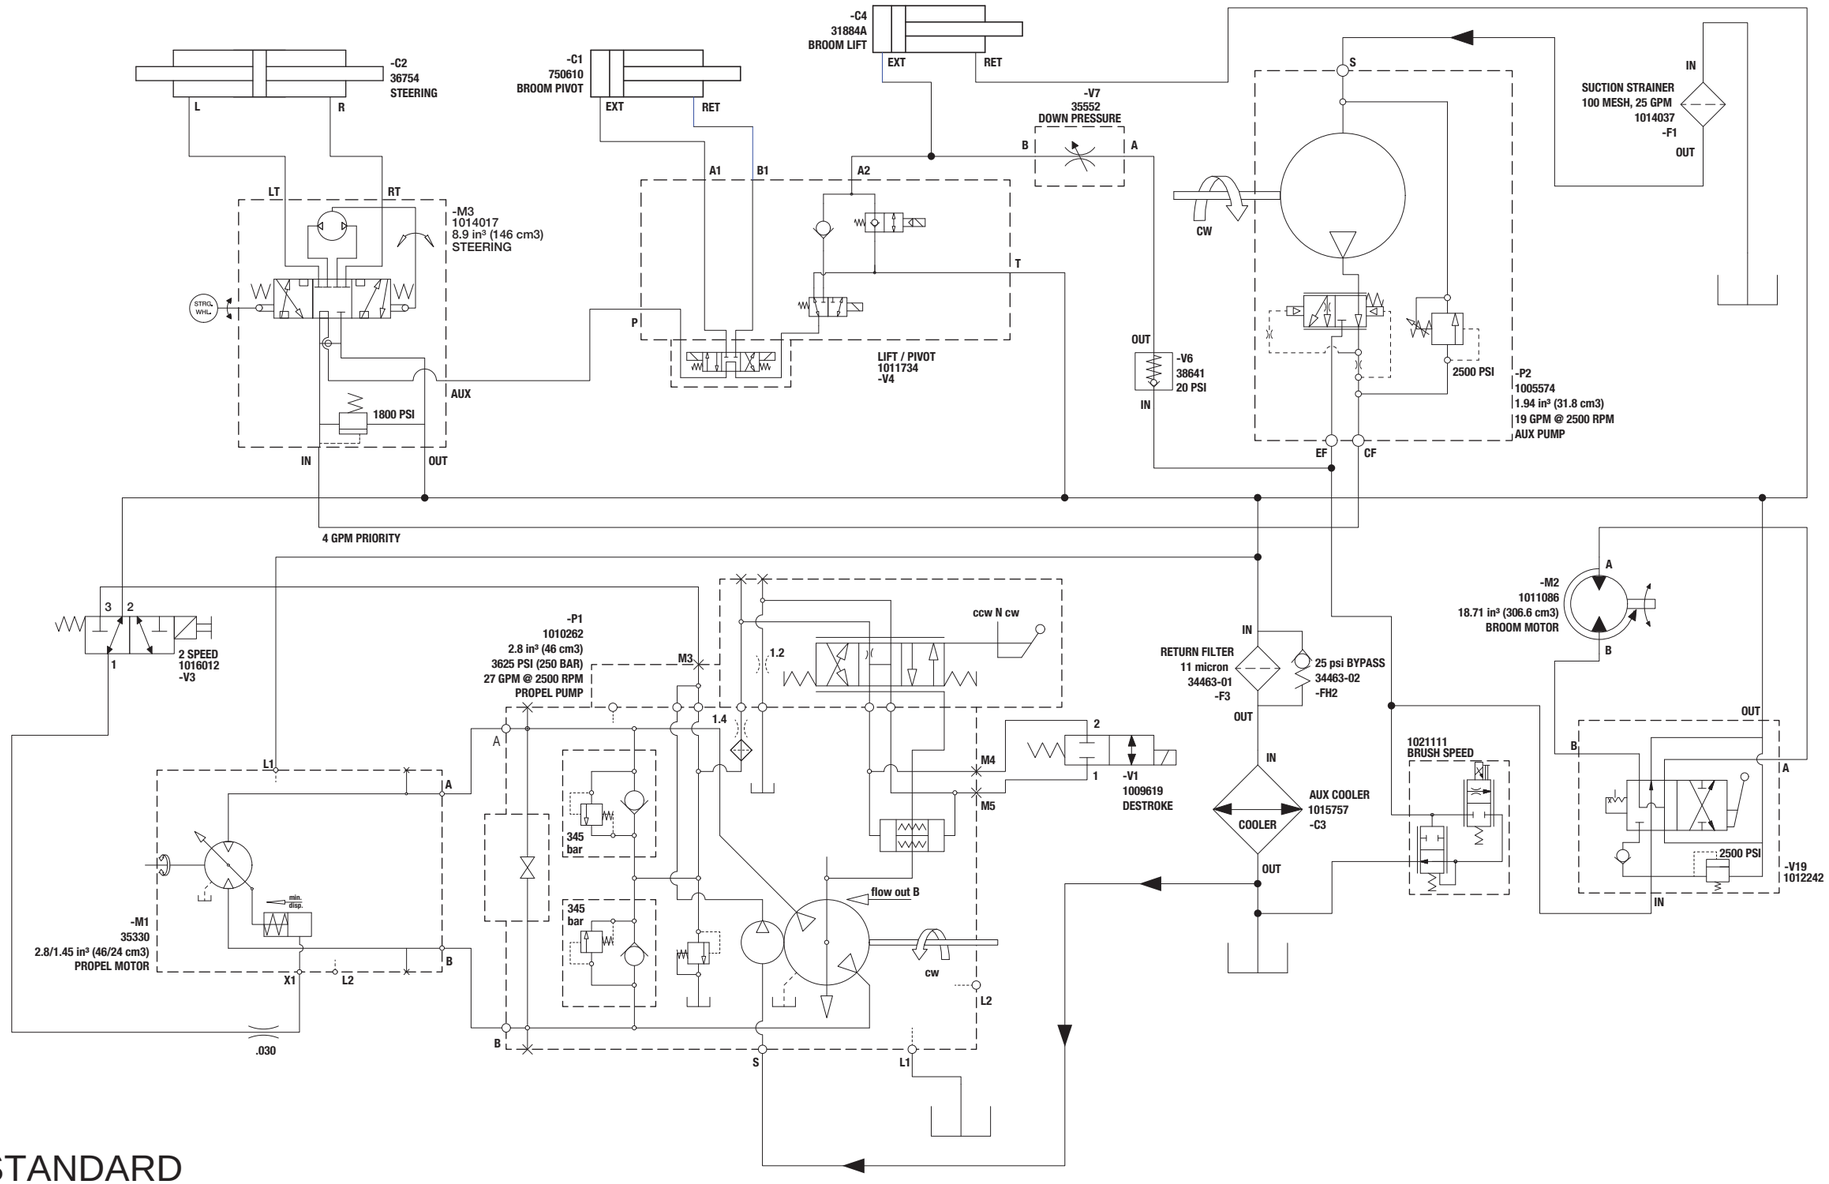

STANDARD

Figure 6-23. Hydraulic System - Standard (1 of 5)

NOTES