


KALLISTE Quick Start Guide

Version 2.0.0



- K-ARP -

The K-ARP user interface

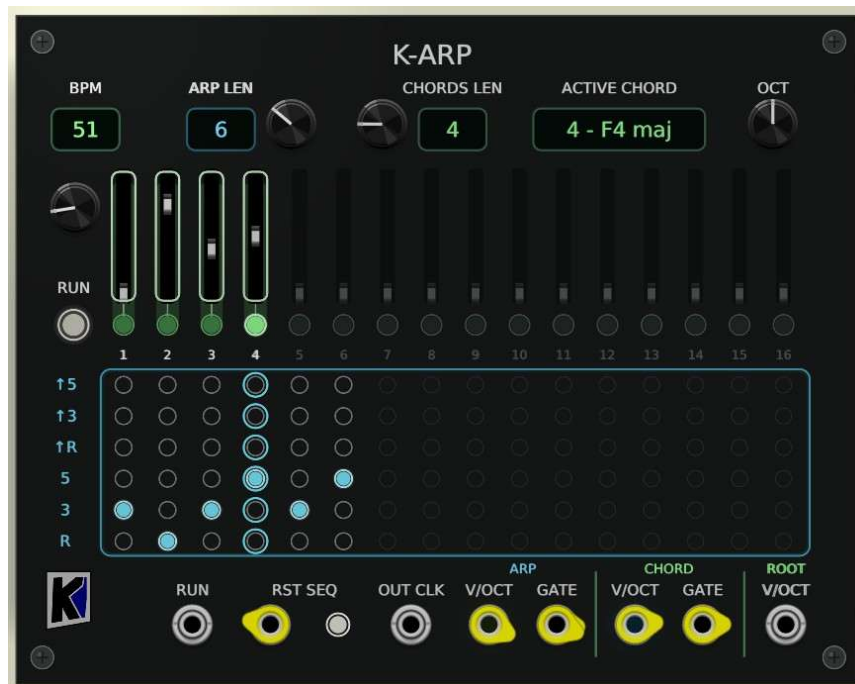

K-Arp is an interactive harmonic sequencer combining two independent sequencers :

- a **Chord Sequencer**
- a **Visual Arpeggio Matrix**

Unlike conventional arpeggiators, every chord and every arpeggio is completely and easily defined by the user. Nothing is generated randomly.


Each chord may have its own:

- Root note
- Chord quality (Major, Minor, Sus2, Sus4, Diminished or Augmented)
- Octave

The Visual Arpeggio Matrix lets you build arpeggios simply by clicking the notes you want to hear (from 0 to 6 notes per step).

Every modification is heard immediately.

Understanding the Visual Arpeggio Matrix

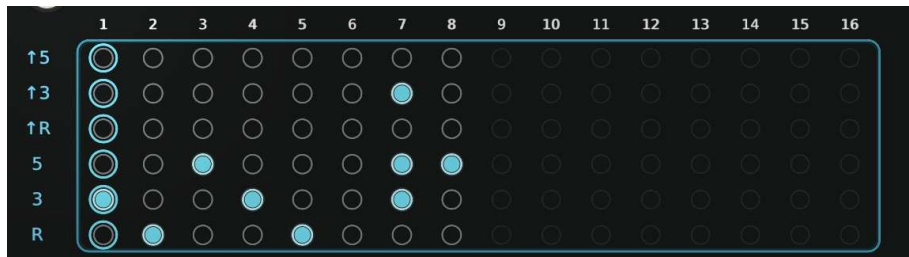

The Visual arpeggio matrix

Each row of the Visual Arpeggio Matrix represents one note of the current chord:

- R = Root
- 3 = Third
- 5 = Fifth
- ↑R = Root one octave higher
- ↑3 = Third one octave higher
- ↑5 = Fifth one octave higher

Click the desired cells to build your arpeggio.

Multiple notes may be selected in the same column to create polyphonic arpeggios.

→ **Tip:** Hold **Ctrl** and click a matrix cell to display the note corresponding to the programmed chord in that column.

Creating your first sequence

- Set the desired CHORD LEN using the CHORD LEN knob.
- Enter the chord roots using the vertical Chord sliders.
- Select the chord quality for each step using the corresponding Chord Type button.
- Set the octave of the selected chord using the OCT knob, if required.
- Set the desired ARP LEN using the ARP LEN knob.
- Build the arpeggio by clicking the desired notes in the Visual Arpeggio Matrix.
- Set the desired tempo using the Clock Tempo knob.
- Press RUN.

Your sequence starts immediately.

Editing while listening

K-Arp is designed for real-time composition. While RUN is active, you may freely modify: Chord roots, Chord qualities, Octaves, Arpeggio pattern, Tempo, CHORD LEN, ARP LEN.

→ Every modification is heard immediately.

Synchronization and Context Menu

K-Arp can easily be integrated into larger modular systems :

- Inputs :
 - RUN: Starts or stops K-Arp from an external trigger.
 - RST: Resets the current sequence.
- Outputs :
 - Clock
 - Root CV
 - Chord CV / Gate
 - Arpeggio CV / Gate

When several notes are active in the same arpeggio step, the Arpeggio CV and Gate outputs automatically become polyphonic.

Additional functions are available from the context menu:

- Clear Chords
- Clear ARP Matrix
- User Presets

- K-SCENE -



K-SCENE is an expander for K-ARP. Simply place it immediately to the right of K-ARP. No patch cables are required between the two modules.

K-Scene extends K-Arp by storing complete K-Arp configurations as Scenes.

Unlike traditional scene memories, K-SCENE lets you hear a scene while you are building it, before deciding to store it.

Each Scene stores:

- Tempo
- Chord progression
- Chord qualities
- Octaves
- Visual Arpeggio Matrix
- CHORD LEN
- ARP LEN

Up to 16 Scenes can be stored.

◆ K-SCENE PLAY Mode

K-Scene starts in PLAY / AUTO mode.

PLAY + AUTO mode :

Stored Scenes are played automatically in sequence.

Playback returns automatically to Scene 1 after the last stored Scene.

RUN OFF automatically resets playback to Scene 1.

Scene selection with the mouse is disabled while AUTO playback is active.

PLAY + MANUAL mode :

The active Scene is played continuously.

Click a stored Scene slot to make it the active Scene.

◆ K-SCENE STORE Mode

Selecting STORE ***automatically switches playback to MANUAL mode.***

STORE mode allows Scenes to be created, edited and organized.

► Recall a stored Scene

Press Ctrl + Click on a stored Scene slot.

⇒ The selected Scene immediately becomes the active editing Scene.

► Store the current Scene

(Build or modify a sequence in K-Arp).

- Click the destination Scene slot once.
- The selected Scene slot is armed for storage and its LED starts blinking.
- Click the same Scene slot again.

⇒ The current K-Arp configuration is stored in the selected Scene slot.

Note: Scenes can ***only be stored while K-ARP is stopped (RUN OFF).***

This prevents accidental overwriting during playback.

► Delete a Scene

- Press and hold the Scene slot you want to delete.
- The selected Scene slot and its LED start blinking, indicating that the Scene is armed for deletion.

- Click the same Scene slot again.

⇒ The Scene is deleted.

► **How to cancel the current operation armed (to store or delete a scene) ?**

Click anywhere outside the currently armed control.

Typical workflow

- Create a sequence in K-Arp.
- Switch K-Scene to STORE.
- Store the first Scene.
- Modify chords, arpeggios or tempo.
- Store the new version in another Scene.
- Repeat until your composition is complete.
- Switch to PLAY.
- Select AUTO or MANUAL.
- Press RUN on K-Arp.

One of K-Scene's most distinctive features is that every modification made while editing is heard immediately, allowing musical ideas to be refined naturally before they are stored.