
## PARTS FOR RARITAN PH SUPERFLUSH AND PH POWERFLUSH


Part No.	Description		
3 25101	Base	BOWL & SE	AT
4 25102	Base Plug	Part No.	Description
5 25103	Base O-Ring	16 1236AW	Spud assy.
6 25104	Base mounting plug	1 1237W	Marine-size Bowl assy.
8 F081	Bowl Bolt 1/4"-20 x 2 S/S Hex head	1 1244W	White Household-style Bowl assy.
9 RNI	Nylon Shoulder Washer	7 25105	Bowl Gasket
10 1226B	Nut, 1/4"-20 S/S (8)	2 1238SC	Marine-size seat & cover; Slow Close
12 1208W	Retractable handle	2 1245SC	Household-style seat & cover; Slow Close
13 1236E	Bowl Elbow	11 VCAP	Vinyl Cap
14 CH43P	Hose Clamp (2)		•
15 CH42	Hose (¾" I.D.)		
19 F408	Screw: 1/4-20 x 5/8		
20 1200CW	Pump Housing	ADDIT	CIONAL DADEC EOD DADIEAN
21 1214W	Piston Shaft Seal Cartridge Assy		TIONAL PARTS FOR RARITAN
	(1214, 1214A, 1214B)	PH SUPE	RFLUSH AND PH POWERFLUSH
23 1214A	Cartridge Shaft seal	RARITAN INSTALLATION ACCESSORIES	
24 1214B	Cartridge O-ring	Part No.	Description
25 1203BW	IntakeValveBodyw/"O"Rings,	163000	In-Line Strainer
	(Includes 1203B, 1203B1, 1203B2,	1PCP22	C.P., Cleans Potties, Bio-enzymatic, 22oz.
	1203B3)	CHTII	Compact holding tank - 5 gallon
29 1204B	Intake Valve Cap	SFH	Sani-Flex Hose
30 1202	Intake and Discharge Valve Gasket (2)	SL1CC	Super Lube 1cc tube
31 1209BW	Valve Handle	KO2	Knocks Out Odor Kit
32 1124	1/4"- 20 x 1/2" R.H. Machine Screw	TD90319	Vented Loop 3/4"
33 1217	Discharge Valve Cap	TD90323	Vented Loop 1 1/2"
34 LWS	Intake and Discharge Valve Spring (2)	TD90314W	"Y" Valve
35 1201	Intake and Discharge Valve Ball (2)	OVERHAU	I KITS
36 1212W	Piston Rod Assembly w/"O" Ring	Part No.	
	(1232MS)	PHRKIIC	<u>Description</u> PHII&PHEII-Repair kit
37 1232MS	Piston "O" Ring		PHII Pump replacement assembly
38 1203W	Air Valve Assembly		
39 1228CA	Flapper valve with embedded weight	CONVERSI	ON KIT
40 C253	Joker Valve	P104E**	PH SUPERFLUSH to PH POWERFLUSH
41 1222AW	90° Discharge w/Flange (Std.)		Conversion Kit
42 1222B	Straight Discharge (Opt.)		
43 1115	3/8"-16 x 1 1/2" Hex Head S/S Bolt(2)		
44 1223B	Flange Nut 3/8"-16 S/S (2)		
45 1210	Handle Socket		
46 1211PL	Piston Rod Yoke		
47 F005	1/4" - 20 x 5/16" S/S set screw		
48 1218	Fulcrum Link (2)		
49 1216	Clevis Pin (3)	**Voltage:	
50 1210A	Cotter Pin	12 (12VDC) 24 (24VDC)	
		12T (115V/2	
		`	

L563 1017jlc

## PH SUPERFLUSH EXPLODED VIEW

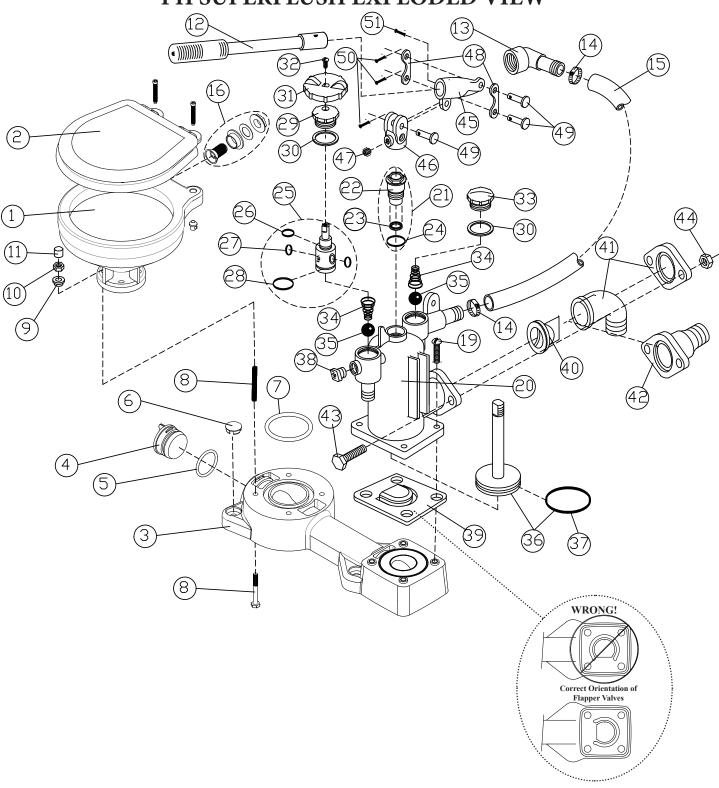

## POWERFLUSH EXPLODED VIEW

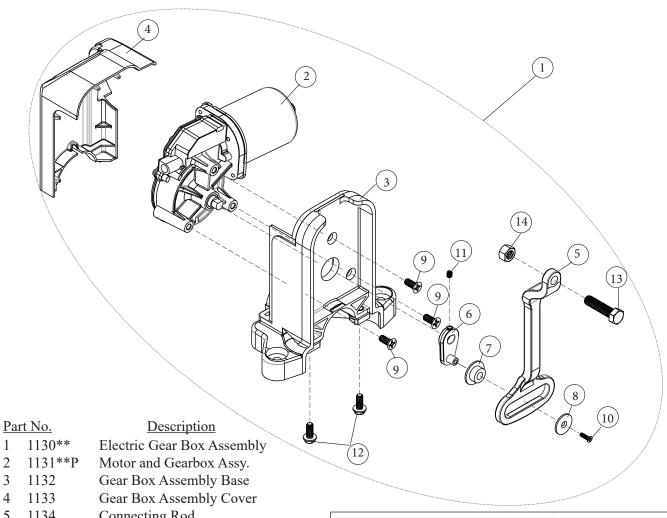

1	1130**	Electric Gear Box Assembly
2	1131**P	Motor and Gearbox Assy.
3	1132	Gear Box Assembly Base
4	1133	Gear Box Assembly Cover
5	1134	Connecting Rod
6	1135	Link
7	1136	Roller
8	1137	Roller Washer
9	F359	Gear Box Mounting Screws (3)
10	F360	Roller Screw


11 F149VT Set Screw12 F408 Assembly Mounting Screws (2)

13 1115 3/8-16 x 1 1/2" Bolt


14 1115A 3/8-16 Nut

## PRS Power Rocker Switch





\*\*Voltage: 12 (12VDC) 24 (24VDC) 12T (115V/230V AC)

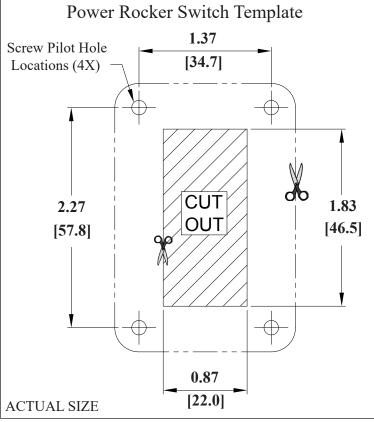

10 L563 1017jlc