PEDAL FACE (top of the box) - drilling template, seen from OUTSIDE

Print at 100 % ('actual size', no 'fit to page'). Check the 50 mm bar with a ruler.
Tape it on the box, centre-punch every cross, drill small (3 mm) first, then open up with a step drill.

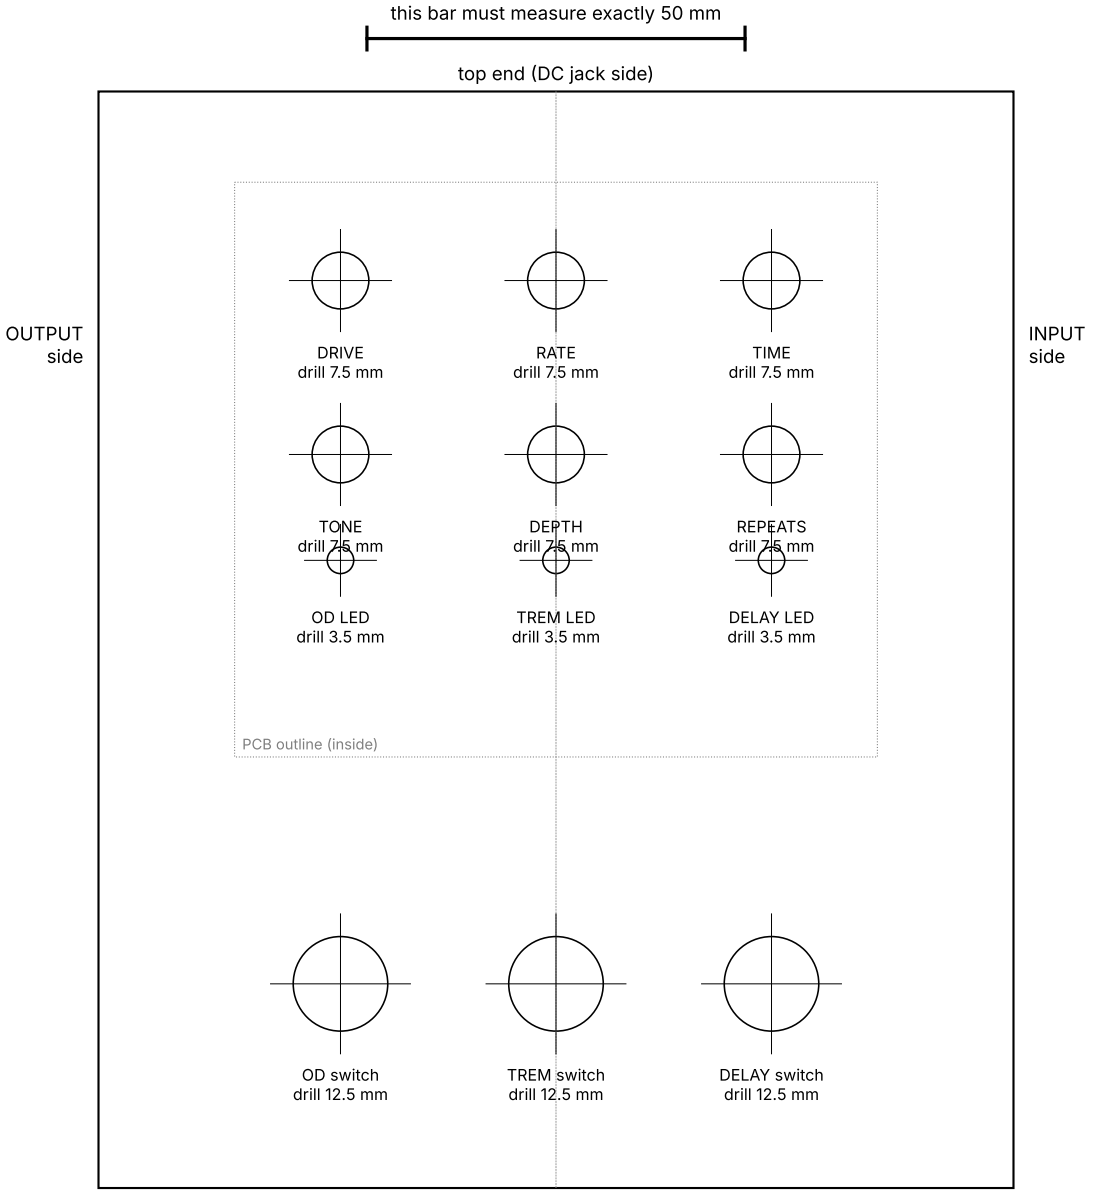

Hole centres, mm from the face's top-left corner (seen from outside):

DRIVE	x	32.0	y	25.0	(7.5)	OD LED	x	32.0	y	62.0	(3.5)
TONE	x	32.0	y	48.0	(7.5)	TREM LED	x	60.5	y	62.0	(3.5)
RATE	x	60.5	y	25.0	(7.5)	DELAY LED	x	89.0	y	62.0	(3.5)
DEPTH	x	60.5	y	48.0	(7.5)	OD switch	x	32.0	y	118.0	(12.5)
TIME	x	89.0	y	25.0	(7.5)	TREM switch	x	60.5	y	118.0	(12.5)
REPEATS	x	89.0	y	48.0	(7.5)	DELAY switch	x	89.0	y	118.0	(12.5)

Drawn for a Hammond 1590XX (145 × 121 × 39 mm). Different box? Keep the holes' positions relative to each other (they match the PCB) and centre the group on your box.

SIDE WALLS - seen from OUTSIDE, face edge at the top

All three holes are 24 mm down from the face. That keeps the jacks below the parts on the PCB.
Solder the jack and switch wires straight into J1/J2/J3/J6 (no pin headers there), so nothing sticks down.

this bar must measure exactly 50 mm

TOP END wall (121 mm)

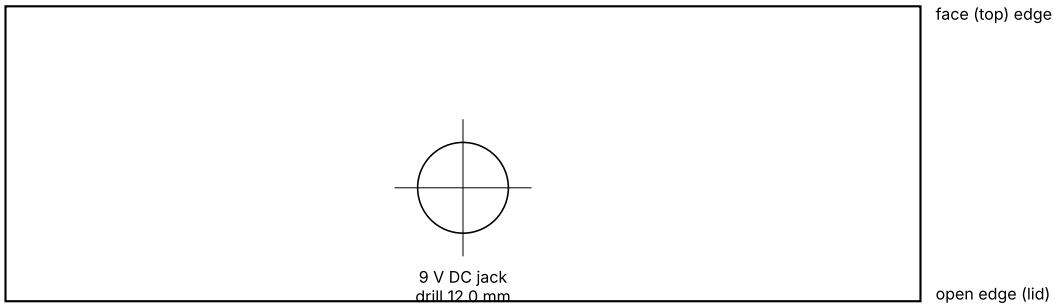

The DC jack sits in the middle of the top end.

RIGHT side wall = INPUT (145 mm). Top end of the box is at the RIGHT of this drawing.

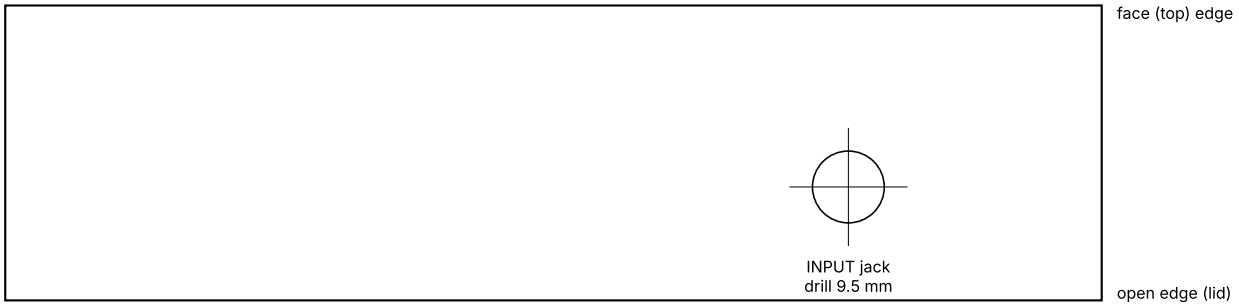

Input jack centre: 33.5 mm from the top end.

LEFT side wall = OUTPUT (145 mm). Top end of the box is at the LEFT of this drawing.

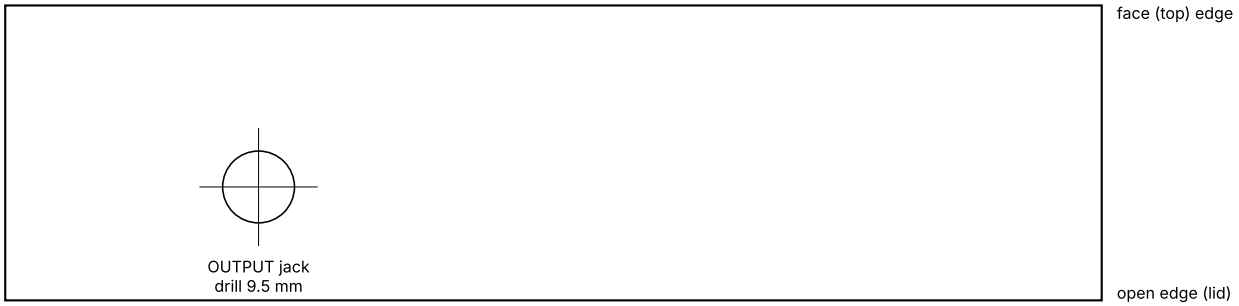

Output jack centre: 33.5 mm from the top end.