1075-07 Mod 3 · Parts & assembly checks

Revision 2 · October 29, 2026 · Matte Black · Original 13 mm · 44.16″ H × 88.84″ W × 65.46″ D

Part	Quantity	Details
Original 13 mm tubes		
265	28	9.88″
460	27	17.68″
595	44	22.87″
Original zinc connectors		
3T	5	Original
4T	18	Original
5T	17	Original
6T	2	Original
Glass shelves		
1717	3	17 9/16″ square
1722	15	17 9/16″ × 22 3/4″
Accessories		
620	72	Curved corner clip
705	14	One foot per leg
012	72	One bumper per clip

Tools & preparation

913 nylon mallet, wood support block, safety glasses and secure frame supports. Check all connector directions before seating. Keep feet until all hammering is complete.

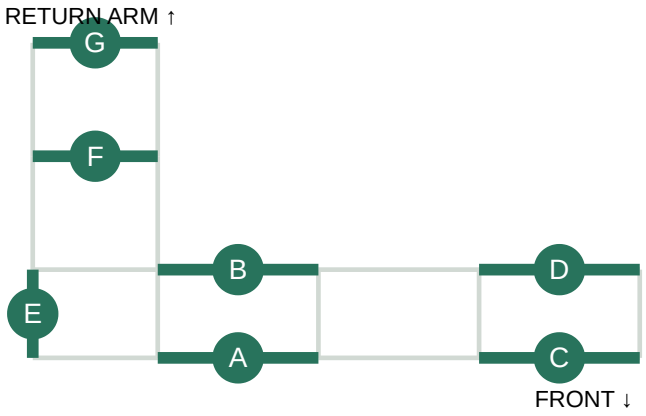

A: #595 / 22.87″ / 5T–5T · B: #595 / 22.87″ / 6T–5T · C: #595 / 22.87″ / 5T–4T · D: #595 / 22.87″ / 5T–4T · E: #460 / 17.68″ / 4T–5T · F: #460 / 17.68″ / 5T–5T · G: #460 / 17.68″ / 4T–4T

1. Sort the parts

☐ Count all listed parts against Revision 2.

☐ Identify tubes by code AND inch length; set out mallet and wood block.

2. Bones & connectors

☐ Find bones A–G on the plan.

☐ Check both connector types and every unused prong direction.

3. Prepare the base bones

☐ Two prongs rest on the wood during alignment.

☐ Both tube ends meet connector shoulders flush; orientations match the plan.

4. Lay out seven bones

☐ Seven bones A–G are in their marked locations.

☐ Four 595 bones and three 460 bones cover fourteen distinct connectors.

5. Join the L-shaped base

☐ All twelve joining tubes are seated; base has nineteen tubes.
☐ L footprint is square and all fourteen connector orientations match.

6. Fit fourteen uprights

☐ Fourteen 595 uprights are seated flush.
☐ All uprights are parallel and matching joint heights agree.

7. Fit the middle ladder

☐ Middle ladder has fourteen matching connections.
☐ Remaining vertical prongs face upward; joints are seated progressively.

8. Fit fourteen upper uprights

☐ Fourteen upper 265 uprights are seated flush.
☐ All upper joints are aligned before fitting the top.

9. Fit the top ladder

☐ Top ladder has no upward-facing prongs.
☐ All frame joints are flush before fitting short legs.

10. Insert fourteen short legs

☐ Frame is securely supported before working below it.
☐ Fourteen short 265 legs meet the downward connector shoulders flush.

11. Fit adjustable feet

☐ Fourteen feet are installed; gray collars meet the tube ends.
☐ Threaded shafts and black pads remain outside; no more hammering.

12. Fit 620 corner clips

☐ One 620 bridges two perpendicular tubes at each corner.
☐ All 72 clips have 012 bumpers; each shelf position has four padded supports.

13. Place the glass shelves

☐ All four bumpers are present before placing each shelf.
☐ 18 glass shelves rest evenly on padded supports: 15 rectangular + 3 square.

14. Inspect the unit

☑️ Check flush joints, squareness, feet and all shelf supports.
☐ Confirm site-specific stability and load requirements before loading.

Manufacturer guidance reviewed: September 2025 assembly instructions, steps 2–8. Paired grouping for this custom L and the support arrangement remain illustrative; confirm physical working orientation and support with the supplier. Casting/clip fits and structural loading are unverified. Original drawing and revision comparison are in the interactive Drawing notes. Glass mesh thickness remains 4 mm.