
200 Mod · Parts & assembly checks

Revision 1 · October 30, 2026 · Chrome · Original 13 mm · 47.28″ H × 172.00″ W × 16.10″ D

Part	Quantity	Details
Original 13 mm tubes		
395	208	15.08″
Original zinc connectors		
3T	8	Original
4T	48	Original
5T	40	Original
Glass shelves		
1414	44	14 15/16″ square
Accessories		
620	176	Curved corner clip
012	176	One bumper per clip


Tools & preparation

913 nylon mallet, wood support block, safety glasses and secure frame supports. Check all connector directions before seating. No separate legs, feet or glides are listed.

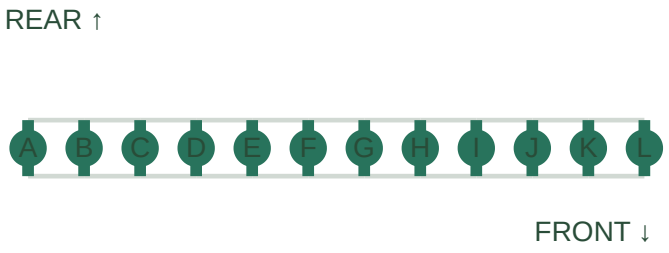

A: #395 / 15.08″ / 3T–3T · B: #395 / 15.08″ / 4T–4T · C: #395 / 15.08″ / 4T–4T · D: #395 / 15.08″ / 4T–4T · E: #395 / 15.08″ / 4T–4T · F: #395 / 15.08″ / 4T–4T · G: #395 / 15.08″ / 4T–4T · H: #395 / 15.08″ / 4T–4T · I: #395 / 15.08″ / 4T–4T · J: #395 / 15.08″ / 4T–4T · K: #395 / 15.08″ / 4T–4T · L: #395 / 15.08″ / 3T–3T


1. Sort the parts

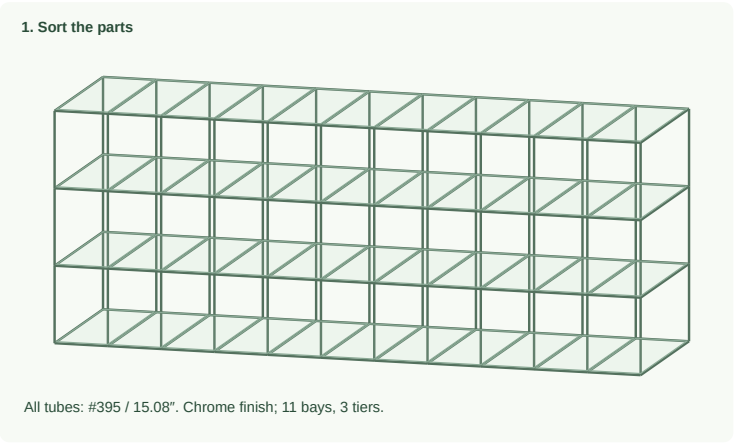

New parts: None. No previously assembled sections required. Tools: No additional tools.

☐ Count 208 identical 395 tubes and all drawing parts.
☐ Set out the 913, wood block and safety glasses.


2. Bones & connectors

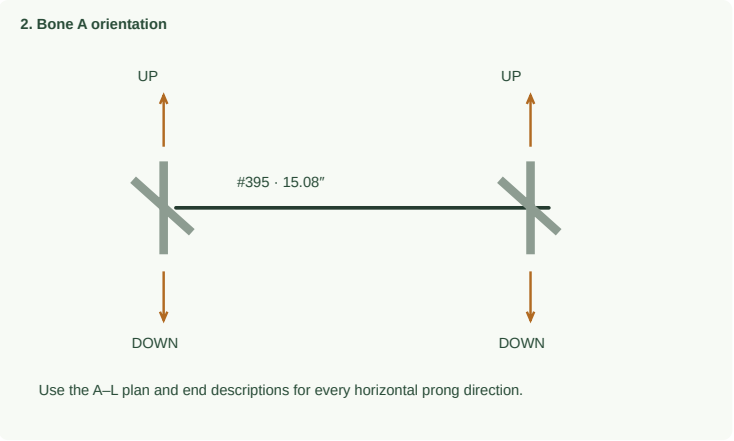

New parts: None. No previously assembled sections required. Tools: No additional tools.

☐ Find bones A–L on the plan.
☐ A/L use 3T ends; B–K use 4T ends. Base prongs point up, not down.


3. Prepare twelve bones

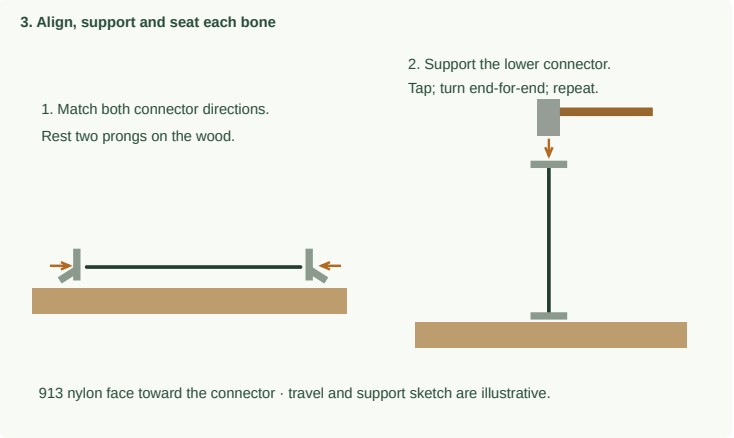

New parts: 12 × 395, 4 × 3T, 20 × 4T. No previously assembled sections required. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Align two prongs on the wood before seating.
☐ Both ends are flush and connector directions match the plan.


4. Lay out bones A–L

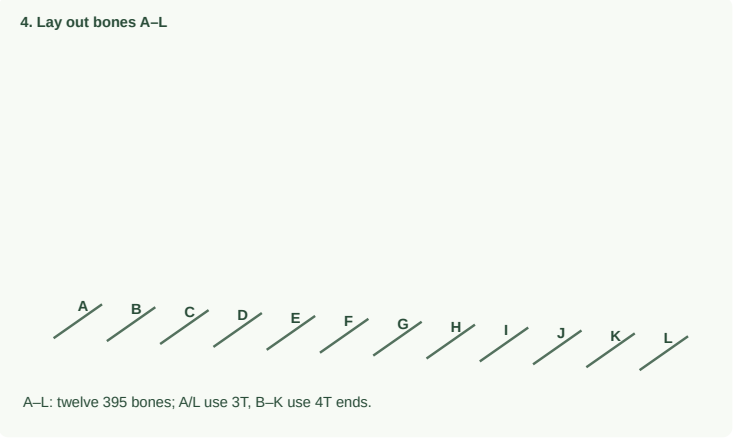

New parts: None. Use the twelve completed bones A–L; no new parts. Tools: No additional tools.

☐ Twelve bones A–L are in order.
☐ All twelve tubes are 395 / 15.08″; twenty-four connectors are fitted.

5. Join the base ladder

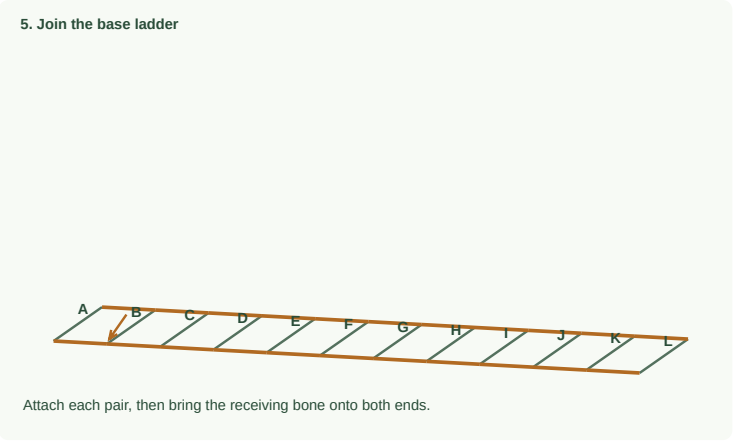


Attach each pair, then bring the receiving bone onto both ends.

New parts: 22 × 395. Use completed bones A–L; twenty-two joining tubes are new. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ All twenty-two joining tubes are seated; base has thirty-four tubes.
☐ Eleven bays are square and all upward prongs remain available.

6. Fit first 24 uprights

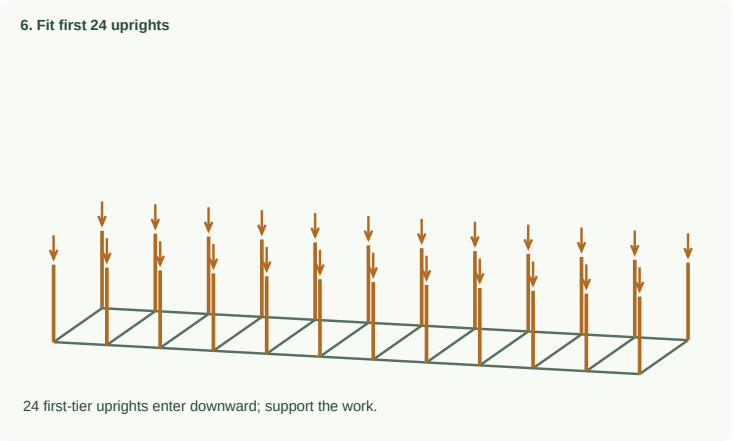


24 first-tier uprights enter downward; support the work.

New parts: 24 × 395. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☑️ Twenty-four first-tier uprights are flush.
☐ All uprights are parallel and matching joint heights agree.

7. Fit second ladder

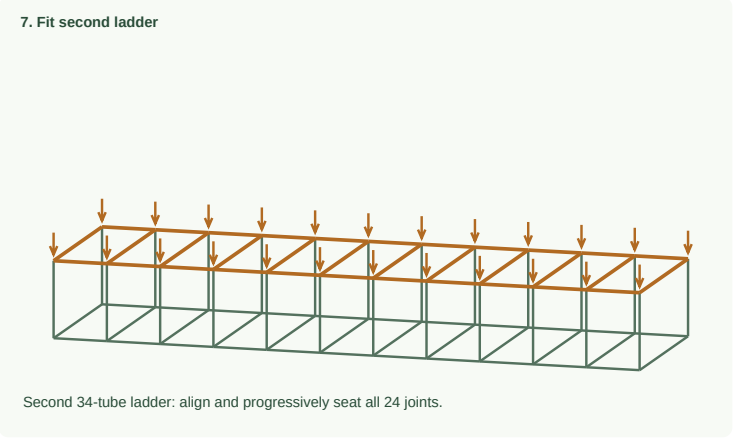


Second 34-tube ladder: align and progressively seat all 24 joints.

New parts: 34 × 395, 4 × 4T, 20 × 5T. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Second ladder engages all twenty-four uprights.
☐ Four 4T and twenty 5T connectors leave upward prongs available.

8. Fit second 24 uprights

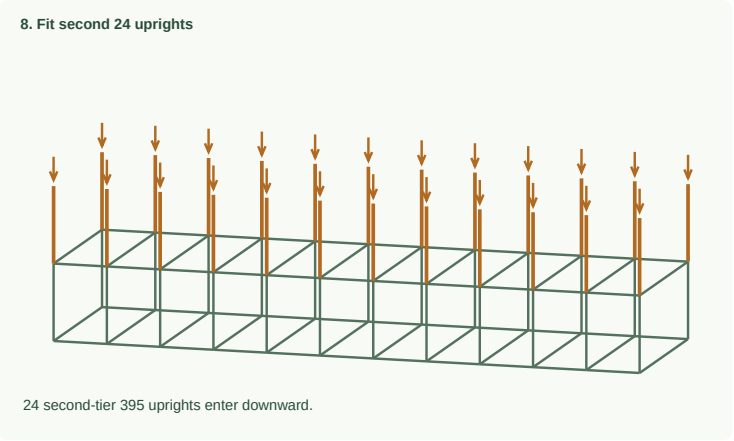


24 second-tier 395 uprights enter downward.

New parts: 24 × 395. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Twenty-four second-tier uprights are flush.
☐ Check alignment before adding the third ladder.

9. Fit third ladder

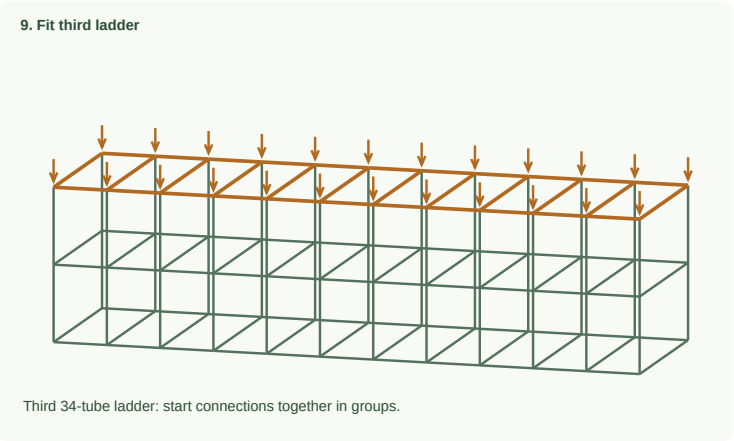


Third 34-tube ladder: start connections together in groups.

New parts: 34 × 395, 4 × 4T, 20 × 5T. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Third ladder engages all twenty-four uprights.
☐ All joints are progressively seated, leaving upward prongs available.

10. Fit final 24 uprights

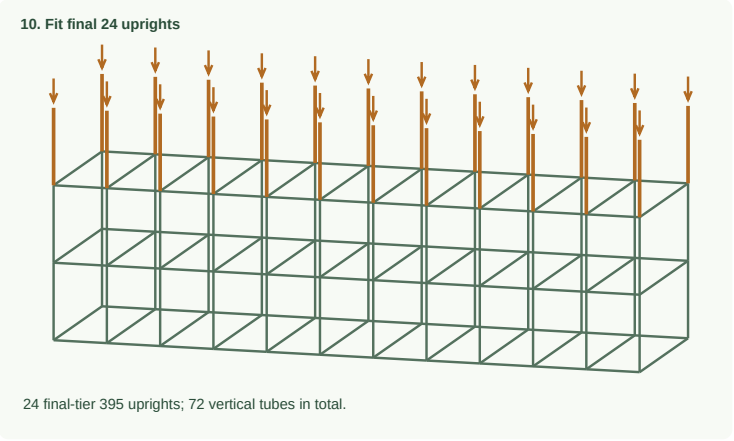


24 final-tier 395 uprights; 72 vertical tubes in total.

New parts: 24 × 395. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Twenty-four final-tier uprights are flush.
☐ All seventy-two vertical tubes are installed before the top.

11. Fit top ladder

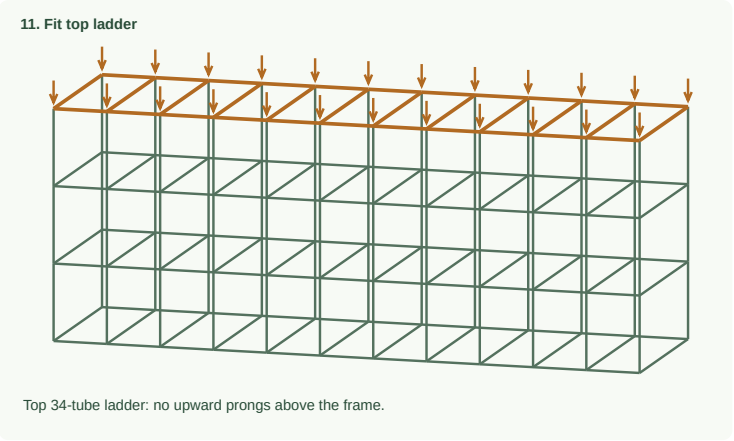


Top 34-tube ladder: no upward prongs above the frame.

New parts: 34 × 395, 4 × 3T, 20 × 4T. Use the frame completed through the previous step. Tools: 913 nylon mallet, Wood support block, Safety glasses

☐ Top ladder has four 3T and twenty 4T connectors.
☐ Top has no upward prongs; all 208 tubes and 96 connectors are fitted.

12. Fit 620 clips

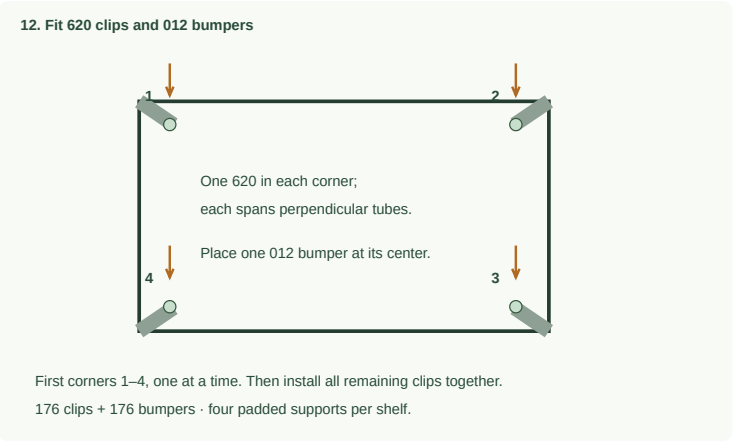


First corners 1–4, one at a time. Then install all remaining clips together.
176 clips + 176 bumpers · four padded supports per shelf.

New parts: 176 × 620, 176 × 012. Use the completed frame with every joint seated. Tools: No additional tools.

☐ One 620 spans perpendicular tubes at each shelf corner.
☐ 176 clips each have a 012 bumper; four supports per shelf.

13. Place 44 glass shelves

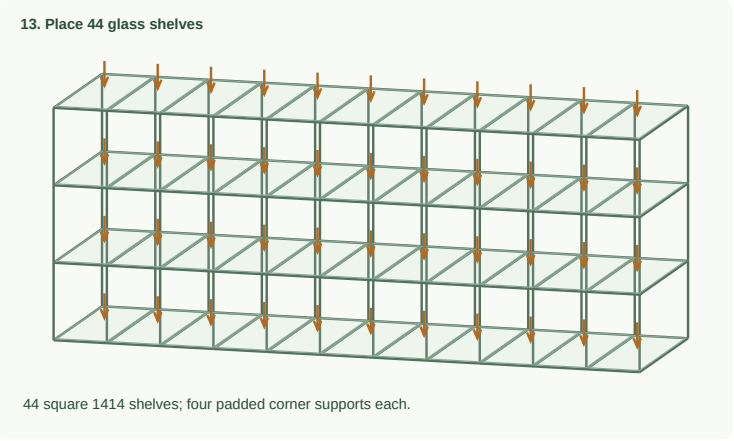


44 square 1414 shelves; four padded corner supports each.

New parts: 44 × 1414. Use the frame with all 176 clips and bumpers fitted. Tools: Protective handling equipment appropriate for glass

☐ Every glass position has four padded supports before installation.
☐ 44 square 1414 shelves rest evenly across eleven bays and four levels.

14. Final inspection

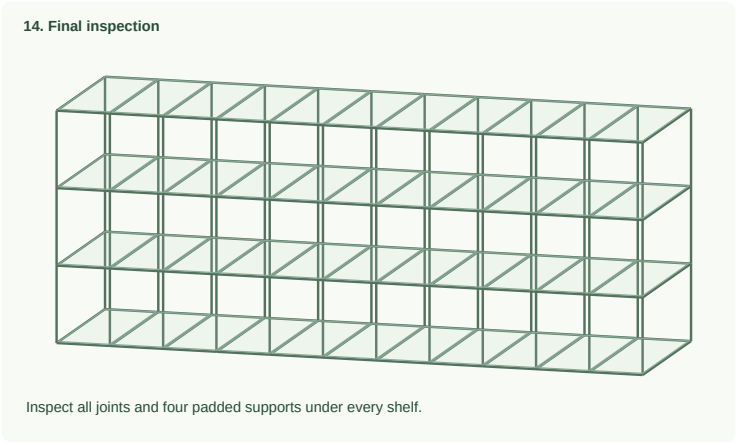

Inspect all joints and four padded supports under every shelf.

New parts: None. Use the assembled unit; no new parts. Tools: No additional tools.

☐ Inspect flush shoulders, square bays and four bumpers per shelf.
☐ Confirm installation stability, anchoring requirements and loading with the supplier.

Manufacturer guidance reviewed: September 2025 assembly instructions, steps 2–8. The paired-bone presentation and physical working arrangement remain illustrative; confirm physical working orientation and support with the supplier. Casting/clip fits and structural loading are unverified. Original drawing and revision comparison are in the interactive Drawing notes. Glass mesh thickness remains 4 mm.