


## Step 3: Creating the MX1508 Device in EAGLE

- 1. Open the Library window again and choose Device . Name the device MX1508.
- 2. Add the symbol by clicking Add. Select MX1508 and left click to place it at the origin. Hit escape and close the pop up window.
- 3. Click New in the bottom left and add the package.
- 4. Click connect in the bottom left and connect all the pins to the corresponding pads.

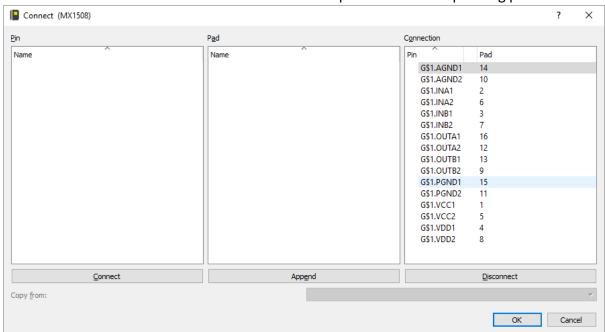

5. Click Description and add a short description for our device

