WEEK_6 Againi

How many shields with epsilon 0.1 should you add in order to have the new heat transfer rate to be 1% of the case without shields?

CASE WITHOUT SHIELDS

To reduce the heat exchange to 1% of the initial value without shields, it is necessary to introduce 99 shields with epsilon $0.1\,$

$$Q_{12,\text{n shields}} = \frac{A \sigma(T14 - T24)}{(N+1)(\frac{1}{\epsilon_1} + \frac{1}{\epsilon_2} - 1)}$$

$$Q_{12,\text{n shields}} = \frac{1}{(N+1)} Q_{\text{no shields}}$$

$$N = 1 \frac{Q12,\text{n shields}}{Q\text{no shields}} - 1$$


$$N=1\frac{100}{1}\%-1$$

N=99


Sketchup Open studio

STEP 1.

Do the plan drawing of your building. IMPORTANT: Do not extrude any shapes using Sketchup tools . And if you want to save the file, you must do it with open studio tools and not with sketchup

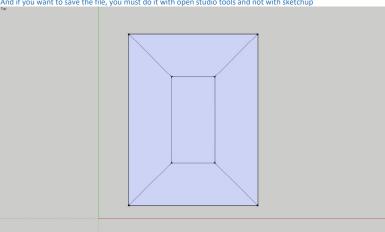


STEP 2.
Use the tool Create space from diagram on the open studio toolbar. In the new window, you can modify the height of each floor and the number of floors. In this case, the floor height is 10 inches

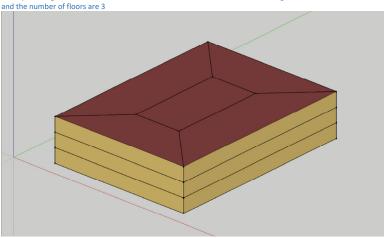


STEP 3.

Select all model and use the open studio tool called surface matching in the new window, you select "Match in entire model". This step is important to separate the facades with the entire model.

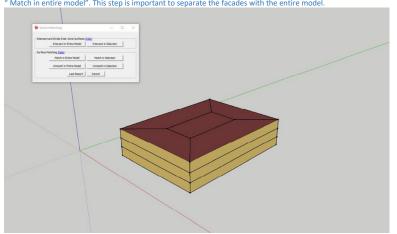


STEP4.

Create windows in the 4 facades following the path shown in the image.

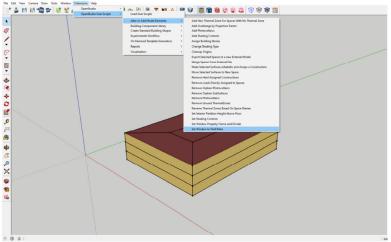


STEP 5.


After following the route to create windows you can configurate the height of the windows, as it is shown in the new window.

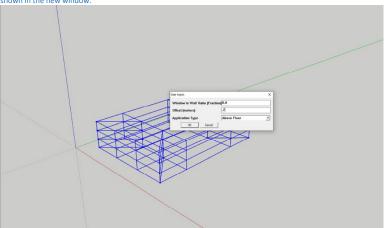


STEP 6.

To select certain surfaces you can use Select with filter In this case, we want to select all surfaces except north facades. In the new window, you can modify the angle of the selection, change it from values different to 0 or 360

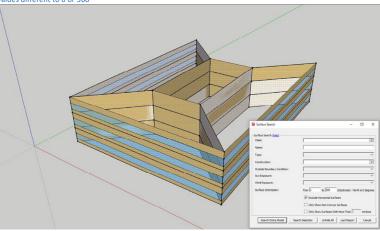

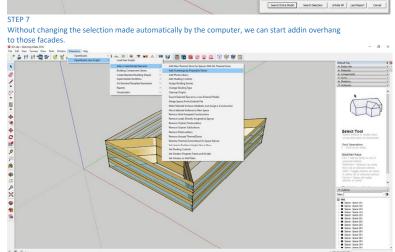


Once you added overhang, you re do the step related with search surface changing the values to 0 360 in a way it includes all surfaces.

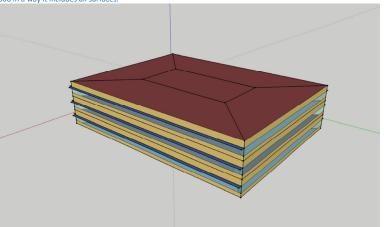


STEP 9.

To start adding specifications to each space is necessary to have outliner on, so you can choose the

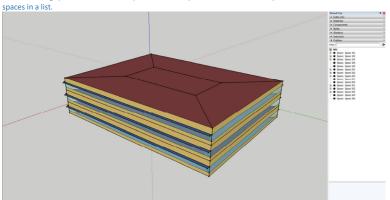


STEP 10.

Using the tool Set attributes to selected spaces you can add the attributes to each thermal zone in the building.

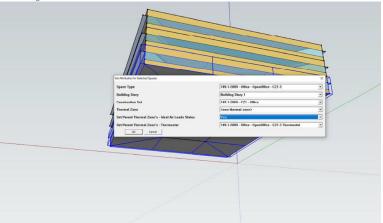


STEP 11.

After adding all attributes in sketchup we are done with the program. Now, we move to Openstudio

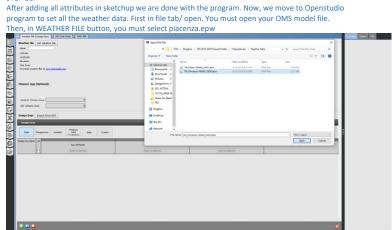


STEP 12.
In the Button IMPORT FROM DDY you must select Piacenza.ddy

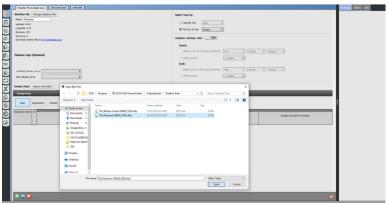

STEP13.

Now you are ready to run the software. Be aware, if it shows errors, you must repeat the process, and check if you assigned wrong the attributes to the spaces on sketchup or the imported file and weather data in openstudio

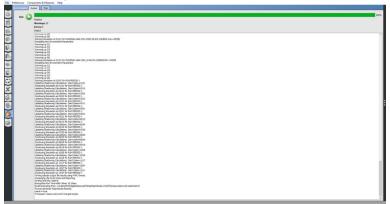

STEP 14.

Finally, you can check your results on the final tab, and you find them in two ways: EnergyPlus results or OpenStudio results.

