
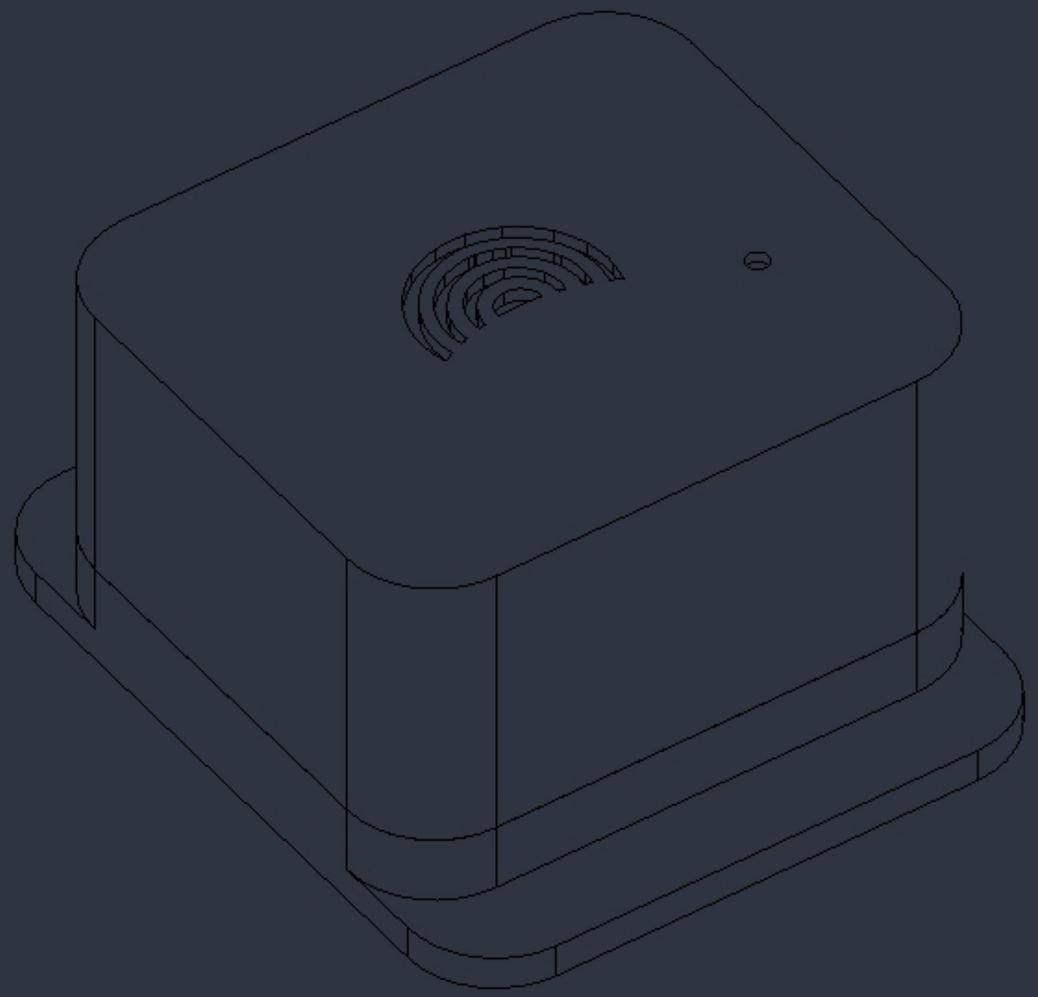



GeoShake T1 Assembly Instructions

Rev A · July 2026.

Parts List

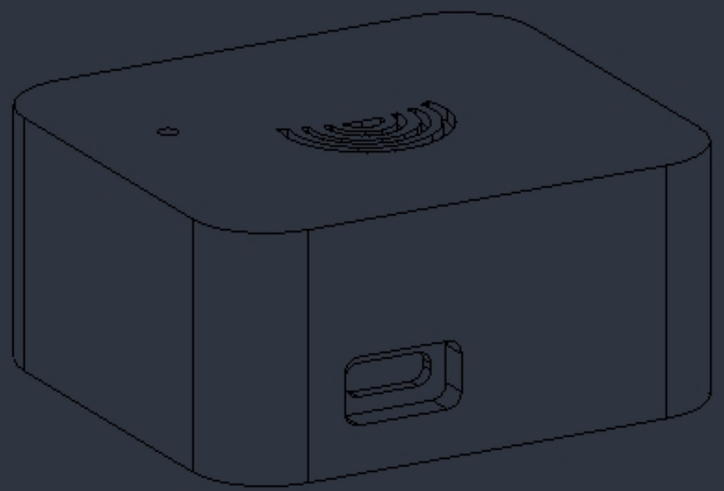

Enclosure Lid

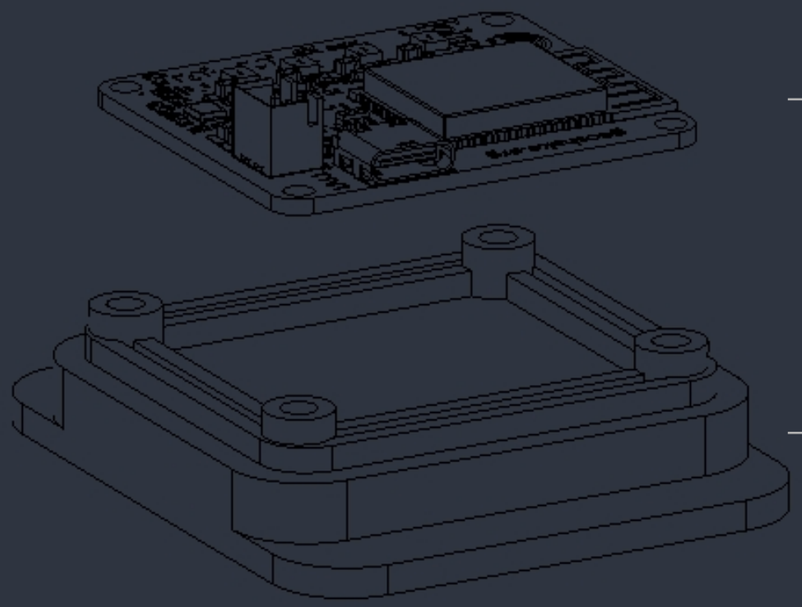

Main PCB

Base Plate



M3 Hex Nut

2 pieces



M3 Heat Set Inserts

2 pieces




M3X15mm Screw

2 pieces




M3X25mm Screw


2 pieces

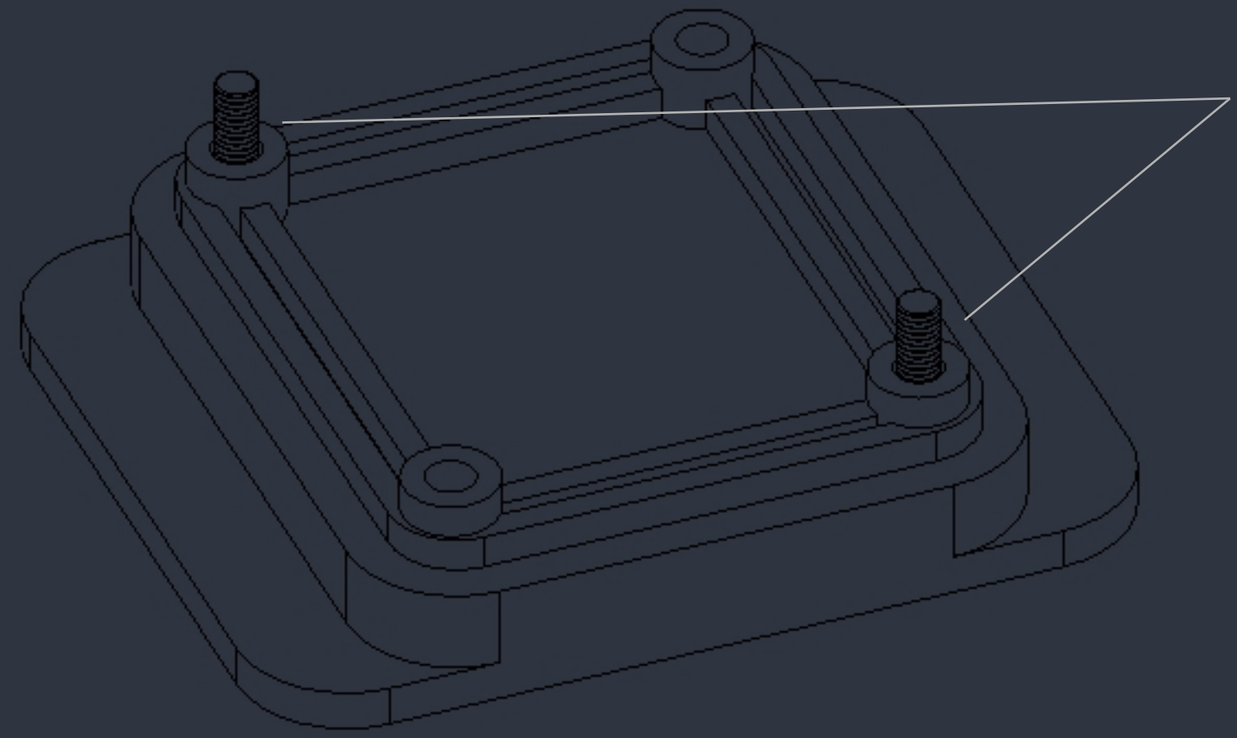

Insert the two M3×15 screws into the base plate from below, at the corner positions shown.

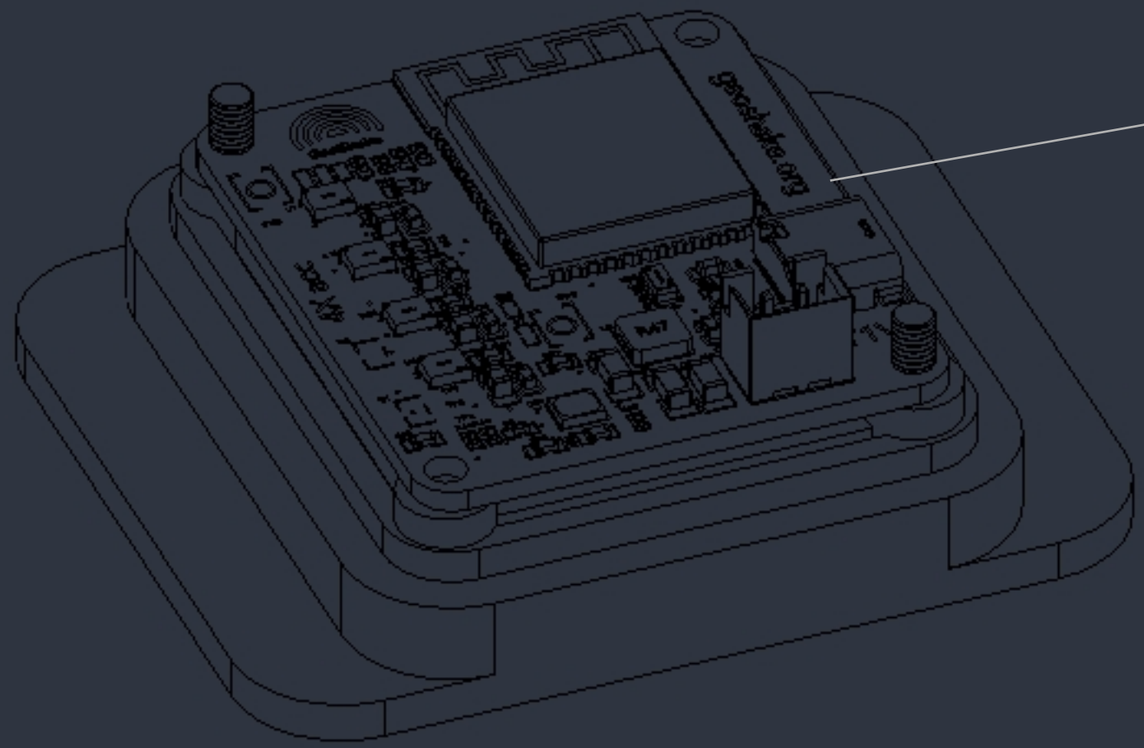

Place the PCB onto the base plate at the angle shown.

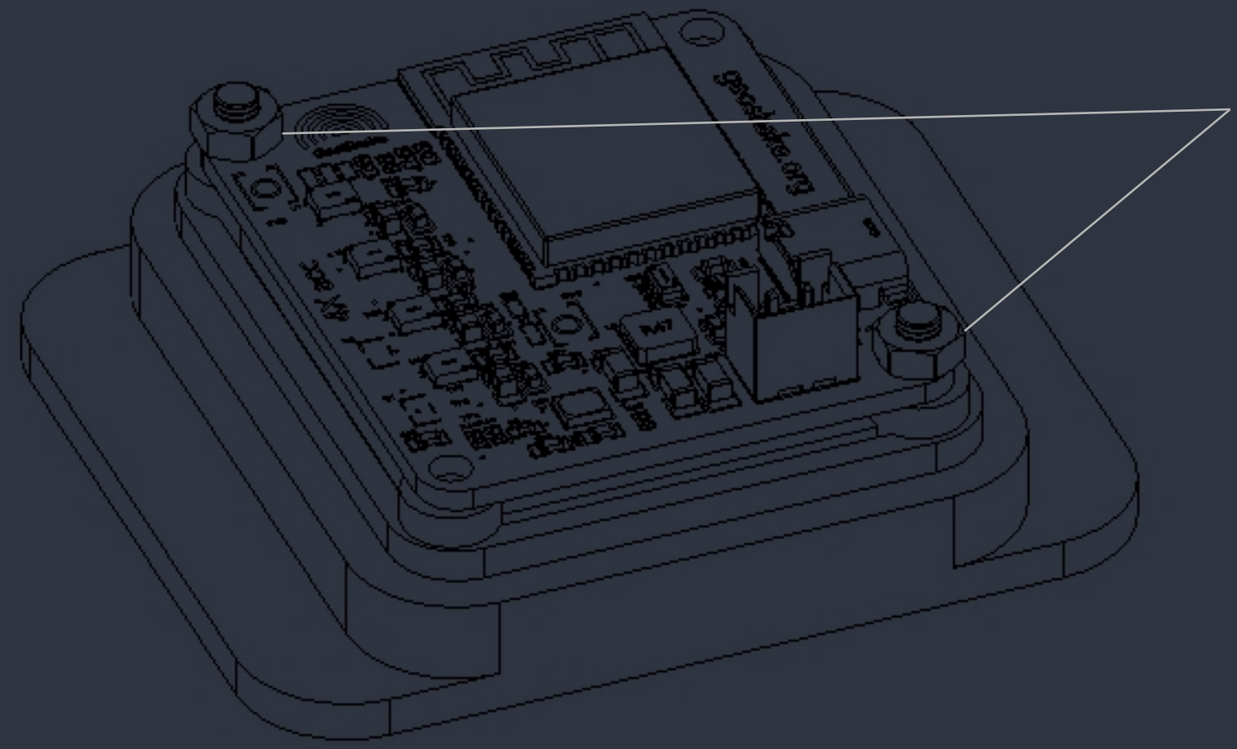


Thread the hex nuts onto the screws and tighten from the bottom side.



M3 Hex Nut

2 pieces

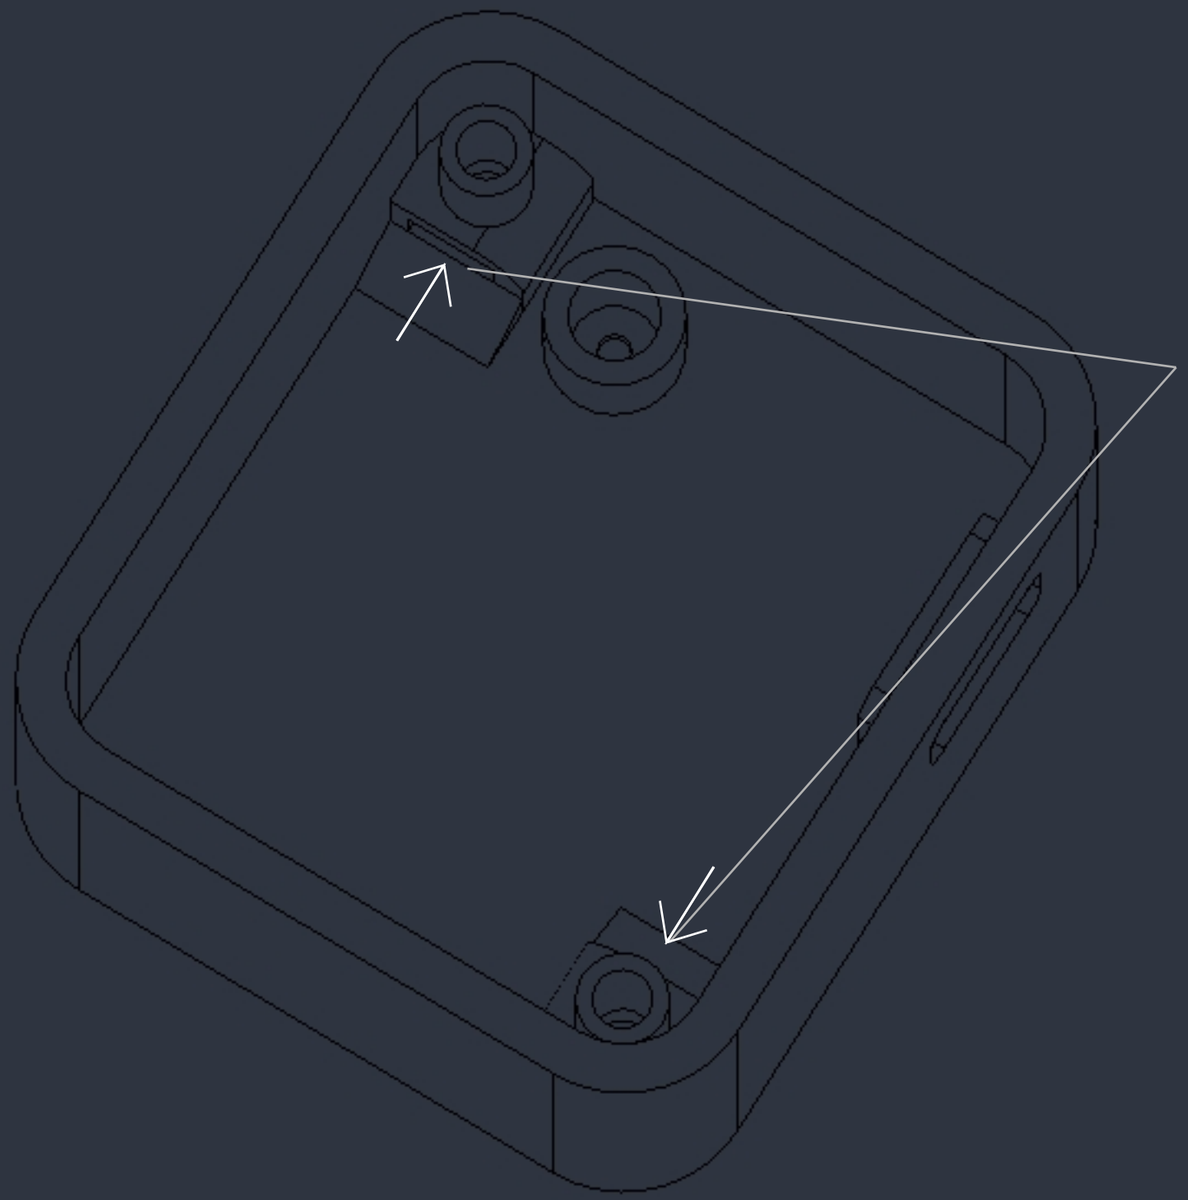


Press the two heat-set inserts into the two mounting points on the enclosure lid.




M3 Hex Nut


2 pieces

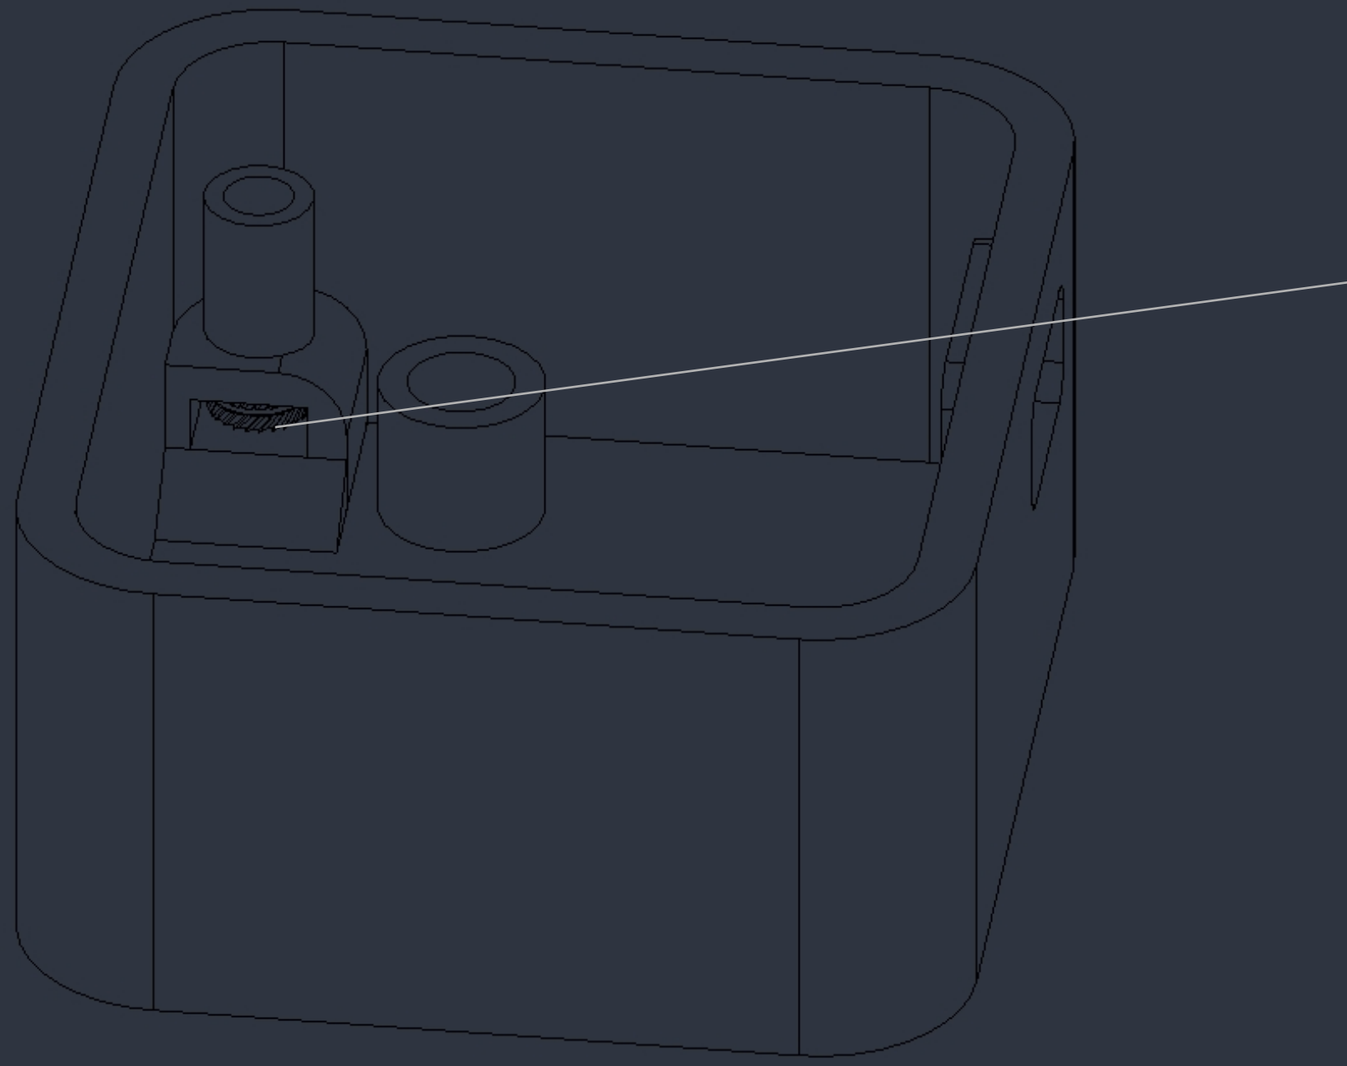


For a secure fit, the inserts may be heat-installed or bonded with adhesive.

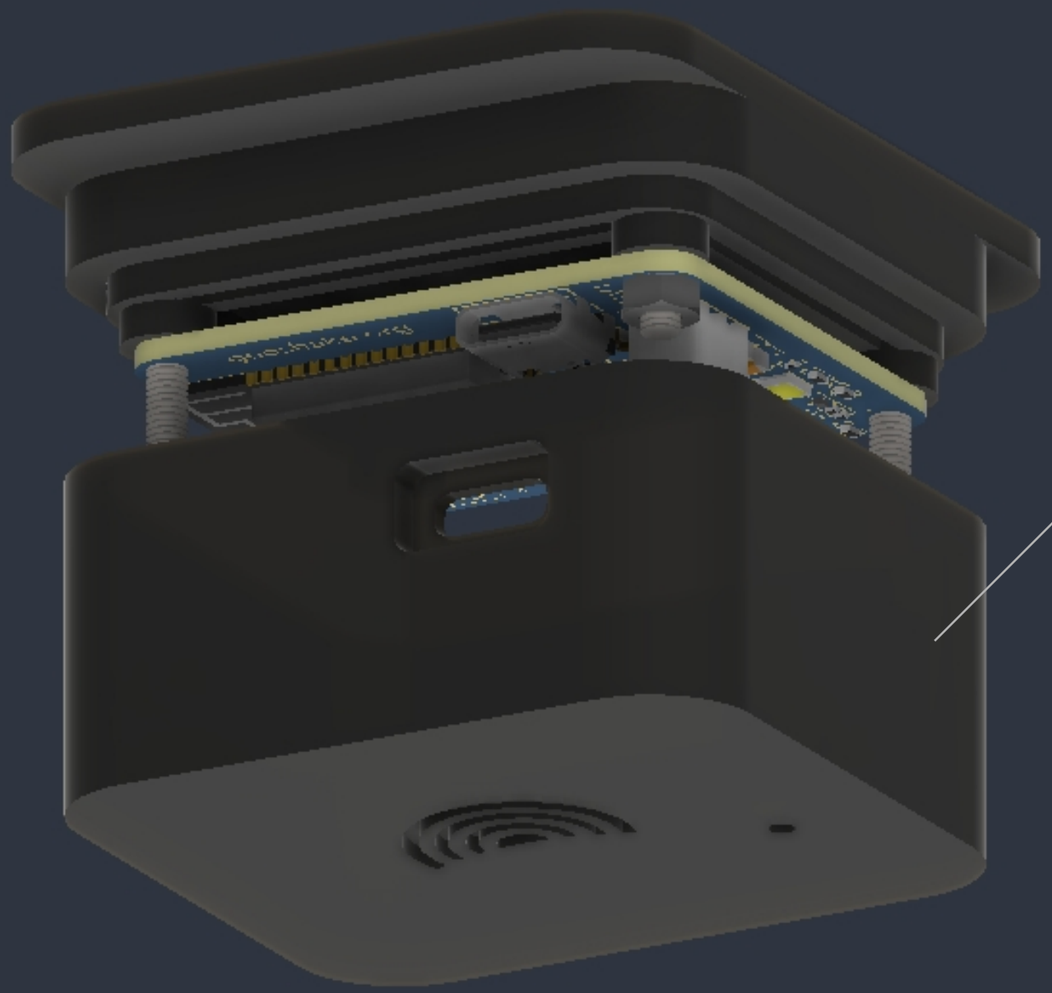

Flip the base plate over and fit it into the enclosure lid. Make sure the USB-C port is aligned with its opening.

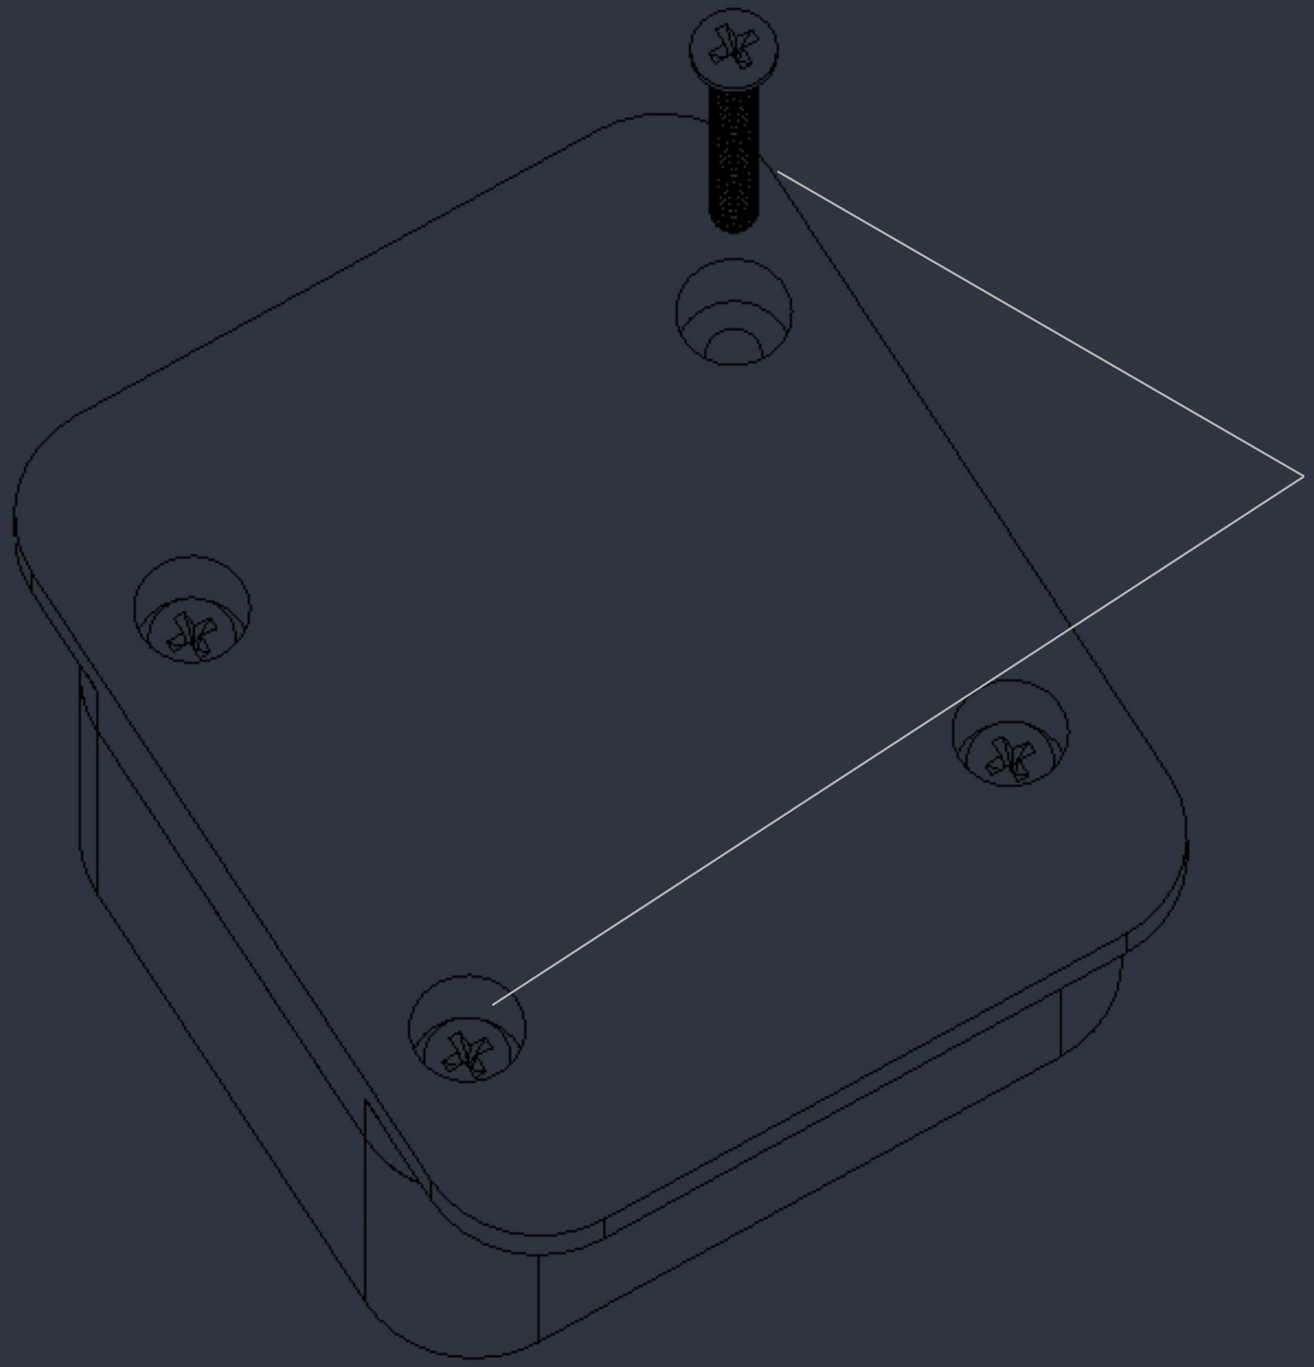

Insert the two M3×25 screws from below and tighten with a screwdriver.

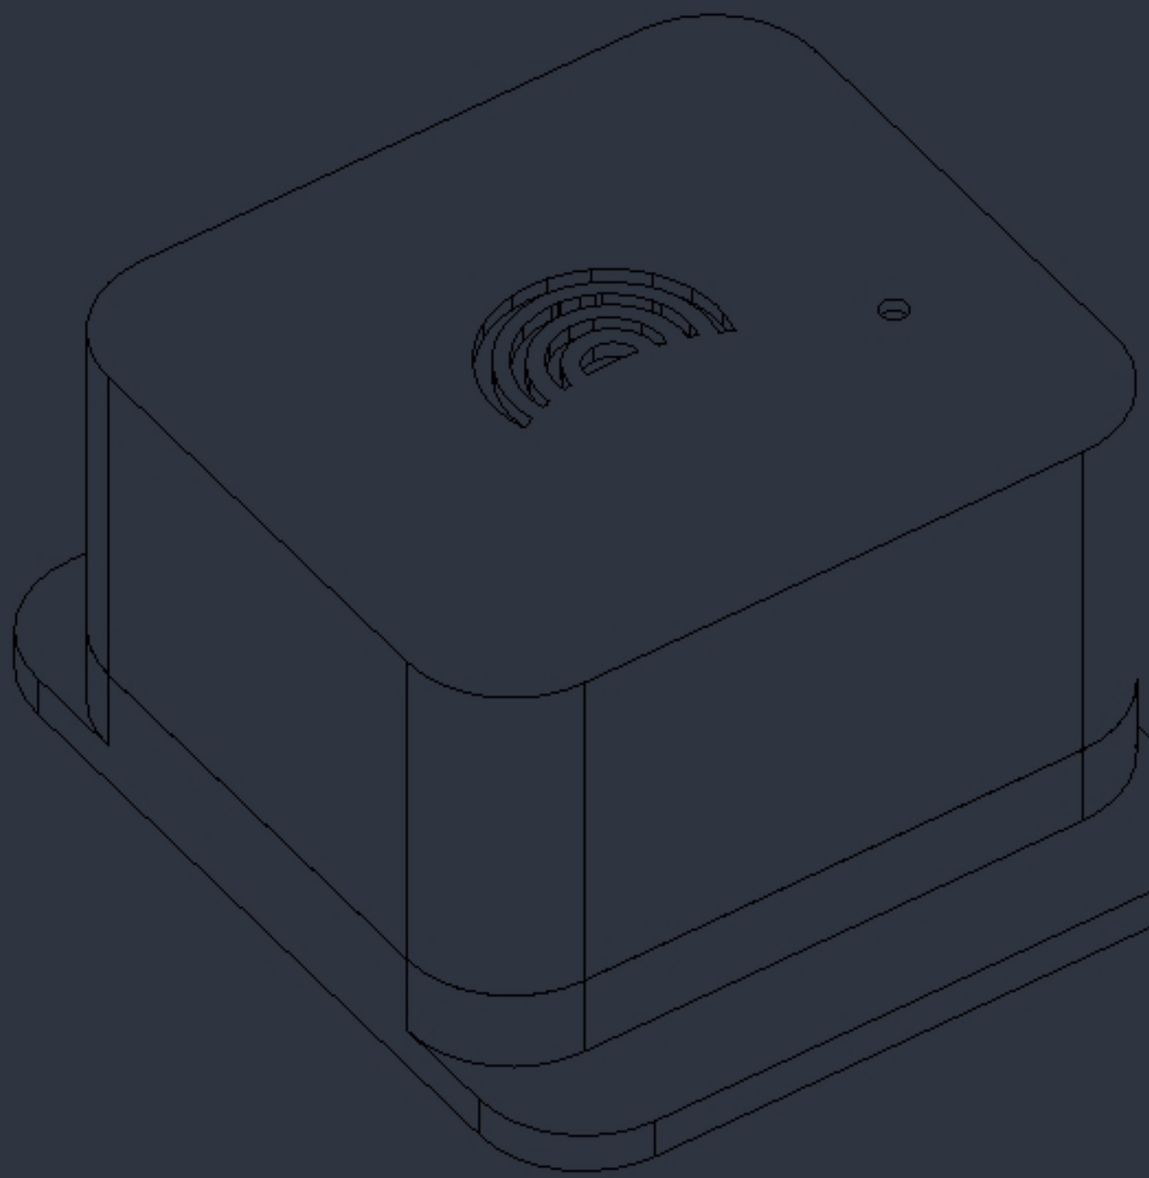

Assembly complete your GeoShake T1 is ready.

Thank you!