Setup

For this notebook to work properly ensure that you change Matlab working directory to ../EG-247-Resources/introduction/matlab.

In []:	
pwd	
In []:	
cd matlab	
In []:	
pwd	

Introducing Signals and Systems

An annotatable copy of the full notes for this presentation are to be found in the _Content Library of the OneNote Class Notebook for this class. You can also view the notes for this presentation as a webpage (HTML (http://nbviewer.ipython.org/github/cpjobling/EG-247-

Resources/blob/master/introduction/Introduction.ipynb)), as a <u>slide show (http://cpjobling.github.io/EG-247-Resources/introduction/Introduction.slides.html)</u>, and as a downloadable <u>PDF file</u> (http://cpjobling.github.io/EG-247-Resources/introduction/Introduction.pdf).

Signals and Systems for Dummies

Signals and Systems for Dummies (**SS4D**) provides a useful introduction to the topics that will be covered in this module and it is in the Reading List as a *recommended text*. I have based this presentation on Chapter 1 which is available as a <u>downloadable PDF (http://eu.dummies.com/store/product/Signals-and-Systems-For-Dummies.productCd-111847581X.html)</u> from the publishers.

You should read Chapter 1 of SS4D in conjunction with the notes for this presentation.

Note that Signals and Systems for Dummies is available as an e-book from the <u>Bay Library (http://whel-primo.hosted.exlibrisgroup.com/44WHELF_SWA_VU1:LSCOP_44WHELF_SWA_ALMA_DS:44WHELF_SWA_A</u>

Agenda

- · Continuous-time signals
- · Continuous-time systems
- · Discrete-time signals
- · Discrete-time systems
- · Signal Classifications
- Domains for Signals
- · Systems Thinking and Systems Design

These will be illustrated with computation in Wolfram Alpha, Matlab, Simulink and Python.

We will use TurningPoint for audience participation.

Setup

We will be using TurningPoint mobile response system polling in this session.

There are two ways to participate:

1. Use a web browser

Browse to: responseware.turningtechnologies.com (https://responseware.turningtechnologies.com).



https://goo.gl/rPE4Ls (https://goo.gl/rPE4Ls)

2. Install and open the TurningPoint app

Browse to: <u>TurningPoint Mobile Responding (https://www.turningtechnologies.com/response-options/mobile)</u>



https://goo.gl/DmGeQv (https://goo.gl/DmGeQv)

Use the links to the App stores at the bottom of that page or follow these links: <u>App Store</u> (https://itunes.apple.com/gb/app/turningpoint/id300028504?mt=8), <u>Google Play</u> (<a href="https://play.google.com/store/apps/details?id=com.turningTech.Responseware&feature=search_result#?t=W251bGwsMSwyLDEsImNvbS50dXJuaW5nVGVjaC5SZXNwb25zZXdhcmUiXQ...).

When prompted: enter the session ID

Today's Session ID



Assign yourself to a group by table

There should be a post-it note with a **group name** on your table.

Please use your TurningPoint app or web login to assign yourself to your table's group name.

-> Launch Poll

The rest of the session will be anonymous and scored by teams.

Icebreaker Questions

-> Launch Poll

End of setup

Continuous-time signals

Continuous signals are represented mathematically by functions which vary continuously with time.

Sinusoidal signals (e.g. AC) are pretty fundamental in electrical engineering. The mathematical model of a sinusoidal signal is:

$$x(t) = A\cos(2\pi f_0 t - \phi).$$

Without talking to your anyone, match each of the symbols to its definition

Symbol	Definition
A	Phase in radians
f_0	Frequency in Hz
φ	Amplitude
$2\pi f_0$	Frequency in rad/s

-> Open Poll

Gaining insight using computers

To help us answer these questions, let's use our Mathematical tools to plot a signal like this and explore it. The example we will use is from *Signals and Systems for Dummies* (SS4D: page 12):

$$3\cos(2\pi \cdot 2t - 3\pi/4)$$

Wolfram|Alpha

Here's the link: http://www.wolframalpha.com)

Paste this into the search box

plot
$$3 \cos(2 \operatorname{pi} 2 \operatorname{t} - 3 \operatorname{pi}/4)$$

Matlab

In Matlab we would need to tackle this by breaking down the steps.

Define t

```
In [32]:
```

```
t = linspace(0, 1, 100);
```

Define x


```
In [33]:
```

```
x = 3 * cos(2*pi*2*t - 3*pi/4);
```

Plot result and label plot

```
In [34]:
```

```
plot(t,x)
title('A Sinusoidal Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
grid
```

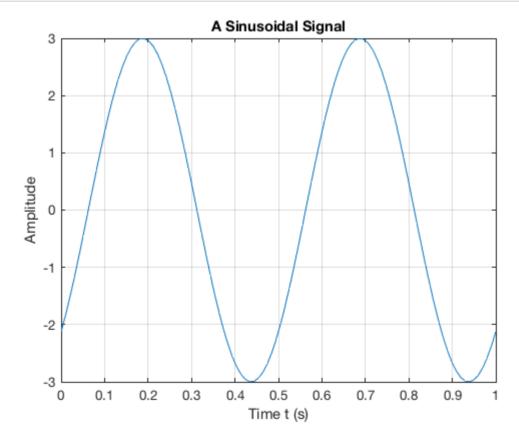

See sinewave.m (matlab/sinewave.m).

Returning to the Question

Sinusoidal signals (e.g. AC) are pretty fundamental in electrical engineering. The mathematical model of a sinusoidal signal is:

$$x(t) = A\cos(2\pi f_0 t - \phi).$$

Using the insight just gained by exploring this function with a computer, try matching each of the symbols to its definition again.

This time you may confer!!

Symbol	Definition
A	Phase in radians
f_0	Frequency in Hz
φ	Amplitude
$2\pi f_0$	Frequency in rad/s

Supplementary question

What is the period of the waveform in seconds?

- 1. 2π
- 2. f_0
- 3. *t*
- 4. $1/f_0$
- 5. $2\pi/f_0$

-> Open poll

Notes

- In communications and electronic signal processing, the frequency of sinusoidal signals us usually given in *cycles per second* or Hz.
- In mathematics, the frequency is always expressed in radians per second.
- In some courses, including later in this one and in EG-243 Control Systems, the frequency $2\pi f_0$ is often called the *natural frequency* and is usually written ω_n .

Try This Yourself

- Use any or all of computing tools that you have access to to explore other sinusoids. Change the values of the variables and explain what happens.
- Try adding sinusoids of different amplitudes and different frequencies together and see what happens.
- Change cos to sin and see what happens.

Continuous-time Systems

Systems operate on signals. In mathematical terms, a *system* is a function or an *operator*, $H\{\}$ that maps the input signal x(t) to an output signal y(t).

Mathematically we would write this:


$$y(t) = H\{x(t)\}.$$

Example

An example of a continuous-time system is an electronic amplifier with a gain of 5 and level shift of 2: $y(t) = H\{x(t)\} = 5x(t) + 2$.

In this course, we will model such systems as block diagram models in Simulink.

Block diagram model in Simulink

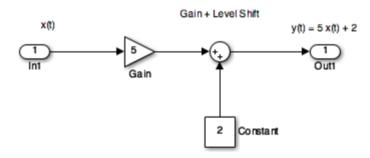

The Similink code can be downloaded from this file gain level shift.slx (matlab/gain level shift.slx).

Demonstration

If the input to this system is replaced with a sinewave $x(t) = \sin(t)$ and the output with a scope, what do you think the output will be?



If you get a chance, try this in youself in Matlab and copy the result into your copy of these notes.

In [35]:

open gain_level_shift

Discrete-time Signals

Disrete-time signals are a function of a time index n. A discrete-time signal x[n], unlike a continuous-time signal x(t), is only defined at integer values of the independent variable n. This means that the signal is only active at specific periods of time. Discrete-time signals can be stored in computer memory.

Example

Consider the following simple signal, a pulse sequence:

$$y[n] = \begin{cases} 5, & 0 \le n < 10 \\ 0, & \text{otherwise} \end{cases}$$

We can plot this in Matlab as a stem plot

Procedure

Define function and save as v.m (matlab/v.m).


```
In [44]:
```

```
clear y open y
```

```
In [45]:
```

```
In [46]:
```


```
%% Plot the result
stem(n,xn)
axis([-15, 18, 0, 6])
title('Stem Plot for a Discrete Signal')
xlabel('Sample n')
ylabel('Signal x[n]')
grid
```

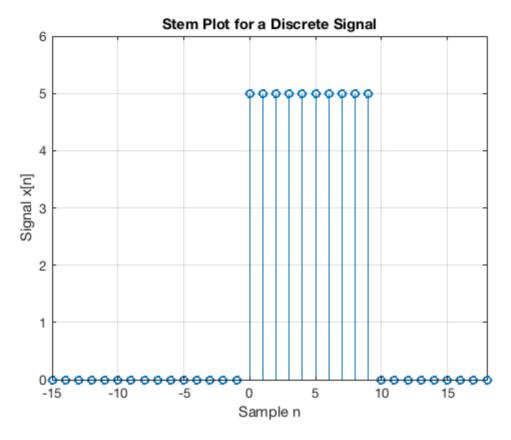

See discete.m (matlab/discrete.m)

Exercise

Draw a digital signal that represents your student number in some way. For example if your number was 765443, then you could generate a signal for which x[n] = 0 when n < 7, then x[n] = 7 for 7 periods, then x[n] = 6 for the next 6 periods, x[n] = 5 for 5 periods, and so on. The signal should return to 0 when the last digit has been transmitted.

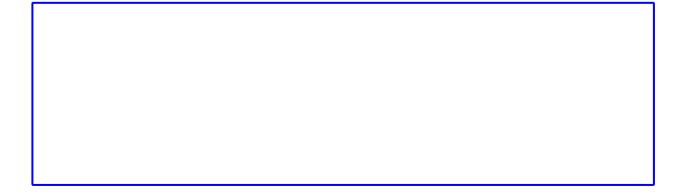


To plot this on a computer you would need to transcribe x[n] into an array and then use the stem plot to plot the data. You could just create the array by hand, but you could also create a Matlab function if you would like a challenge.

Discrete-time Systems

A discrete-time system, like its continuous-time counterpart, is a function, $H\{\}$, that maps the input x[n] to the output $y[n] = H\{x[n]\}$. An example of a discrete-time system is the *two-tap* filter:

$$y[n] = H\{x[n]\} = \frac{3}{4}x[n] + \frac{1}{4}x[n-1]$$

The term tap denotes that output at time instant n is formed from two time instants of the input, n and n-1. Check out a block diagram of a two-tap filter system:

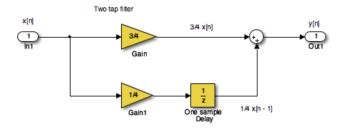

This system is available as a Simulink model discrete system.slx (matlab/discrete system.slx)

In [39]:

open discrete_system

In words, this system scales the present input by 3/4 and adds it to the past value of the input scaled by 1/4. The notion of the past input comes about because x[n-1] is lagging one sample value behind x[n]. The term *filter* describes the output as an *averaging* of the present input and the previous input. *Averaging* is a form of filtering.

Signal Classifications


Periodic

Signals that repeat over and over are said to be periodic. In mathematical terms, a signal is periodic if:

- Continuous signal x(t + T) = x(t)
- Discrete signal x[n+N] = x[n]

The smallest T or N for which the equality holds is the *signal period*.

The sinusoidal signal we saw earlier is periodic because of the $\mod 2\pi$ property of cosines. The signal of the sinusoid has period 0.5 seconds (s), which turns out to be the reciprocal of the frequency $1/f_0$ Hz.

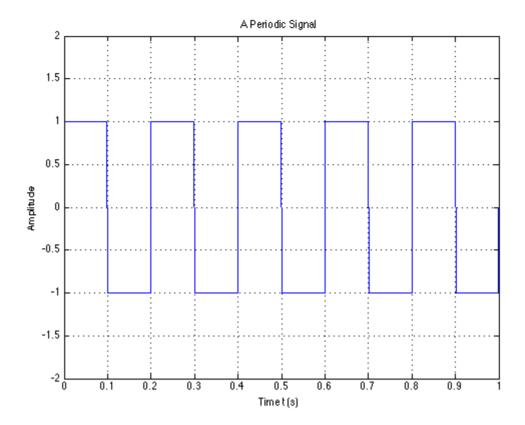

This Square wave is a 5 Hz waveform sampled at 500 Hz for 1 second

T = ?

Question

For the example we started with $x(t) = 2\cos(2\pi.2t + 3\pi/4)$. Say we sample the cosine wave at 20 times the frequency of the sinusoid, what would the sampling period be and what would N be for the sampled waveform?



Aperiodic

Signals that are *deterministic* (completely determined functions of time) but not periodic are known as *aperiodic*. Point of view matters. If a signal occurs infrequently, you may view it as aperiodic.

This is how we generate an aperiodic rectangular pulse of duration τ in Matlab:


See aperiodic.m (matlab/aperiodic.m)

```
In [40]:
```

```
%% An aperiodic function
tau = 1;
x = linspace(-1,5,1000);
y = rectangularPulse(0,tau,x);
```

```
In [41]:
```

```
plot(x,y)
ylim([-0.2,1.2])
grid
title('An Aperiodic Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
```

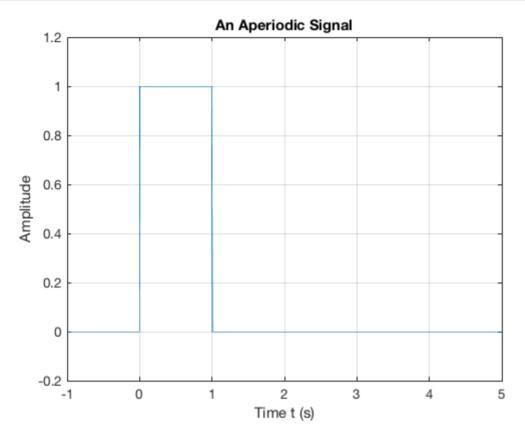


Random

A signal is random if one or more signal attributes takes on unpredictable values in a probability sense. Engineers working with communication receivers are concerned with random signals, especially noise.

See: <u>random.m (https://github.com/cpjobling/EG-247-Resources/blob/master/introduction/matlab/random.m)</u>

In [42]:

```
%% Plot a Random Signal
plot(0.5 + 0.25 * rand(100,1))
ylim([0,1])
grid
title('Random Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
```

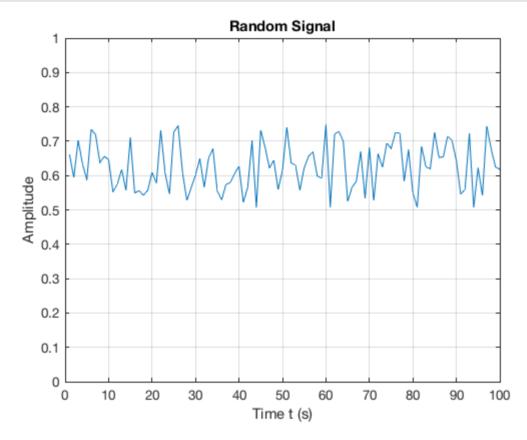

Domains for Signals and Systems

Most of the signals we encounter on a daily basis reside in the time domain. They're functions of independent variable t or n. But sometimes when you're working with continuous-time signals, you may need to transform away from the time domain (t) to another domain.

Domain Quiz

A domain which is used in the analysis of signals and the design of systems is represented by complex numbers of the form:

$$\sigma + j\omega$$

Without conferring, tell me what domain is this?

-> Open Poll

Now discuss your answer with your peers

Domain Quiz (again)

A domain which is used in the analysis of signals and the design of systems is represented by complex numbers of the form:

$$\sigma + j\omega$$

Tell me what domain is this?

-> Open Poll

Other Domains you will encounter

The most commnly used domains used when analysing continuous time signals are the frequency domain (f or ω) or the Laplace s-domain (s).

Similarly, for discrete-time signals, you may need to transform from the discrete-time domain (n) to the frequency domain $(\hat{\omega})$ or the z-domain (z).

This section briefly introduces the world of signals and systems in the frequency, s-, and z-domains. More on these domains will follow.


Systems, continuous and discrete, can also be transformed to the frequency and s- and z-domains, respectively. Signals can, in fact, be passed through systems in these alternative domains. When a signal is passed through a system in the frequency domain, for example, the frequency domain output signal can later be returned to the time domain and appear just as if the time- domain version of the system operated on the signal in the time domain.

Consider the sum of a two-sinusoids signal

$$x(t) = \underbrace{A_1 \cos(2\pi f_1 t)}_{s_1} + \underbrace{A_2 \cos(2\pi f_2 t)}_{s_2}$$

In [43]:

two sines

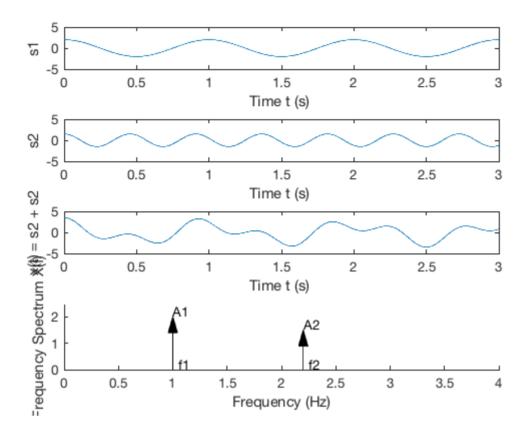

Matlab code: two sines.m (matlab/two sines.m)

Viewing Signals in the Frequency Domain

The top waveform plot, denoted s_1 , is a single sinusoid at frequency f_1 and peak amplitude A_1 . The waveform repeats every period $T_1=1/f_1$. The second waveform plot, denoted s_2 , is a single sinusoid at frequency $f_2>f_1$ and peak amplitude $A_2< A_1$. The sum signal, s_1+s_2 , in the time domain is a squiggly line (third waveform plot), but the amplitudes and frequencies (periods) of the sinusoids aren't clear here as they are in the first two plots. The frequency spectrum (bottom plot) reveals that x(t) is composed of just two sinusoids, with both the frequencies and amplitudes discernible.

Think about tuning in a radio station. Stations are located at different center frequencies. The stations don't interfere with one another because they're separated from each other in the frequency domain. In the frequency spectrum plot, imagine that f_1 and f_2 are the signals from two radio stations, viewed in the frequency domain. You can design a receiving system to filter s_1 from $s_1 + s_2$. The filter is designed to pass s_1 and block s_2 .

Fourier Transform

We use the *Fourier transform* to move away from the time domain and into the frequency domain. To get back to the time domain, use the *inverse Fourier transform*. We will found out more about these transforms in this module.

Laplace and Z-Transform Domains

From the time domain to the frequency domain, only one independent variable, $t \to f$, exists. When a signal is transformed to the s-domain, it becomes a function of a complex variable $s = \sigma + j\omega$. The two variables (real and imaginary parts) describe a location in the s-plane.

In addition to visualization properties, the s-domain reduces differential equation solving to algebraic manipulation. For discrete-time signals, the z-transform accomplishes the same thing, except differential equations are replaced by difference equations.

Systems Thinking and Systems Design

See section **Testing Product Concepts with Behavioral Level Modeling** from Chapter 1 of <u>SS4D</u> (http://www.dummies.com/store/product/Signals-and-Systems-For-Dummies.productCd-111847581X.html) (pages 18--20) and add some notes to summarize this for yourself.

- · We will use behavioural modelling
- We will rely on abstraction
- We work top-down
- We make use of mathematics and mathematical software.

Familiar Signals and Systems

See pages 21-23 of the free sample (Chapter 1) of <u>SS4D (http://www.dummies.com/store/product/Signals-and-Systems-For-Dummies.productCd-111847581X.html)</u> for notes and details.

Concluding Example: Some Basic Signal Operations

Consider a signal

Sketch this signal.

$$x = f(t) = \begin{cases} 0 : t < -1 \\ t+1 : -1 \le t \le 1 \\ 0 : t > 1 \end{cases}$$

Problem

Think about the effect on this signal of applying the following basic signal operations:

- 2f(t)
- 0.5f(t)
- *f*(2*t*)
- f(0.5t)
- -f(t)
- f(-t)
- -f(-t)
- f(t-1)
- f(t+1)
- -2f(-t+2)

We will work through these after the break together then you will do some exercises based on <u>Chapter 1 of Karris (http://site.ebrary.com/lib/swansea/reader.action?docID=10547416&ppg=17)</u>.

Break