


X Table

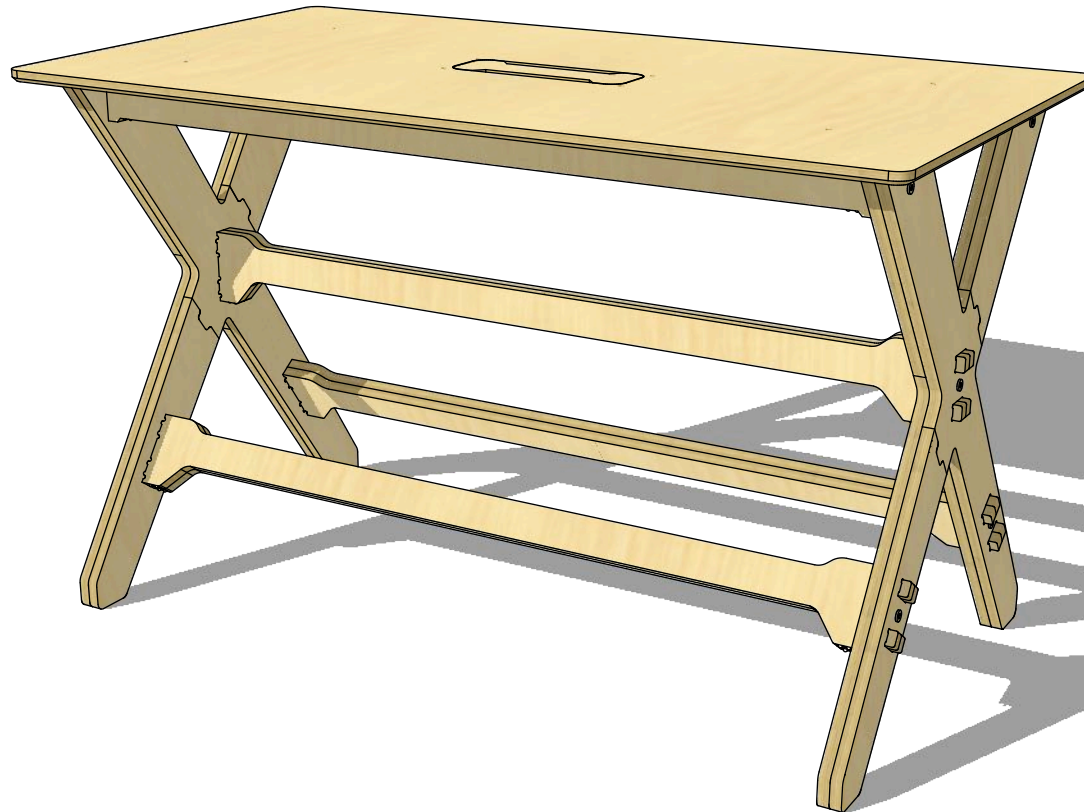



The "X Table" is a simple, sturdy table designed to be cut on a CNC machine out of 3/4" plywood. The table is very carefully designed so that any 3/4" plywood will work. The fasteners are off the shelf bolts that can be found just about anywhere. The table can be put together, and taken back apart. This means it can be shipped, setup, and moved again.

Two sheets of 3/4" Plywood are all that's required to build this table.


We love working with Baltic Birch. The endgrain looks great and it sands very well. We have also made these out of softer plywoods with excellent results. You do have to be aware of voids in plywood however. You almost never see this in Baltic.

The design can accommodate plywood in any thickness from .680 to .760. This means you can mix and match sheets or even plywood types. If you're making many tables you can optimize your cuts as well, not having to worry about matching thickness across sheets.


Because this is "thickness agnostic" we highly recommend zeroing off of your table, this will ensure that all of the pockets are at exactly the correct depth, despite slight variations in plywood thickness.

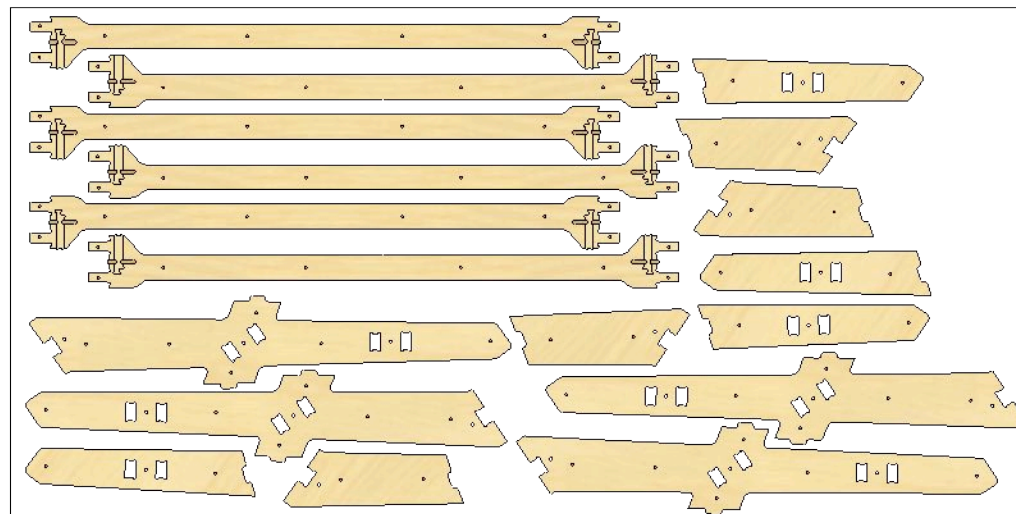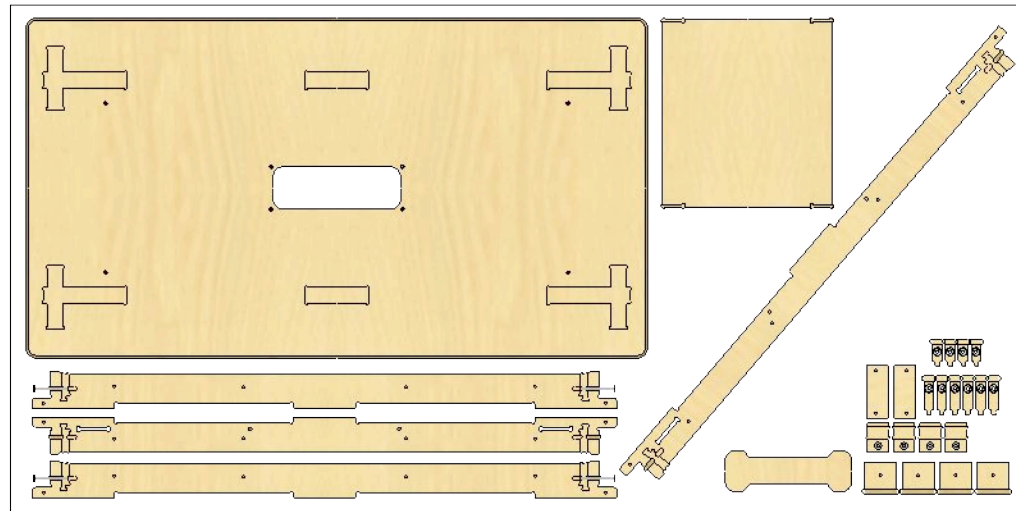

See VCarve and DXF files in the job folder.

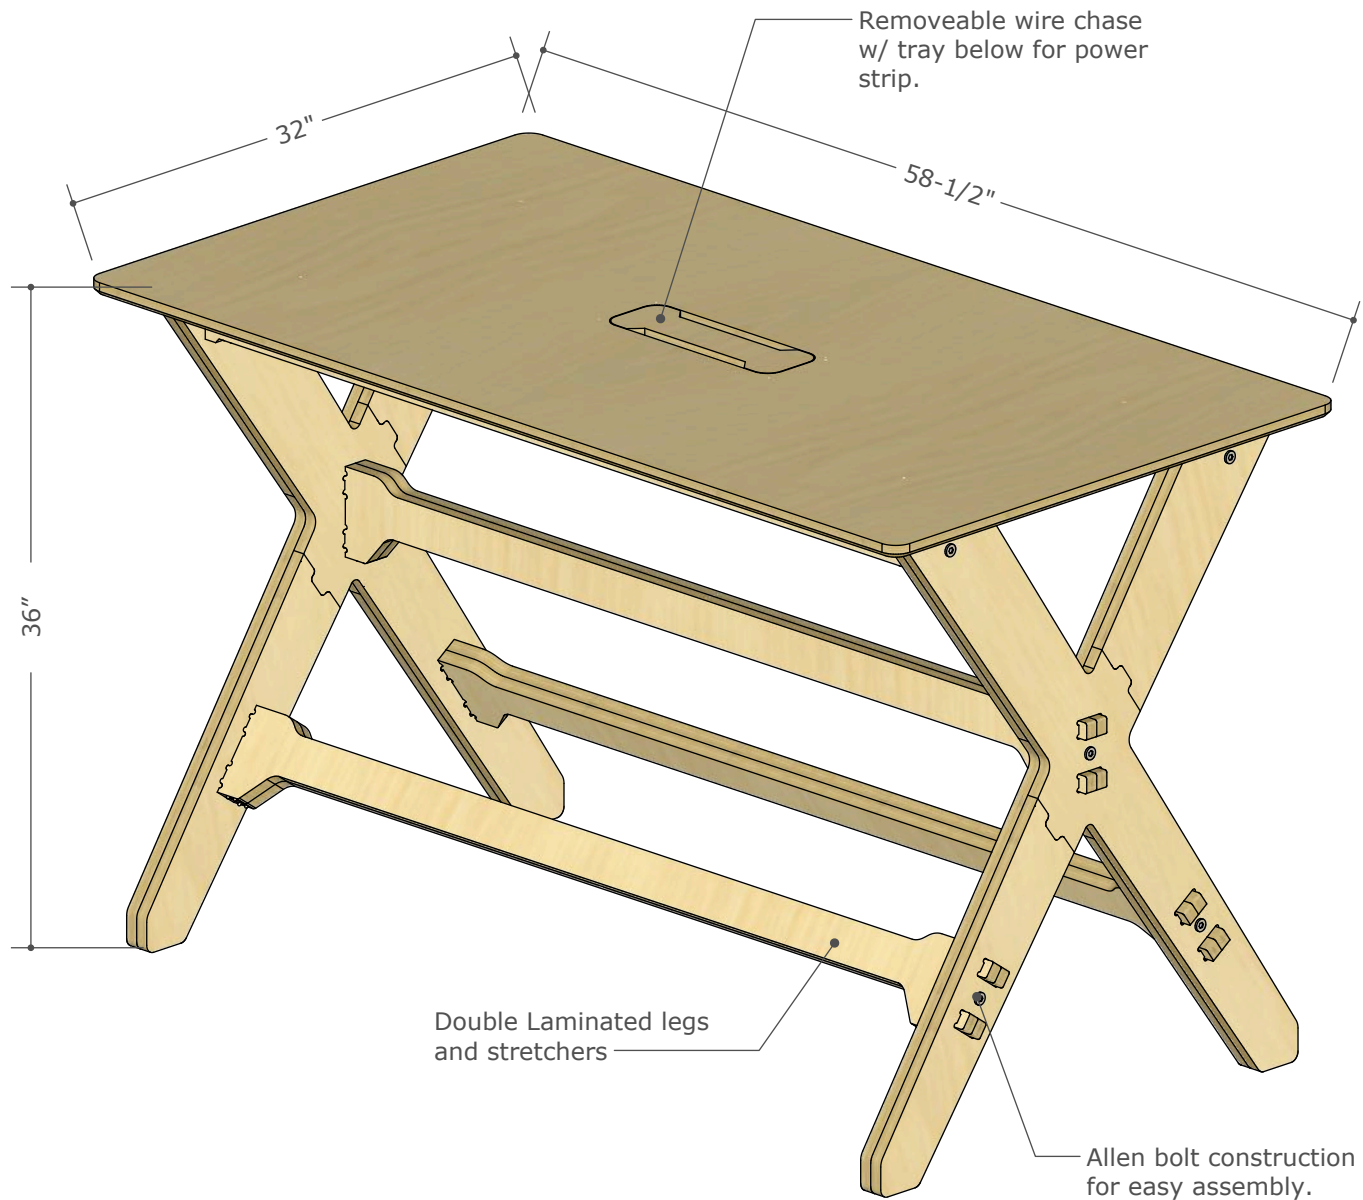

Joint Detail

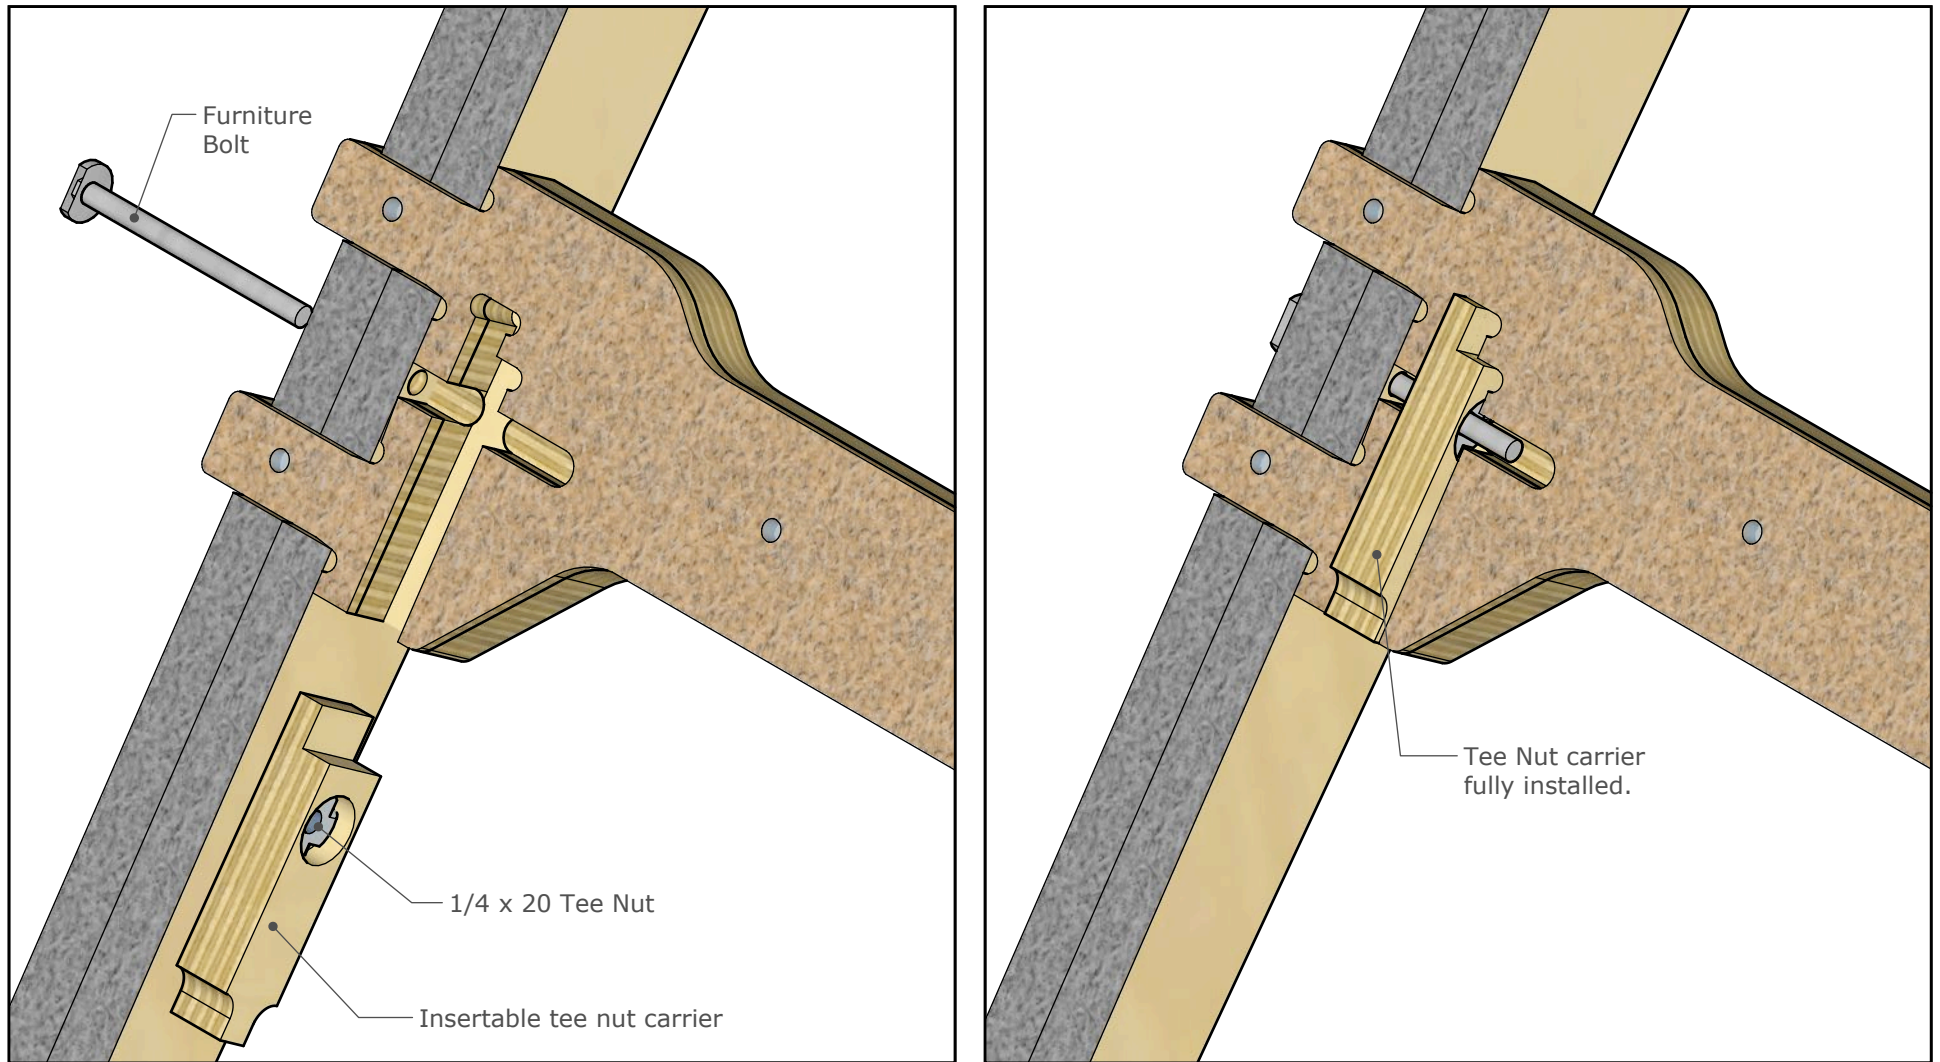

The way all of the stretchers install is with a simple tee nut carrier. This design was chosen so that the bolt pulls the tee nut carrier against a big flat surface.

This way you can really tighten that bolt down without fear of tearing out anything. Being that it's a removable insert lets you take the table back apart, and also replace the threads if they ever get damaged. The tee nut carriers are also designed so that they cannot be installed backwards or upside down.

Parts List



Tee Nut



Furniture Bolt



Threaded Insert


Part	Quantity	Vendor	Part Number	Link
Tee nut	10	Fastenal	1137965	https://goo.gl/K8p7u3
Long Bolt	10	Fastenal	0140714	https://goo.gl/TzGhpy
Short Bolt	12	Fastenal	0140679	https://goo.gl/pvqYAU
EZ Lock Threaded Insert		Amazon	901420-13	https://goo.gl/BC6qU2
1" x 1/4" Dowel	50 (ish)	Amazon	31163203	https://goo.gl/FsXxo1

All of these parts can be sourced from a local hardware store as well. You will likely pay more per part at a local store however. Feel free to find different vendors as well. We tried to select hardware that's available from many different sources.


Assembly

In this step you'll assemble all of the stretchers. We recommend dry fitting everything once just to be sure it all lines up. In particular, the two stretchers that run under the table have a slot in them. There should be two slots PER stretcher, not one stretcher with 4 slots.

Use whatever wood glue you're comfortable with. Clamp and let dry.

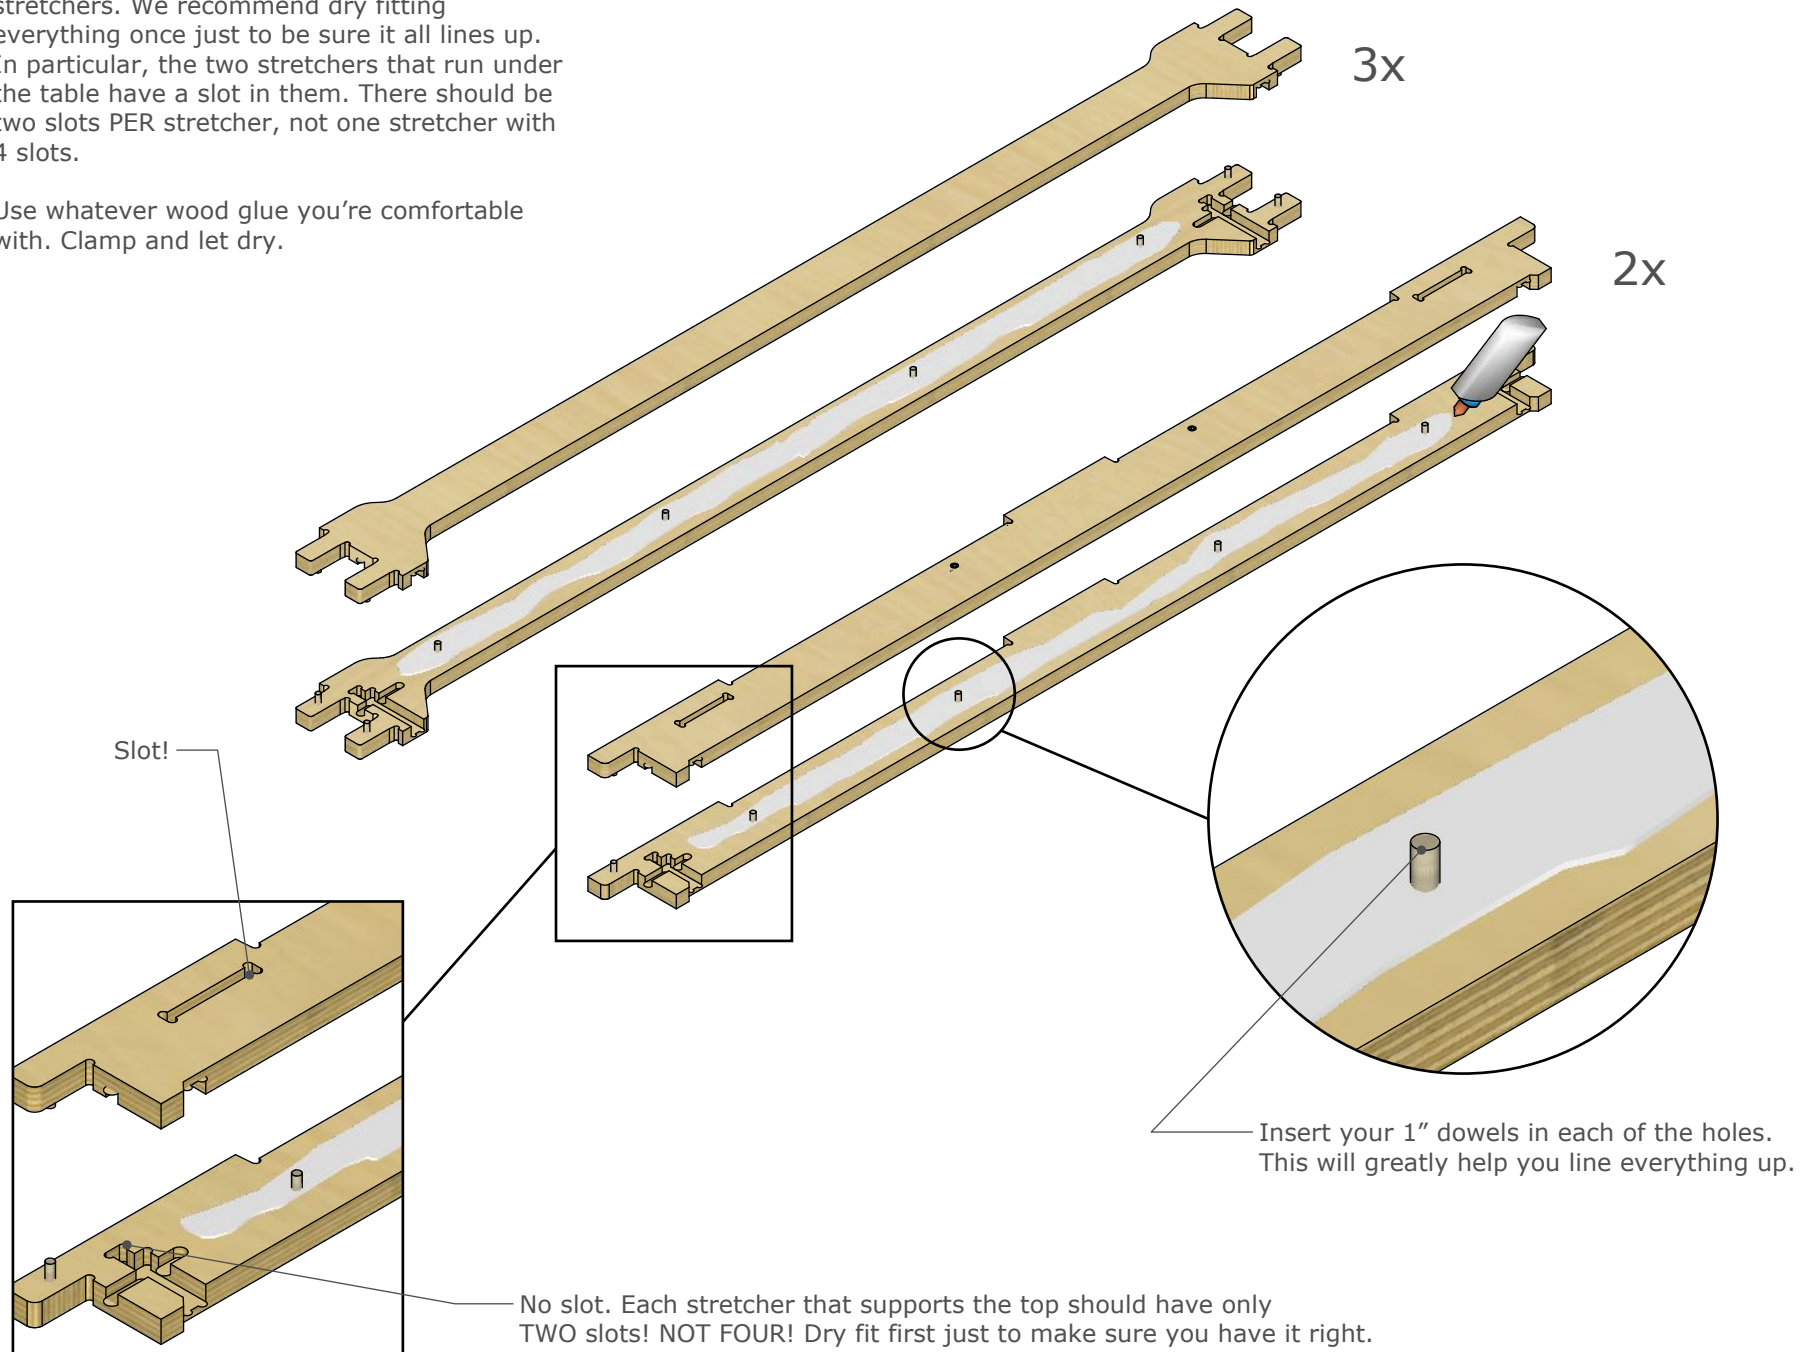


There are only two unique parts to the legs. Lay out each leg on a bench and dry fit first. This will let you get the dowel pins the right spot, and sand any tight fitting spots if need be.

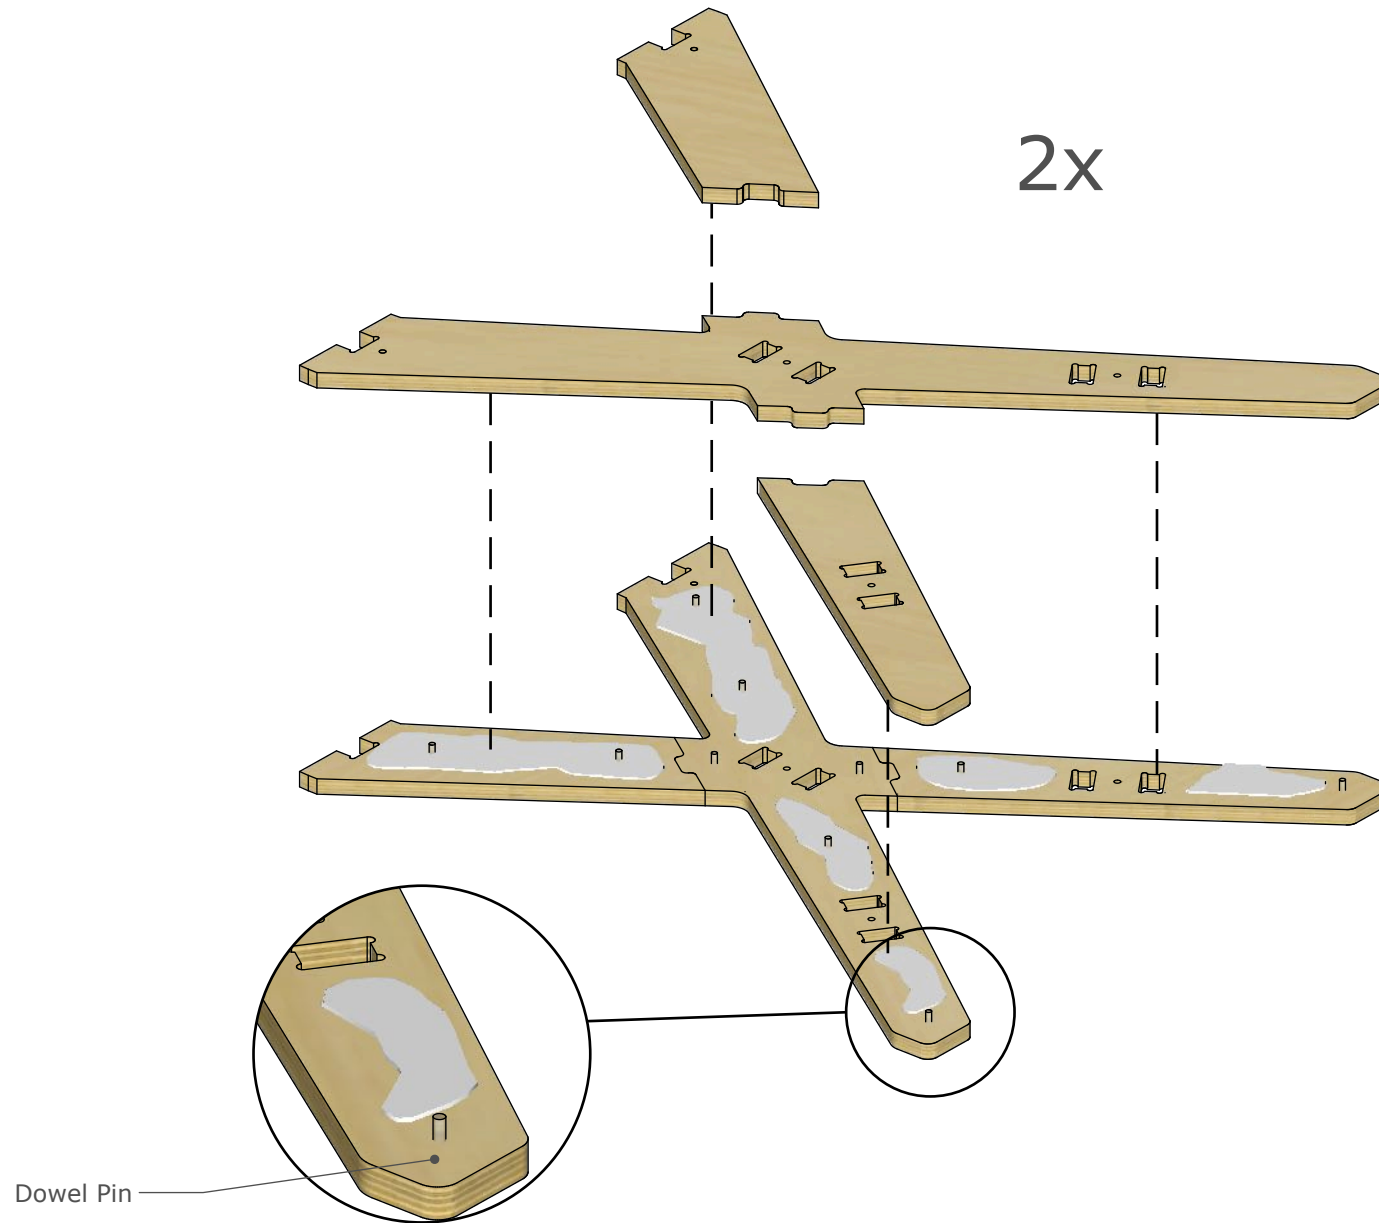

Flip the top over and install your EZ Lock threaded inserts. Carefully put them in so they're flush with the surface of the plywood. You don't want to put them in too deep or they can damage the surface of the plywood.


Also install the threaded inserts into the two stretchers that need them.

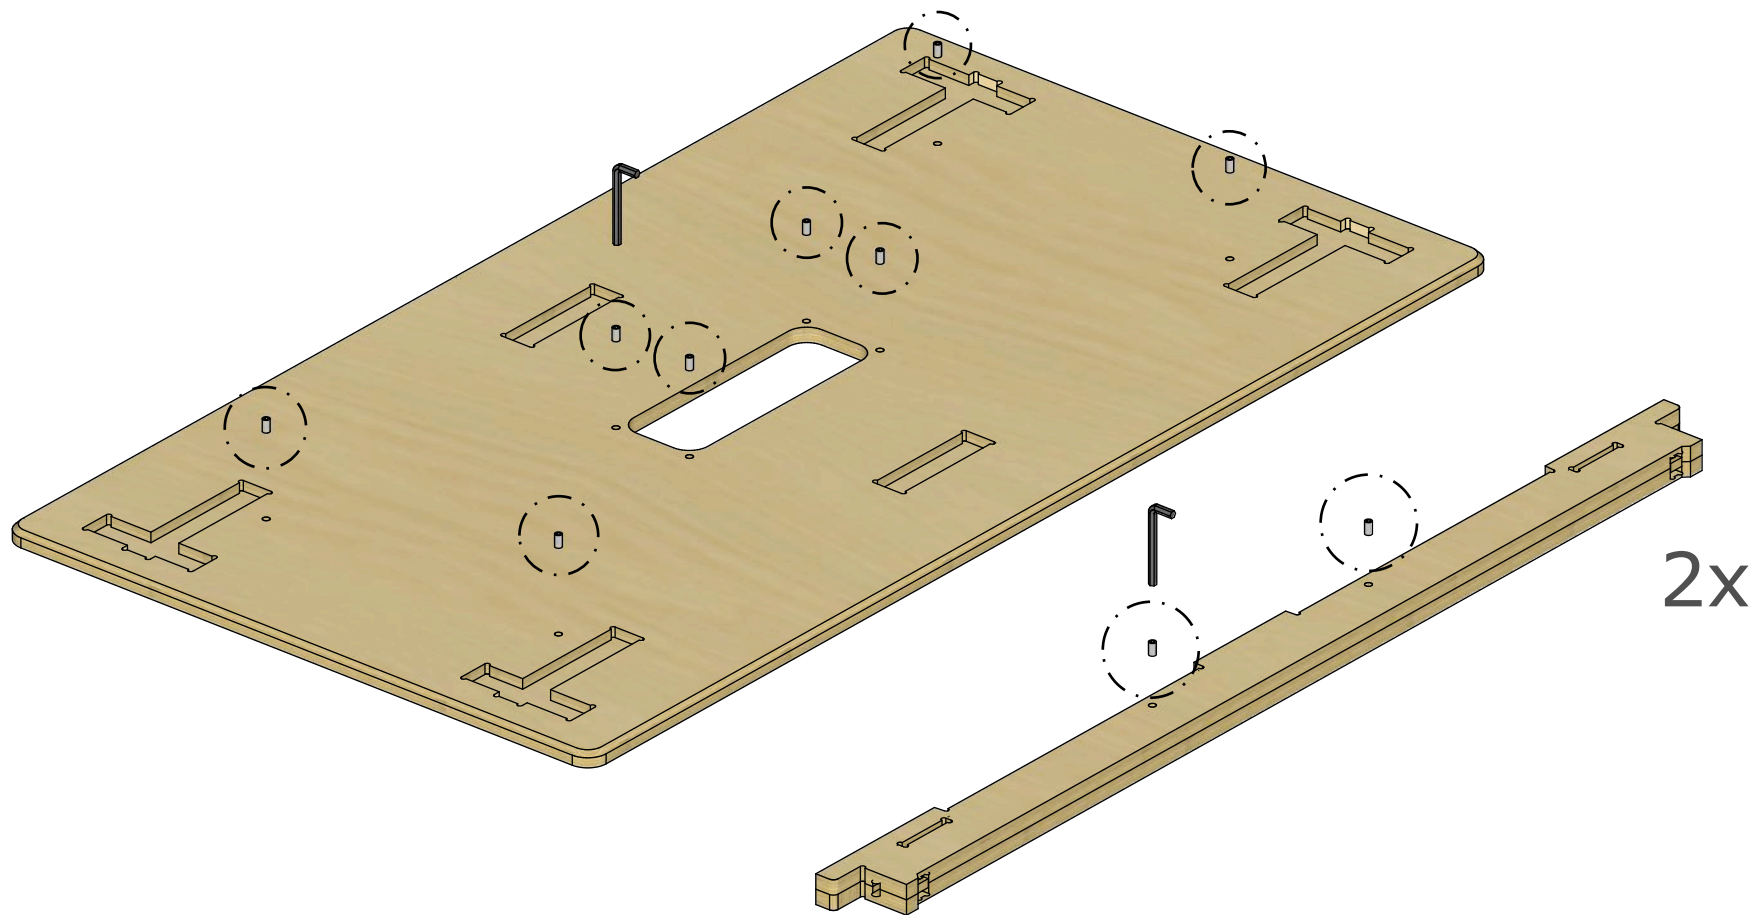

Assemble the table base as shown. It might be good to get a helper, but if you're careful you can do it on your own very easily.


Start by inserting each stretcher into a leg. Make sure that the top stretchers (the ones that go under the top) have those slots facing inward.

You can slide all of the stretchers loosely and get the table standing up. Once you get that done slide the inserts with the T Nuts in and then thread in your bolts and tighten everything down.

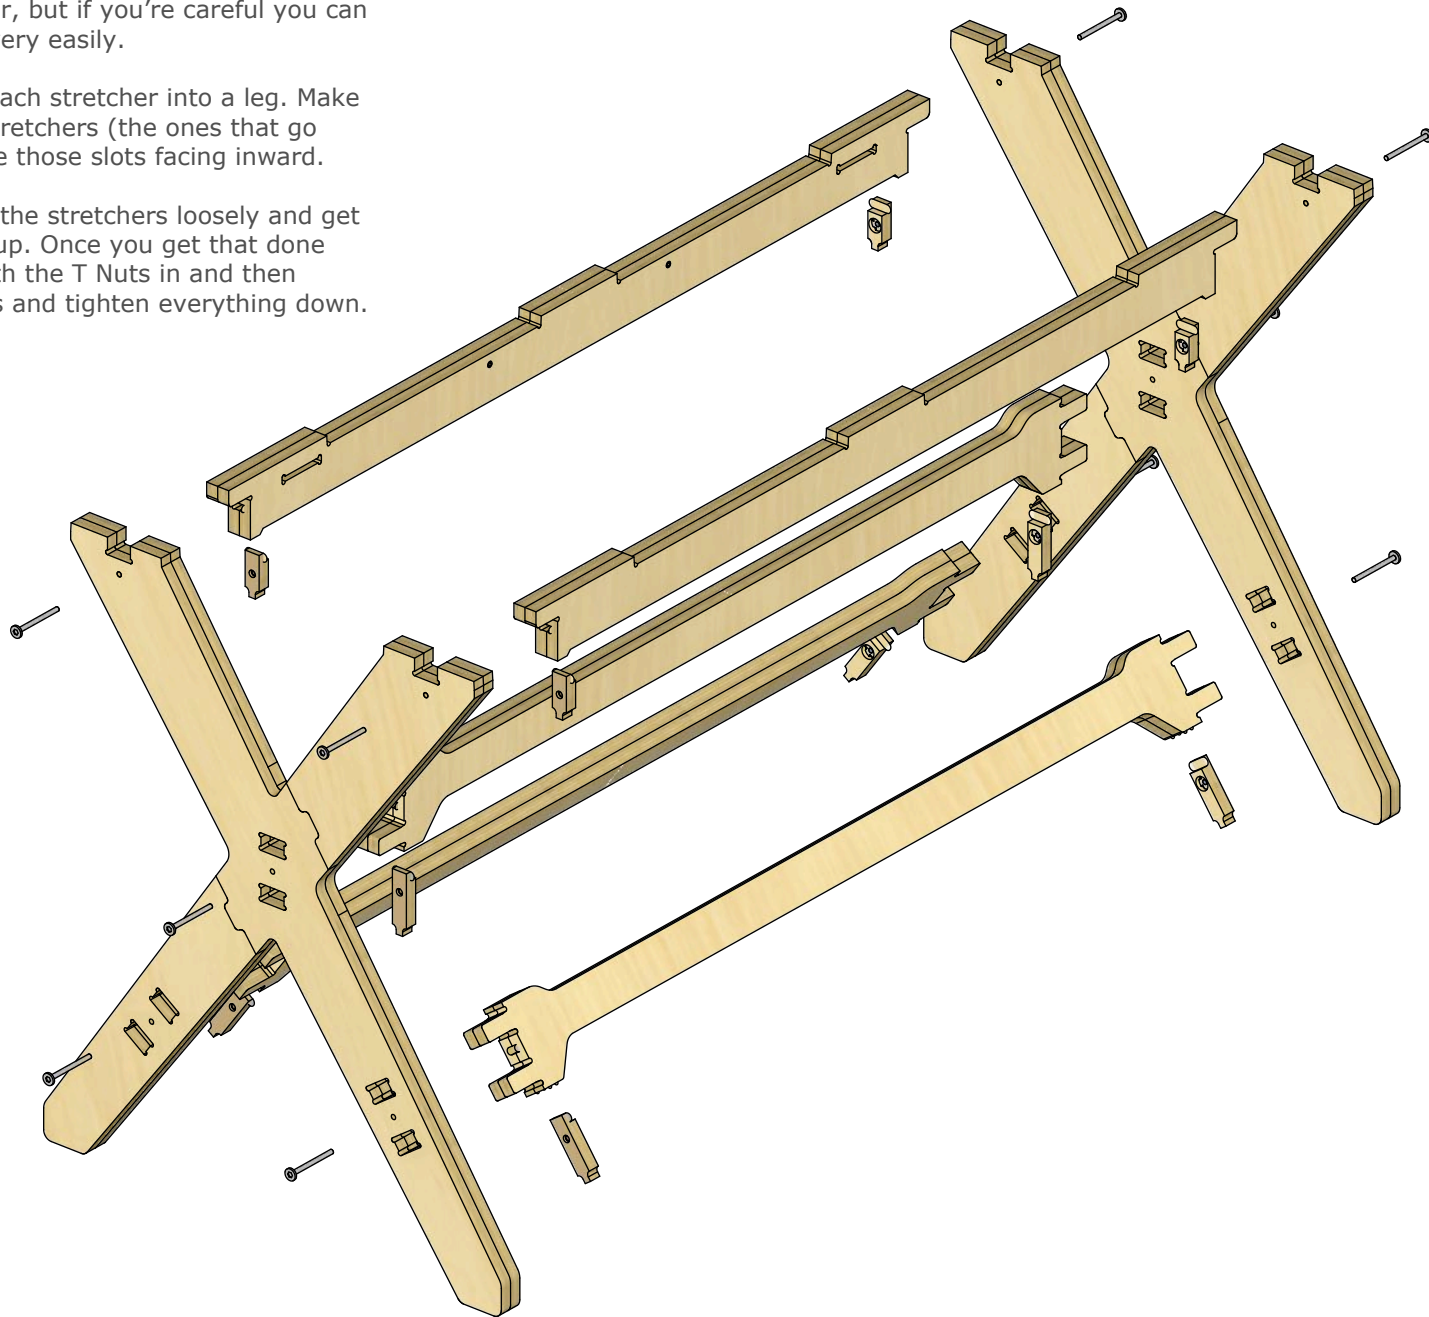

Install the four clips that go into the slots, these will later be used to secure the top in place

Also install the for wire tray hangars. These should be done with the short bolts (20mm)

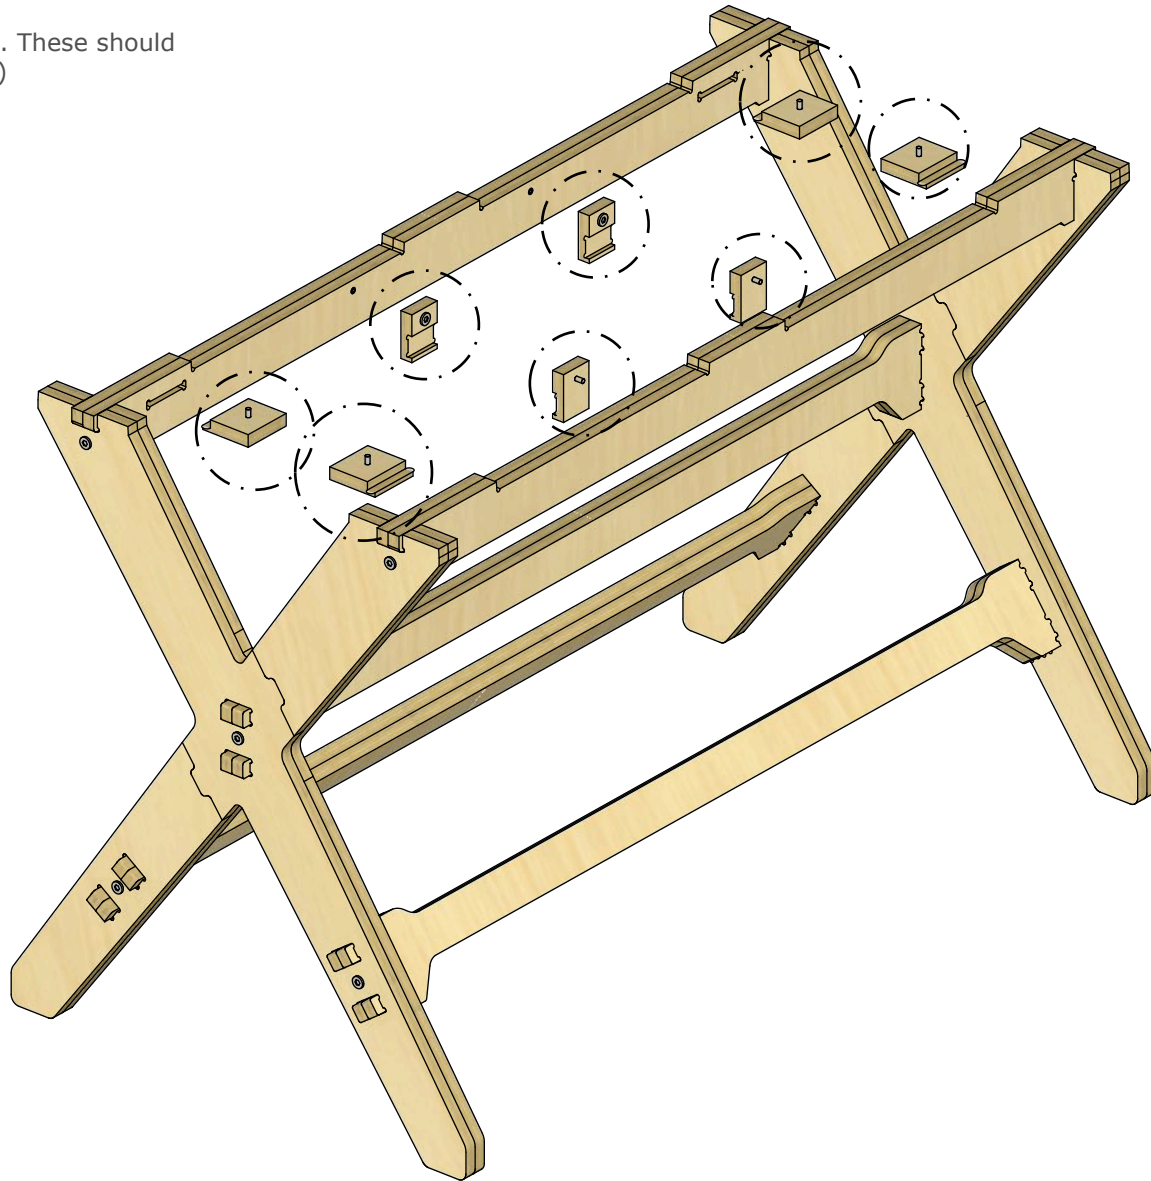

Install the wire tray. Next take the top and press it onto the base. A few taps with your palm at each corner will ensure that it's firmly engaged into the legs. After that go underneath and screw the four allen bolts into the top to lock it in place.

Enjoy your table!

