
STANDARD OPERATING PROCEDURE OF THICKNESS VF-A03

Lab /SOP/ 03

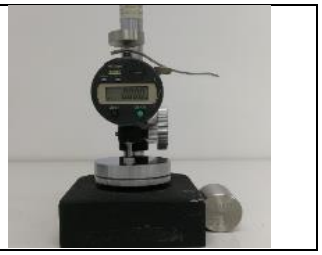

Thickness gauge with load 60+/-5g and 393+/-10g

The presser foot is 10.0 +/-0.5 mm in diameter



For Fabric, rubber, foam, thread, reinforcements and paper/fiber board

The dead mass loading is equivalent to 60 +/-5g (2.0 +/- 0.3 ounces)

The overall loading is equivalent to 70g/cm2



Raise the presser foot high or open the calipers enough so that the test sample can be inserted. Place the test sample on the base plate such that it rests flush on the surface without wrinkles. Gently lower (do not drop) the presser foot onto the test sample. Wait five seconds and read the thickness to the nearest 0.01mm.




For Leather, synthetic leather and plastics

The dead mass loading is equivalent to 393 +/-10g (13.86+/- 0.35ounces)


The overall loading is equivalent to 500 g/cm2.



Raise the presser foot high or open the calipers enough so that the test sample can be inserted. Place the test sample on the base plate such that it rests flush on the surface without wrinkles. Gently lower (do not drop) the presser foot onto the test sample. Wait five seconds and read the thickness to the nearest 0.01mm.

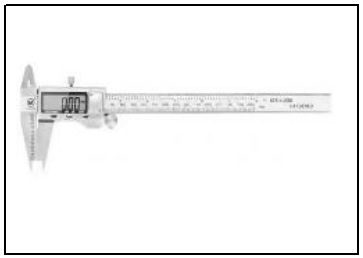


Laces and multi-layer fabrics should be measured using Vernier calipers.

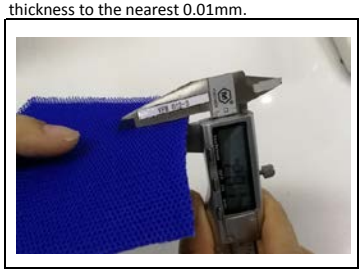

Place the test sample on the between the jaws of the Vernier calipers.

Gently lower close the jaws of the Vernier calipers until they just make contact with the fabric or shoe lace.

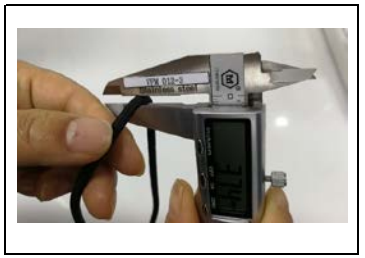

Take 3 measurements from each of the two test samples.

Read the thickness to the nearest 0.01mm.

The range and the average of the thickness measurements to the nearest 0.01mm.

Prepared by	Approved by	REVISION		DATE	