
STANDARD OPERATING PROCEDURE OF TROUSER TEAR FOR RUBBER VF-B07

Lab /SOP/ 05-03




1.Tensile testing machine with chart recorder
2. Clamp for rubber ,EVA,PU
3.Thickness gauge
4.Steel scale or calipers

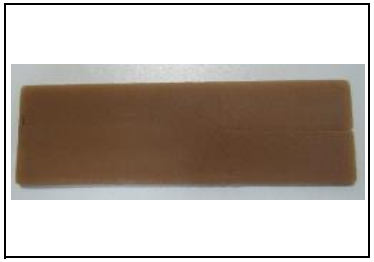

Test three (3) samples per material.


Sample thickness = 2.5+/-0.5mm

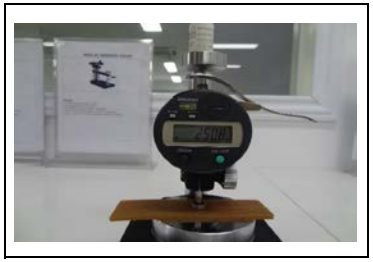


Measure the thickness of the sample




Zero and calibration the tensile testing machine.

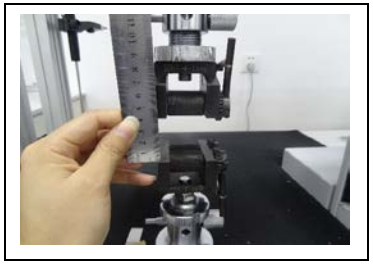

Set the tensile testing machine at the specified crosshead speed and Jaw gap.
Crosshead speed = 100mm/min
Jaw gap =40+/-4mm

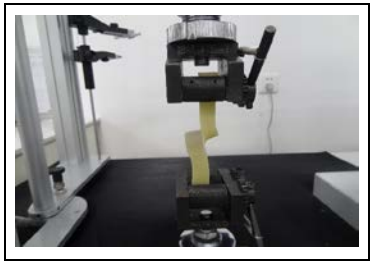

Place the test sample in the jaws such that the slit is centered in the jaws and one of the “legs” is held in each of the jaws.There should be no tension on the sample but it must be taught in the jaws (no slack) and equal portions of the test material should be positioned in the top and bottom jaws.

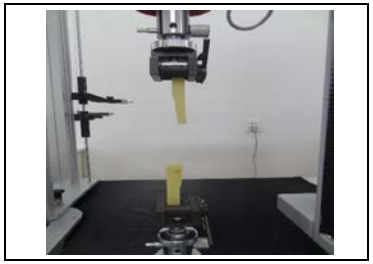

The test should be conducted until the sample has been torn for the complete 60mm.



Tearing strength is measured as the average of the peak loads over the entire tearing length.

Prepared by	Approved by	REVISION		DATE	