
STANDARD OPERATING PROCEDURE OF JAMES SLIP VF-B15

Lab /SOP/ 33




James Non-slip machine
Sample plates : PVC tiles, Mason tiles, Wood Varnish Tiles

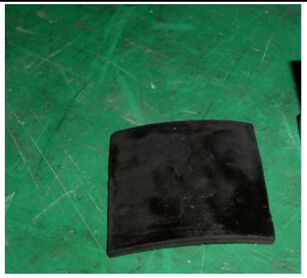


Perform four (4) measurements on all corners per test sample. Eight (8) measurements total per test material for dry and wet testing condition
Sample size:7.5cmX7.5cm




Connect the air hose to the air inlet.
Pull up the air regulator and then turn it clockwise or counter clockwise to obtain a pressure of 5kgf/cm2, which can be read from the pressure meter. After that, push down the air regulator.

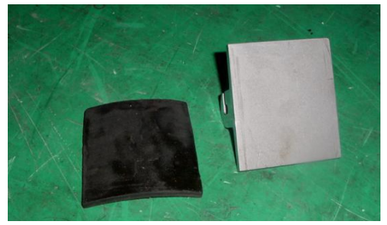


Fix the prepared sample plate to the yoke in such a way that the strut is perpendicular to the locating lever.Lock the nut.

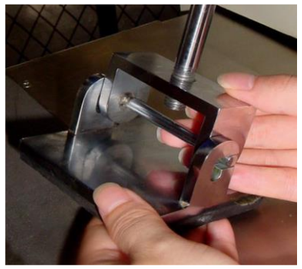


Place the weights onto the holder.
Loosen the screw and move the chart board so that the zero line on the chart is in alignment with the refill of the ball pen. Then lock the screw.
Press the “Down” button to make the specimen be in firm contact with the test table and in vertical.

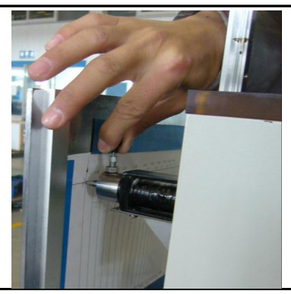

Before the test, pull out the button of the ball pen, otherwise there will not have a curve on the chart.
Press the “Test” button to start testing.

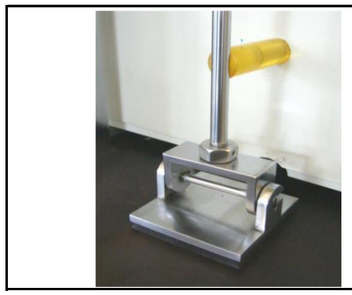

In the course of test, the test table moves forward at a rate of 25.4mm/s until the specimen slips and the strut drops.

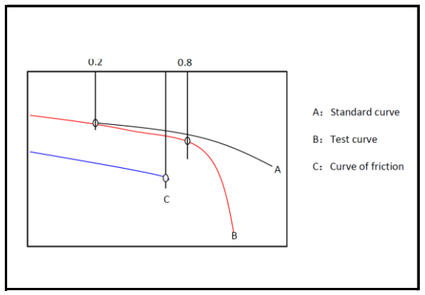

Record as the static coefficient of friction the point at which the horizontal curve, made on the chart by the ball pen, changes to a vertical line.

Prepared by	Approved by	REVISION		DATE	