STANDARD OPERATING PROCEDURE OF Rebound Resiliency VF-B16


Lab /SOP/ 30



Resiliometer




For non- cellular or elastic material , EVA , PU , PVC and Rubber : cut material with diameter of 50 mm and 12.5 mm in thickness.
Test three (3) samples per material.

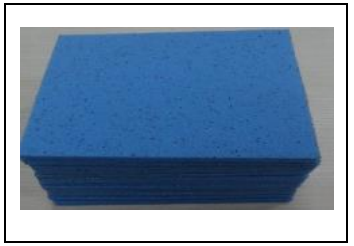


For cellular, foam material: cut material with dimensions of 80 mm in length, 80 mm in width and 50 mm in thickness.
Test three (3) samples per material.




Check the following at the start of each test :
The machine is level
The pendulum is fixed in the released handle.

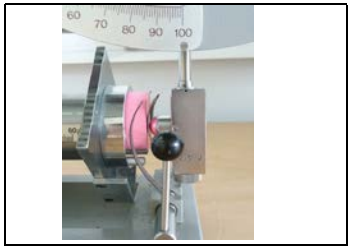

Screw off the fixed nut and attach the striker head to the pendulum with the head downward vertically.

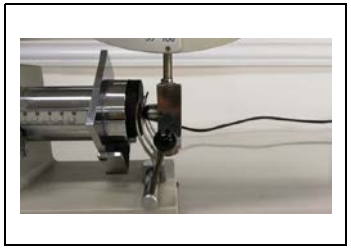

For non- cellular or elastic material, EVA, PU, PVC and rubber: use the impact energy of 0.5 J .
For cellular, foam material: use the impact energy of 0.2 J and Shape B cylinder diameter - 40mm

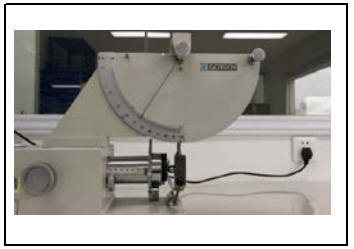

Clamp the specimens,Place the pendulum in a vertical position then start the release handle.
Again fix the pendulum into the release handle ; turn the turn knob to make the pointer point to 0%
Start the release handle to allow the pendulum to hit the same position of the specimen three times.



Test six times for the same position, the first three hits should not be recorded; this is for adjusting the mechanical performance of the specimen.

Prepared by	Approved by	REVISION		DATE	