STANDARD OPERATING PROCEDURE OF MASER VF-E11

Lab /SOP/ 34



Maeser machine which has pairs of V-shaped clamps

Tap water



Test two (2) samples per material


sample size is 114+/-2 mm by 114 +/-2 mm

Mark the principal direction of the material on each test specimen.


Test two (2) samples per material.



Adjust the test machine so that a pair of clamps and have their tips at their maximum

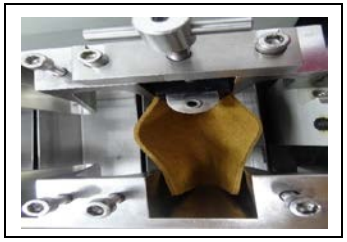


Fold, without creasing, one test specimen in half so that the outer surface is facing outwards and the fold is parallel to the principal direction of the material.

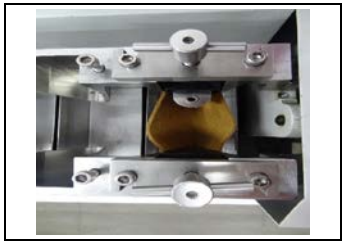

Place the folded test specimen between the . pair of clamps so that the fold runs between the tips of the "V"s




Fully tightened one of clamps, ensure that the test specimen is not slack, and then fully tightened the other clamp.

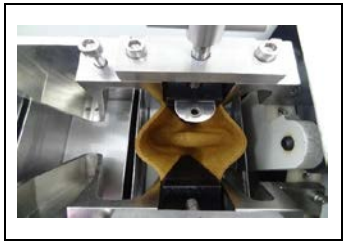

Fill the container with water and adjust the level so that it is above the center of the upward fold.

Immediately start the test machine.

Inspect the interior of the clamped test specimen(s) for signs of water penetration.

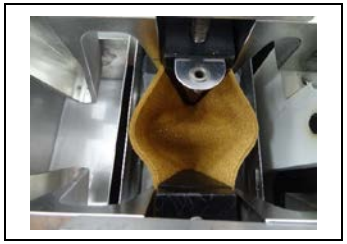

Continue to inspect the test specimens for approximately 15 minutes or until the test specimen (s) show signs of initial water penetration. Do not stop the machine when making the inspection.

Report:Number of cycles when penetration occurs

Prepared by	Approved by	REVISION		DATE	