
STANDARD OPERATING PROCEDURE OFWater Absorption VF-G06

Lab /SOP/ 48

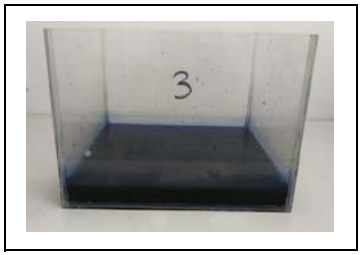

Immersion tank

Dry weights (rocks , steel)

Steel scale capable of measuring to +/-0.1cm

Silver ink pen



Remove all hang tags, laces, inserts, and tissue from dry footwear.



Water levelis 20mm above the topline of outsole sidewall.



Weigh the test shoe sample to the nearest 0.1 g (W1)



Place the test shoe sample in the immersion tank. pour water at 23+/-2oC into the immersion tank. Waterline is 20 mm above the top line of outsole sidewall. Ensure that the water level must be below the vamp.



Allow the test shoe sample to remain immersed in water for 30 minutes.

Carefully remove the test shoe sample from the water, use caution not to drip water into footwear.

Lightly blot the surface of the sample to remove any surface water.

Immediately weigh the test shoe material to the nearest 0.10 g (W2).

Compute water absorbed.



Check for any leakage area. Check the inside of liner and sock-liner if wet or any presence of water inside. Stop the testing when leaks are detected.

If no leaks are detected, continue testing.

If the inside of liner and sock-liner are still dry after one hour. It means it has PASS the testing.

Water absorption (%): = W2 - W1/W1 *100

Prepared by	Approved by	REVISION		DATE	