


Test tubes
Beakers
Test tube rack
Graduated cylinder
Solvents : acetone, ethyl acetate , MEK , toluene
. Funnels




Upper material :
Get sample approximately 3 cm x 3 cm
Lace / webbing:
Cut 2-3 pieces, approximately 30 mm long
Test two (2) samples per material.



Cut into small pieces so that these won't clog in the test tube.

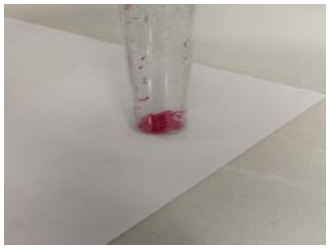

Place the cut samples at the bottom of the test tube. Add the solvent to the test tube. Ensure that the samples fully submerged in the solvent. Let it stand for 10 minutes.

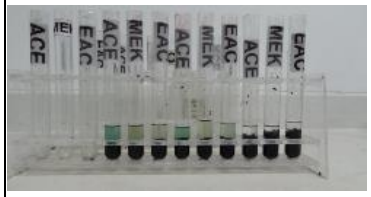

Check discoloration of the solvent

Prepared by	Approved by	REVISION		DATE	