

!Currently Unused!

PH Probe Power & Serial
&5V | TX 3V3 | RX 3V3 | GND


All pinouts are referenced top-left
to bottom-right when looking into
the on-board connectors

RGA Power
| 24VA |
| GND |

Turbo Pump Power & Serial
| 24VA | RS485-A |
| RS485-B | GND |

& indicates a power supply that is
switched on/off by the ATMEGA2560

Topside Power + Console
VIN | VIN2 | TX
RX | GND | GND

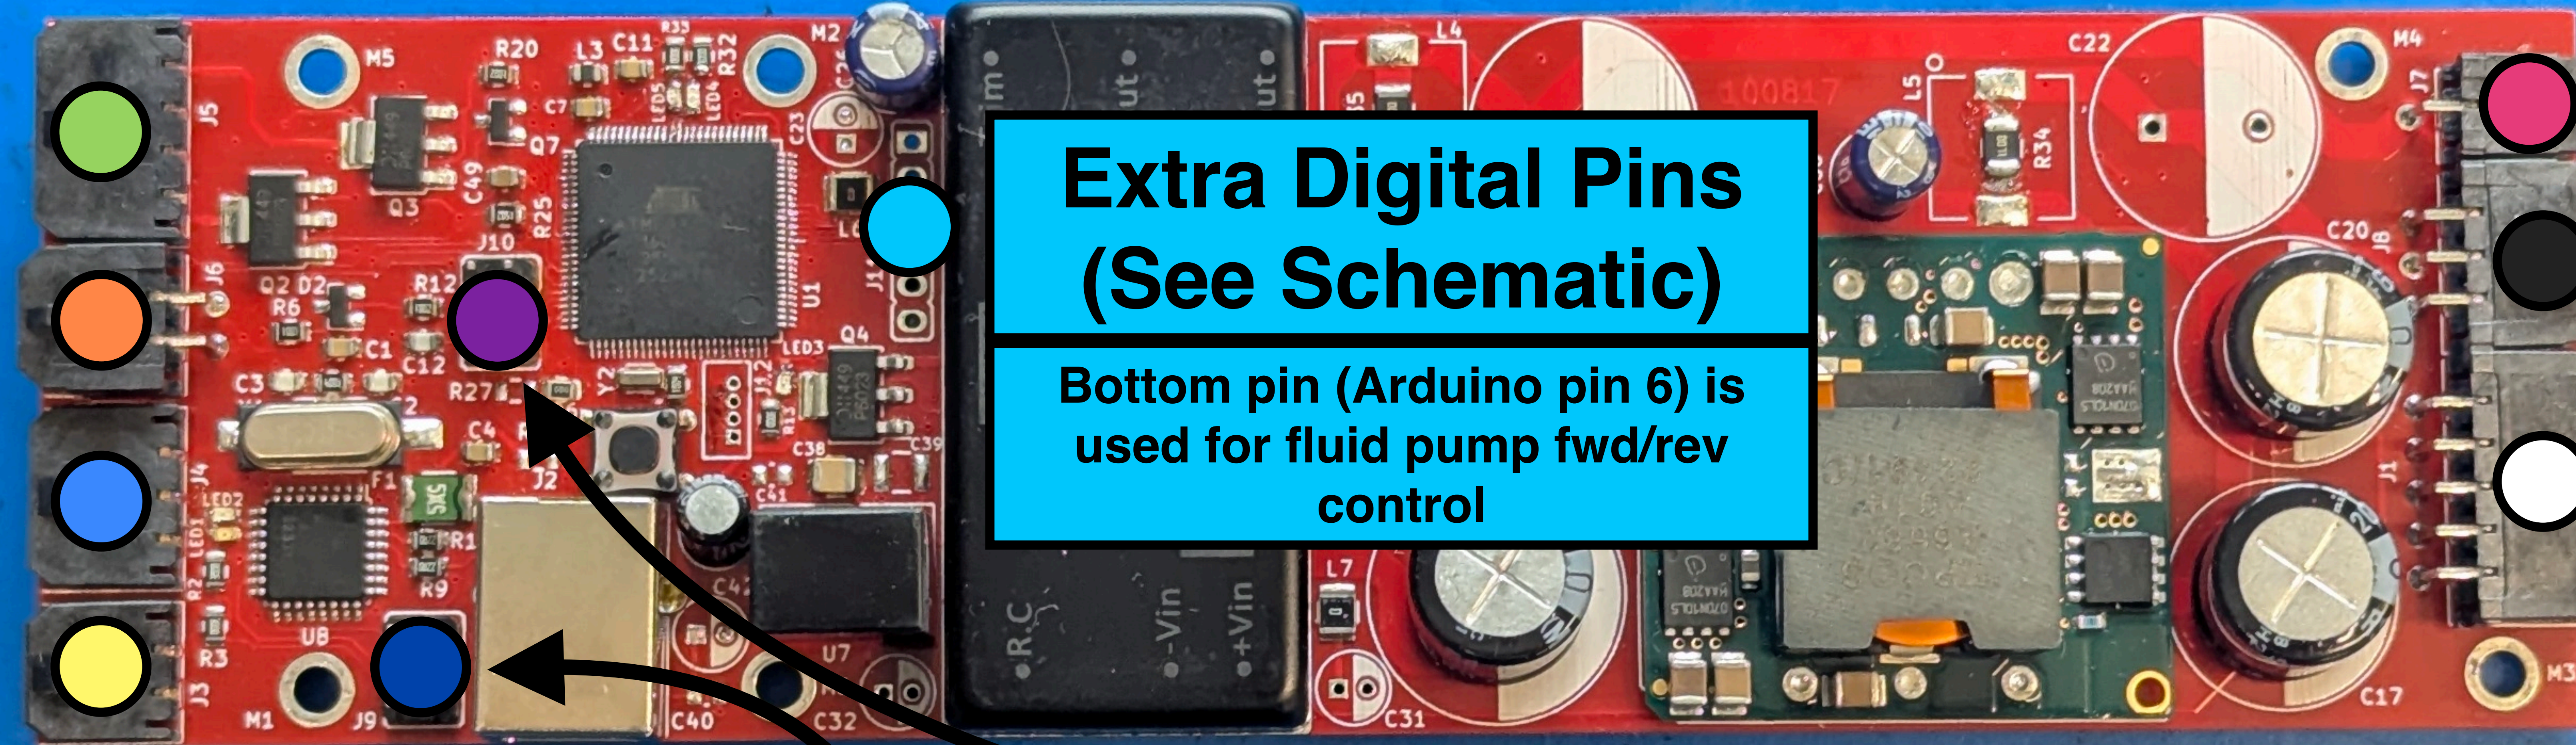

Extra Digital Pins
(See Schematic)

Bottom pin (Arduino pin 6) is
used for fluid pump fwd/rev
control

Custom Fluid Pump
&12V | 5V Analog Out | GND

Roughing Pump Power
&24VB | GND

ATMEGA16U2
ICSP Header

GND is
Bottom Right

ATMEGA2560
ICSP Header

GND is
Bottom Right

Unused Power Taps
VIN | 24VA | 24VB | 12V | 5V
GND | GND | GND | GND | GND