

PROTOCOL DOCUMENT	E-13.2
How to add and configure a new <i>mapzone</i>	01/08/2020

### **GOALS**

Know which steps must be taken both in QGIS and in the database to add a new *mapzone* and subsequently **configure its use and impact**. This always taking into account the use of **dynamic** *mapzones*, managed by the user but created from an internal **Giswater algorithm**.

### DESCRIPTION


Below are the steps to add a new mapzone. For the different types that exist, the steps to follow are exactly the same.

### **Background**

1. In system variable *utils\_dynamicmapzones\_status*, *om\_dynamicmapzones\_status* (v3.3) define the graph classes that are enabled:

{"SECTOR":true, "PRESSZONE":true, "DQA":true, "MINSECTOR":true, "DMA":true}

2. In the *cat\_feature\_node table*, *node\_type (v3.3)*, for each type of node we define graf\_delimiter. The sample has:

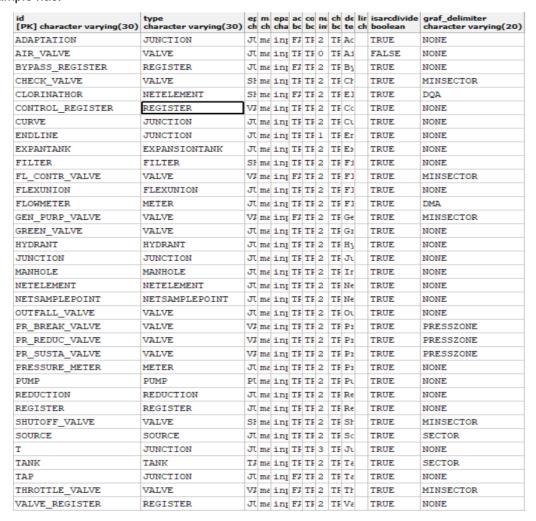




PROTOCOL DOCUMENT	E-13.2
How to add and configure a new <i>mapzone</i>	01/08/2020

3. In the valve configuration table **config\_valve**, anl\_mincut\_selector\_valve (v3.3) define the valves that act as stoppers

Example to add a new DMA type mapzone:

1) Add in QGIS a **new node** in the desired location. The type of node must be one that in the *node\_type* table has as a value in the column *graf\_delimiter* '**DMA**', since this column establishes which areas of the map can delimit the different types of node. If we want to make an area of the map **different** than dma, the only necessary thing to do is to insert a node that is the delimiter of the desired area. For DMA it will usually be 'METER' type nodes.

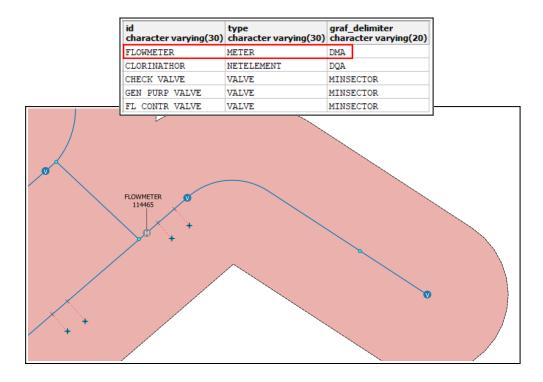

2) Add to the dma table (if we make another *mapzone* fill the corresponding table) a new value, with the name of the dma that we want to create and, above all, fill the **grafconfig** value with the following *json*. In the value of **nodeParent** we must put the id of the node that we just inserted, which will be the header of the new dma and in **toArc** we indicate the direction to take by means of the id of the section. Example:

{"use":[{"nodeParent":"1080", "toArc":[2092]}], "ignore":[], "stopper":[1057,41,1060]}

In **ignore** (optional) we will put, if it is the case, those nodes that being grafdelimiter, we do not want them to participate in the algorithm (for being out of service or for not doing its job).

In **stopper** (optional) we will put, if it is the case, those nodes that we want to force stop the flood algorithm.




# PROTOCOL DOCUMENT

E-13.2

How to add and configure a new mapzone

01/08/2020

3) We use the Giswater toolbox to recalculate the mapzones with the modification that we have made for dma's, by selecting

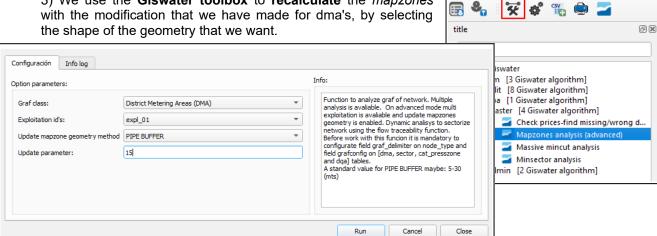

An alternative to using the Giswater toolbox, is to shoot the function directly from the database, making a call such that:

SELECT gw\_fct\_grafanalytics\_mapzones('{"data":{"parameters":{"grafClass":"DMA", "exploitation":[1], "macroExploitation":[1], "checkData":false, "updateFeature":true, "updateMapZone":2, "geomParamUpdate":15,"debug":false, "usePlanPsector":false, "forceOpen":[1,2,3], "forceClosed":[2,3,4]}}});


### where:

KEY	OBLIG.	DESCRIPTION	EXAMPLE	VALUE RANGE
grafClass	YES	Graph class to make	DMA	DMA, SECTOR, DQA, PRESSZONE
exploitation	YES	Exploitations to participate in the algorithm	[1,2]	All the available exploitations
macroExploitation	NO	Macroexplotations to participate in the algorithm	[1,2]	All the available macroexplotations
checkData	YES	If true, check if the system values are correct (topology, state_type, etc), In case there are errors, abort the process	false	false, true
updateFeature	YES	If true, update the values of dma_id, presszone_id, sector_id & dma_id of all NODES, ARCS, CONNEC that are flooded by the algorithm	true	false, true
updateMapZone	YES	O: does not update the geometry field (the _geom) of the mapzone 1: Updates by making an enveloping polygon with all the elements 2: Updates by buffering the sections with the value of geomParamUpdate 3: Updates by buffering the sections with the value of geomParamUpdate and incorporating the plot geometry (if it exists)	2	0,1,2,3
geomParamUpdate	YES	Value related to the options 2, 3 of the previous key	10	Any float between 0.1 – 100
usePlanPsector	YES	If true, use every psectors of the exploitation in the alogrithm analysis	false	false, true
forceOpen	YES	Valves that can be forced to open (e.g. for closed valves that for whatever reason we want to open)	[1,2,3]	Every closed valves
forceClosed	YES	Nodes in general which can be forced to close (e.g. in the debugging phase in case the trace gets out of control and does not converge as expected)	[1,2,3]	Every nodes (except closed valves)



PROTOCOL DOCUMENT	E-13.2
How to add and configure a new mapzone	01/08/2020

4) Once the **process is finished**, we must check again the geometries of the **dma**. In our example, we see that the geometry has been generated for the new dma that has the FLOWMETER that we have added as a delimiter node.

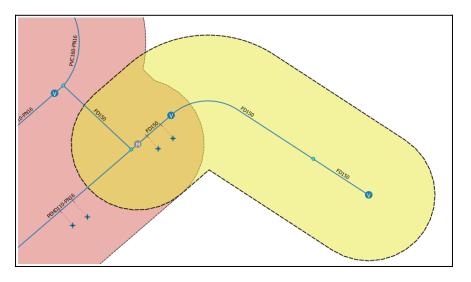

## **REVIEWS**

Action	User	Date
Created	Albert Bofill	09/04/2020
Modified	Xavier Torret	01/08/2020