

Dynamics

Craig Carignan
Glen Henshaw

November 23, 2025

0.1 Introduction


There are at least two reasons why we need to understand the dynamics of robotic manipulators. One is for control, which we'll discuss more in future lectures, but the basic idea is that if we have a desired trajectory $\{\underline{\theta}, \underline{\dot{\theta}}, \underline{\ddot{\theta}}\}$ and we want to find the joint torques $\underline{\tau}$ that will cause the robot to follow it. This is known as *inverse dynamics*. The other reason is for simulation: we have a joint torque $\underline{\tau}$ and we want to find the joint trajectory $\{\underline{\theta}, \underline{\dot{\theta}}, \underline{\ddot{\theta}}\}$ this torque vector induces. This is known as *forward dynamics*.

To do either one, we must find the equations that relate the joint forces/torques to the joint motion.

There are two basic approaches to this: the Newton–Euler formulation, which is based on forces and torques directly; and the Lagrangian formulation, which starts with an equation for the energy of the system.

0.2 Newton–Euler (Force–based) Approach

The advantage of the Newton–Euler approach is that it is inherently recurrent — we can “sweep” down the arm from the shoulder to the wrist and back, considering a single joint at a time. This makes it very computationally efficient.

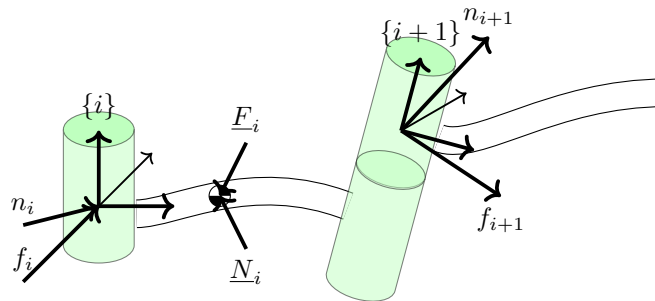

We will begin by defining

$\underline{F}_i$ = inertial force acting on link i at its Center of Mass (CM)

$\underline{N}_i$ = inertial torque acting on link i at its Center of Mass

Newton's Law states that

$$\underline{F}_i = m_i \underline{\dot{v}}_{c_i}$$

where m_i is the mass of link i , $\underline{\dot{v}}_{c_i}$ is the acceleration of link i 's CM relative to the base frame, and $\underline{p}$ is the linear momentum. This comes from $\underline{F} = \frac{d}{dt}(\underline{p}) = \frac{d}{dt}(m\underline{v}_c) = m\underline{\dot{v}}_c$ since $\dot{m} = 0$.

Euler's Equation is

$$\underline{N}_i = {}^{c_i}I \underline{\dot{\omega}}_i + \underline{\omega}_i \times {}^{c_i}I \underline{\omega}_i$$

where ${}^{c_i}I$ is the inertia tensor of link i relative to a frame $\{c_i\}$ whose origin is located at the link's CM, and $\underline{\omega}_i$ is the rotational velocity of link i with respect to the base frame. We get this by noting that

$$\underline{N} = \frac{d}{dt}(\underline{H}) = \frac{d}{dt}({}^{c_i}I \underline{\omega})$$

where $\underline{N}$ is the moment acting on joint i and $\underline{H}$ is the angular momentum. We then expand the time-derivative of the right-hand side:

$${}^0\dot{\underline{H}} = {}^0\underline{\Omega}_i \times {}^0R {}^{c_i}\underline{H} + {}^0R {}^{c_i}\dot{\underline{H}}$$

where we have used ${}^0\underline{H} = {}^0R {}^{c_i}\underline{H}$ noting that ${}^0R = {}^{c_i}R$. Therefore,

$${}^0\dot{\underline{H}} = \underline{\omega}_i \times {}^0R {}^{c_i}I {}^i\underline{\omega}_i + {}^0R {}^{c_i}I {}^i\dot{\underline{\omega}}_i$$

so that

$${}^0\dot{\underline{H}} = \underline{\omega}_i \times {}^{c_i}I \underline{\omega}_i + {}^{c_i}I \dot{\underline{\omega}}_i$$

If you are not familiar with inertia tensors, they are the rotational equivalent of the mass. But unlike mass, which is a scalar, inertia tensors are 3x3 matrices of the following form:

$$I = \begin{bmatrix} I_{xx} & -I_{xy} & -I_{xz} \\ -I_{xy} & I_{yy} & -I_{yz} \\ -I_{xz} & -I_{yz} & I_{zz} \end{bmatrix}$$

e.g. they are symmetric matrices with non-zeros on the diagonal. The terms on the diagonals are referred to as "moments of inertia" and the off-diagonal terms are "products of inertia" (see Example 6.1).

Also unlike mass, inertia tensors are expressed with respect to a specific reference frame that we must specify. We can re-express an inertia tensor with respect to a translated (but not rotated) frame via the parallel axis theorem:

$${}^A I = {}^C I + m \left[{}^A p_c^T {}^A p_c I_{3 \times 3} - {}^A p_c {}^A p_c^T \right]$$

where ${}^A p_c = [x_c, y_c, z_c]^T$ locates the center of mass relative to frame A , and $I_{3 \times 3}$ is the 3x3 identity matrix (see Example 6.2).

To compute the forward dynamics, we need to transform what we know about the dynamic state of the manipulator $\{\underline{F}, \underline{N}, \underline{\omega}, \underline{v}\}$ into $\{\underline{\tau}, \underline{\dot{q}}\}$. Our approach will be to start at the base frame and iterate outwards to the tooltip, calculating the linear and angular accelerations of each joint as a function of the linear and angular accelerations of all of the preceding joints. We'll then iterate back from tooltip to base frame, calculating the joint torques (and forces, for linear joints). In order to do this, we need tools for expressing accelerations and rotational rates in different frames.

We'll start with acceleration. Equation 5.13 from Chapter 5 of the text gives us a way to express linear *velocities* in different frames:

$${}^A \underline{v}_p = {}^A_B R {}^B \underline{v}_p + {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{p}_p + {}^A \underline{v}_{B_0}$$

where ${}^A \underline{v}_{B_0}$ is the velocity of the origin of frame B with respect to frame A . Because linear accelerations are just the time derivatives of velocities, we can differentiate both sides of this equation to get what we need:

$$\begin{aligned} \frac{d}{dt} \{ {}^A \underline{v}_p \} &= \left\{ {}^A_B R {}^B \underline{v}_p + {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{p}_p + {}^A \underline{v}_{B_0} \right\} \\ {}^A \dot{\underline{v}}_p &= {}^A_B R {}^B \dot{\underline{v}}_p + {}^A_B \dot{R} {}^B \underline{v}_p + {}^A \dot{\underline{\Omega}}_B \times {}^A_B R {}^B \underline{p}_p + {}^A \underline{\Omega}_B \times \underbrace{\frac{d}{dt} ({}^A_B R {}^B \underline{p}_p)}_{= {}^A_B \dot{R} {}^B \underline{p}_p + {}^A_B R \underline{\dot{v}}_p \times {}^B \underline{\dot{p}}_p} + {}^A \dot{\underline{v}}_{B_0} \\ &= {}^A_B R {}^B \dot{\underline{v}}_p + {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{v}_p + {}^A \dot{\underline{\Omega}}_B \times {}^A_B R {}^B \underline{p}_p \\ &\quad + {}^A \underline{\Omega}_B \times ({}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{p}_p) + {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{v}_p + {}^A \dot{\underline{v}}_{B_0} \end{aligned}$$

where we have replaced ${}^B \underline{\dot{p}}_p$ by ${}^B \underline{v}_p$. Simplifying, we end up with

$${}^A \dot{\underline{v}}_p = {}^A \dot{\underline{v}}_{B_0} + {}^A_B R {}^B \dot{\underline{v}}_p + 2 {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{v}_p + {}^A \dot{\underline{\Omega}}_B \times {}^A_B R {}^B \underline{p}_p + {}^A \underline{\Omega}_B \times ({}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{p}_p)$$

We can do something similar with rotational acceleration. The text provides an equation to express rotational velocity in different frames (Equation 6.13):

$${}^A \underline{\Omega}_C = {}^A \underline{\Omega}_B + {}^A_B R {}^B \underline{\Omega}_C$$

Differentiating both sides, we get

$$\begin{aligned} \frac{d}{dt} ({}^A \underline{\Omega}_C) &= \frac{d}{dt} ({}^A \underline{\Omega}_B + {}^A_B R {}^B \underline{\Omega}_C) \\ {}^A \dot{\underline{\Omega}}_C &= {}^A \dot{\underline{\Omega}}_B + {}^A_B \dot{R} {}^B \underline{\Omega}_C + {}^A_B R {}^B \dot{\underline{\Omega}}_C \\ {}^A \dot{\underline{\Omega}}_C &= {}^A \dot{\underline{\Omega}}_B + {}^A_B R {}^B \dot{\underline{\Omega}}_C + {}^A \underline{\Omega}_B \times {}^A_B R {}^B \underline{\Omega}_C \end{aligned}$$

We'll now use these results to do a forward sweep from the base frame to the tooltip, calculating accelerations as we go. First we need an expression for

the linear acceleration of the link frame origin. Make the following substitutions into the equation for ${}^A\dot{\underline{v}}_p$:

$$\begin{aligned}\{A\} &\rightarrow \{0\} \\ \{B\} &\rightarrow \{i\} \\ A_0 &\rightarrow 0 \\ B_0 &\rightarrow i \\ p &\rightarrow i+1\end{aligned}$$

Then,

$$\begin{aligned}{}^{i+1}\dot{\underline{v}}_{i+1} &= {}^i{}^{i+1}R \left[{}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{i+1} + {}^i\dot{\underline{\omega}}_i \times \left({}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{i+1} \right) + {}^i\dot{\underline{v}}_i \right] \\ &\quad + 2 {}^{i+1}\dot{\underline{\omega}}_{i+1} \times {}^i\dot{\underline{d}}_{i+1} {}^{i+1}\hat{z}_{i+1} + {}^i\ddot{\underline{d}}_{i+1} {}^{i+1}\hat{z}_{i+1}\end{aligned}\quad (1)$$

Note that we have used the substitutions ${}^i\dot{\underline{\omega}}_i = {}^i{}_0R {}^0\dot{\underline{\Omega}}_i$ and ${}^i\dot{\underline{v}}_i = {}^i{}_0R {}^0\dot{\underline{v}}_i$.

Next, an expression for the linear acceleration of the link Center of Mass, using the substitutions

$$\begin{aligned}\{A\} &\rightarrow \{0\} \\ \{B\} &\rightarrow \{i\} \\ A_0 &\rightarrow 0 \\ B_0 &\rightarrow i \\ p &\rightarrow c_i\end{aligned}$$

$${}^i{}_0R \left\{ {}^0\dot{\underline{v}}_{c_i} = {}^i{}_0R {}^i\dot{\underline{v}}_{c_i} + {}^0\dot{\underline{\Omega}}_i \times {}^i{}_0R {}^i\underline{p}_{c_i} + {}^0\dot{\underline{v}}_i + 2 {}^0\dot{\underline{\Omega}}_i \times {}^i{}_0R {}^i\underline{v}_{c_i} + {}^0\dot{\underline{\Omega}}_i \times ({}^0\dot{\underline{\Omega}}_i \times {}^i{}_0R {}^i\underline{p}_{c_i}) \right\}$$

Noting that the center of mass does not move in its own frame, ${}^i\underline{v}_{c_i} = {}^i\dot{\underline{v}}_{c_i} = \underline{0}$,

$${}^i\dot{\underline{v}}_{c_i} = {}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{c_i} + {}^i\dot{\underline{\omega}}_i \times \left({}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{c_i} \right) + {}^i\dot{\underline{v}}_i$$

Now we'll look at the angular acceleration of link frames, by making the substitutions into ${}^A\dot{\underline{\Omega}}_C$:

$$\begin{aligned}\{A\} &\rightarrow \{0\} \\ \{B\} &\rightarrow \{i\} \\ \{C\} &\rightarrow \{i+1\}\end{aligned}$$

$${}^i{}_0R \left\{ {}^0\dot{\underline{\Omega}}_{i+1} \right\} = {}^i{}_0R \left\{ {}^0\dot{\underline{\Omega}}_i + {}^i{}_0R {}^i\dot{\underline{\Omega}}_{i+1} + {}^0\dot{\underline{\Omega}}_i \times {}^i{}_0R {}^i\dot{\underline{\Omega}}_{i+1} \right\}$$

Multiplying both sides by ${}^i{}_0R$, noting that ${}^i\dot{\underline{\Omega}}_{i+1} = {}^i{}_{i+1}R {}^{i+1}\dot{\hat{z}}_{i+1}\dot{\Theta}_{i+1}$, expanding ${}^i\dot{\underline{\Omega}}_{i+1}$, and recalling that ${}^i{}_{i+1}\dot{R} = {}^i\dot{\underline{\Omega}}_{i+1} {}^i{}_{i+1}R$ gives

$$\begin{aligned}{}^{i+1}{}_iR \left\{ {}^i\dot{\underline{\omega}}_{i+1} \right\} &= {}^{i+1}{}_iR \left\{ {}^i\dot{\underline{\omega}}_i + {}^i{}_{i+1}R {}^{i+1}\hat{z}_{i+1}\ddot{\Theta}_{i+1} + {}^i\dot{\underline{\Omega}}_{i+1} \times {}^i{}_{i+1}R {}^{i+1}\hat{z}_{i+1}\dot{\Theta}_{i+1} \right. \\ &\quad \left. + {}^i\dot{\underline{\omega}}_i \times {}^i{}_{i+1}R {}^{i+1}\hat{z}_{i+1}\dot{\Theta}_{i+1} \right\}\end{aligned}$$

Multiplying by ${}^i{}^{i+1}R$ and noting that the first cross product term is $\underline{0}$ gives

$${}^{i+1}\underline{\dot{\omega}}_{i+1} = {}^i{}^{i+1}R {}^i\dot{\underline{\omega}}_i + {}^i{}^{i+1}R {}^i\underline{\omega}_i \times {}^{i+1}\hat{z}_{i+1}\dot{\theta}_{i+1} + {}^{i+1}\hat{z}_{i+1}\ddot{\theta}_{i+1} \quad (2)$$

We've already derived an expression for propagating the angular velocity:

$${}^{i+1}\underline{\omega}_{i+1} = {}^i{}^{i+1}R {}^i\underline{\omega}_i + {}^{i+1}\hat{z}_{i+1}\dot{\theta}_{i+1} \quad (3)$$

And we can pick out the forces and torques as:

$$\begin{aligned} {}^{i+1}\underline{F}_{i+1} &= m_{i+1} {}^{i+1}\underline{\dot{v}}_{c_{i+1}} \\ {}^{i+1}\underline{N}_{i+1} &= {}^{c_{i+1}}I_{i+1} {}^{i+1}\underline{\dot{\omega}}_{i+1} + {}^{i+1}\underline{\omega}_{i+1} \times {}^{c_{i+1}}I_{i+1} {}^{i+1}\underline{\omega}_{i+1} \end{aligned}$$

Thus, the outward iteration consists of the following equations:

$${}^{i+1}\underline{\omega}_{i+1} = {}^i{}^{i+1}R {}^i\underline{\omega}_i + {}^{i+1}\hat{z}_{i+1}\dot{\theta}_{i+1} \quad (4)$$

$${}^{i+1}\underline{\dot{\omega}}_{i+1} = {}^i{}^{i+1}R {}^i\dot{\underline{\omega}}_i + {}^i{}^{i+1}R {}^i\underline{\omega}_i \times {}^{i+1}\hat{z}_{i+1}\dot{\theta}_{i+1} + {}^{i+1}\hat{z}_{i+1}\ddot{\theta}_{i+1} \quad (5)$$

$$\begin{aligned} {}^{i+1}\underline{\dot{v}}_{i+1} &= {}^i{}^{i+1}R \left[{}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{i+1} + {}^i\underline{\omega}_i \times \left({}^i\underline{\omega}_i \times {}^i\underline{p}_{i+1} \right) + {}^i\dot{\underline{v}}_i \right] \\ &\quad + 2 {}^{i+1}\underline{\omega}_{i+1} \times \dot{d}_{i+1} {}^{i+1}\hat{z}_{i+1} + \ddot{d}_{i+1} {}^{i+1}\hat{z}_{i+1} \end{aligned} \quad (6)$$

$${}^i\underline{\dot{v}}_{c_i} = {}^i\dot{\underline{\omega}}_i \times {}^i\underline{p}_{c_i} + {}^i\underline{\omega}_i \times \left({}^i\underline{\omega}_i \times {}^i\underline{p}_{c_i} \right) + {}^i\dot{\underline{v}}_i$$

$${}^{i+1}\underline{F}_{i+1} = m_{i+1} {}^{i+1}\underline{\dot{v}}_{c_{i+1}} \quad (7)$$

$${}^{i+1}\underline{N}_{i+1} = {}^{c_{i+1}}I_{i+1} {}^{i+1}\underline{\dot{\omega}}_{i+1} + {}^{i+1}\underline{\omega}_{i+1} \times {}^{c_{i+1}}I_{i+1} {}^{i+1}\underline{\omega}_{i+1} \quad (8)$$

Now we need to propagate from the end effector to the wrist to calculate the forces and torques expressed on each joint. Just like with the static case we've already done, we'll start with a static force/moment balance:

$$\begin{aligned} \sum_{\text{link } i} \underline{f} &= {}^i\underline{F}_i = {}^i\underline{f}_i - {}^i{}^{i+1}R {}^{i+1}\underline{f}_{i+1} \\ \sum_{cm_i} \underline{n} &= {}^i\underline{N}_i = {}^i\underline{n}_i - {}^i\underline{n}_{i+1} + \left(- {}^i\underline{p}_{c_i} \right) \times {}^i\underline{f}_i - \left({}^i\underline{p}_{i+1} - {}^i\underline{p}_{c_i} \right) \times {}^i\underline{f}_{i+1} \end{aligned}$$

Using the force balance equation and some rotation matrices, the moment balance equation becomes

$${}^i\underline{N}_i = {}^i\underline{n}_i - {}^i{}^{i+1}R {}^{i+1}\underline{n}_{i+1} - {}^i\underline{p}_{c_i} \times {}^i\underline{F}_i - {}^i\underline{p}_{i+1} \times {}^i{}^{i+1}R {}^{i+1}\underline{f}_{i+1}$$

So the inward iteration becomes

$${}^i\underline{f}_i = {}^i{}^{i+1}R {}^{i+1}\underline{f}_{i+1} + {}^i\underline{F}_i \quad (9)$$

$${}^i\underline{n}_i = {}^i\underline{N}_i + {}^i{}^{i+1}R {}^{i+1}\underline{n}_{i+1} + {}^i\underline{p}_{c_i} \times {}^i\underline{F}_i + {}^i\underline{p}_{i+1} \times {}^i{}^{i+1}R {}^{i+1}\underline{f}_{i+1} \quad (10)$$

and then we can pick off the z axis components:

$$\tau_i = {}^i\underline{n}_i^T {}^i\hat{z}_i \quad \text{revolute } (\tau_i \text{ is torque}) \quad (11)$$

$$\tau_i = {}^i\underline{f}_i^T {}^i\hat{z}_i \quad \text{prismatic } (\tau_i \text{ is force}) \quad (12)$$

Note that we can add a gravitational term by starting the outward iteration with the base frame by setting ${}^0\dot{\underline{v}}_0 = -{}^0\underline{g}$. Similarly, we can add an external contact wrench by setting ${}^{N+1}\underline{f}_{N+1}$ = contact force and ${}^{N+1}\underline{n}_{N+1}$ = contact torque for the end effector frame $N + 1$ at the start of the inward iteration.

0.3 Lagrangian (Energy-based) Approach

The Lagrangian approach has the advantages that it is much simpler to understand, easier to add complex dynamics such as flexibility in the links, and yields an analytical model. However, it is not as computationally efficient as the Newton–Euler approach, so most software written to calculate the dynamics of articulated rigid body manipulators goes with the Newton–Euler approach.

To derive the dynamic equations with the Lagrangian approach, start with an expression for the kinetic and potential energy of the manipulator:

$$L \equiv \underbrace{K}_{\text{kinetic}} - \underbrace{P}_{\text{potential}}$$

which is known as the Lagrangian. The equations of motion are then given by

$$Q_i = \frac{d}{dt} \left(\frac{\partial L}{\partial \dot{q}_i} \right) - \frac{\partial L}{\partial q_i} \quad (13)$$

where q_i is the generalized coordinate, and Q_i is the generalized force. For an articulated rigid body manipulator,

$$K = \sum_{i=1}^N \left(\underbrace{\frac{1}{2} m_i \dot{\underline{v}}_{c_i}^T \dot{\underline{v}}_{c_i}}_{\text{translational kinetic energy}} + \underbrace{\frac{1}{2} \dot{\underline{\omega}}_i^T c_i I_i \dot{\underline{\omega}}_i}_{\text{rotational kinetic energy}} \right)$$

Note that we can calculate $\dot{\underline{v}}_{c_i}$ by substituting $\{A\} \rightarrow \{0\}, \{B\} \rightarrow \{i\}$ and $P \rightarrow c_i$ into Equation 5.13:

$$\begin{aligned} {}^0\underline{v}_{c_i} &= {}^0\underline{\Omega}_i \times {}^0R_i \dot{\underline{p}}_{c_i} + {}^0\underline{v}_i \\ {}^iR_i \{ \dot{\underline{v}}_{c_i} &= \underline{\omega}_i \times {}^0R_i \dot{\underline{p}}_0 + \underline{v}_i \} \\ \dot{\underline{v}}_{c_i} &= \dot{\underline{\omega}}_i \times \dot{\underline{p}}_{c_i} + \dot{\underline{v}}_i \\ {}^{i+1}\underline{v}_{i+1} &= {}^{i+1}R_i \left(\dot{\underline{v}}_i + \dot{\underline{\omega}}_i \times \dot{\underline{p}}_{i+1} \right) + \dot{\underline{d}}_{i+1} \dot{\hat{z}}_{i+1} \end{aligned}$$

We can smooch this into the form

$$K(\underline{q}, \dot{\underline{q}}) = \frac{1}{2} \dot{\underline{q}}^T M(\underline{q}) \dot{\underline{q}}$$

Also,

$$P(\underline{q}) = \sum_{i=1}^N -m_i {}^0\underline{g}^T {}^0\underline{p}_{c_i}$$

which nearly always refers only to gravitational terms. Note that ${}^0\underline{p}_{c_i}$ can be obtained using the T transform as follows: ${}^0\underline{p}_{c_i} = {}^0_i T {}^i\underline{p}_{c_i}$.

To find the dynamics, we have to shove these equations through Equation 13:

$$\begin{aligned} \frac{d}{dt} \frac{\partial L}{\partial \dot{\underline{q}}} &= \frac{d}{dt} (M(\underline{q})\dot{\underline{q}}) \\ &= M(\underline{q})\ddot{\underline{q}} + \dot{M}(\underline{q})\dot{\underline{q}} \end{aligned}$$

so that

$$\underline{\tau} = M(\underline{q})\ddot{\underline{q}} + \dot{M}(\underline{q})\dot{\underline{q}} - \frac{\partial L}{\partial \underline{q}} \quad (14)$$

where $\underline{\tau}_i$ are the generalized forces for a manipulator. We define the term

$$b(\underline{q}, \dot{\underline{q}}) = \dot{M}(\underline{q})\dot{\underline{q}} - \frac{\partial L}{\partial \underline{q}}$$

which contains the centripetal and Coriolis forces. Thus, the dynamics of a manipulator can be expressed in full as

$$\underline{\tau} = M(\underline{q})\ddot{\underline{q}} + b(\underline{q}, \dot{\underline{q}}) + E(\underline{q}) \quad (15)$$

where $E(\underline{q}) = \frac{\partial P}{\partial \underline{q}}$ (note that $\frac{\partial K}{\partial \underline{q}} = 0$).

This is known as a ‘‘Hamiltonian system’’, and is quite general. $E(\cdot)$ is usually just gravitational forces, but can also include frictional terms or other terms exerted on the manipulator by the environment.

In fact, we can generally further factor the equations of motion as

$$\underline{\tau} = M(\underline{q})\ddot{\underline{q}} + B(\underline{q})\dot{\underline{q}} + C(\underline{q})\dot{\underline{q}}^2 + E(\underline{q}) \quad (16)$$

where $B(\cdot)$ contains just the Coriolis forces, and $C(\cdot)$ contains the centripetal forces.

0.3.1 Example 6.3


Let’s consider the dynamics of standard two-link planar arm, in order to understand the structure of robot arm dynamics.

From Section 6.8, we know that the full dynamics of this arm are

$$\begin{aligned} \tau_1 &= m_2 l_2^2 (\ddot{\theta}_1 + \ddot{\theta}_2) + m_2 l_1 l_2 c_2 (2\ddot{\theta}_1 + \ddot{\theta}_2) \\ &\quad + (m_1 + m_2) l_1^2 \ddot{\theta}_1 - m_2 l_1 l_2 s_2 \dot{\theta}_2^2 - 2m_2 l_1 l_2 s_2 \dot{\theta}_1 \dot{\theta}_2 + m_2 l_2 g c_{12} + (m_1 + m_2) l_1 g c_1 \\ \tau_2 &= m_2 l_1 l_2 c_2 \ddot{\theta}_1 + m_2 l_1 l_2 s_2 \dot{\theta}_1^2 + m_2 l_2 g c_{12} + m_2 l_2^2 (\ddot{\theta}_1 + \ddot{\theta}_2) \end{aligned}$$

We can rewrite this in configuration space form as:

$$\underline{\tau} = M(\underline{q})\ddot{\underline{q}} + B(\underline{q}) \begin{bmatrix} \dot{\theta}_1 & \dot{\theta}_2 \end{bmatrix} + C(\underline{q}) \begin{bmatrix} \dot{\theta}_1^2 \\ \dot{\theta}_2^2 \end{bmatrix} + G(\underline{q})$$

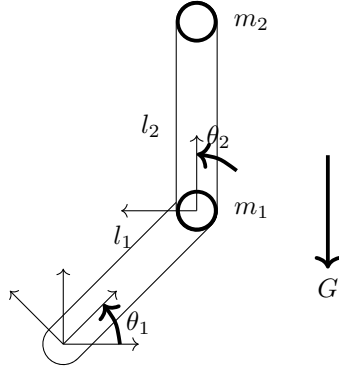

where

$$M(\underline{q}) = \begin{bmatrix} l_2^2 m_2 + 2l_1 l_2 m_2 c_2 + l_1^2 (m_1 + m_2) & l_2^2 m_2 + l_1 l_2 m_2 c_2 \\ l_2^2 m_2 + l_1 l_2 m_2 c_2 & l_2^2 m_2 \end{bmatrix}$$

Note that $M = M^T$ and that $1/2 \dot{\underline{q}}^T M \dot{\underline{q}} > 0$. This implies that M^{-1} always exists.

The Coriolis term is

$$B(\underline{q}) = \begin{bmatrix} -2m_2 l_1 l_2 s_2 \\ 0 \end{bmatrix}$$

The centripetal term is

$$C(\underline{q}) = \begin{bmatrix} 0 & -m_2 l_1 l_2 s_2 \\ m_2 l_1 l_2 s_2 & 0 \end{bmatrix}$$

And the gravity term is

$$G(\underline{q}) = \begin{bmatrix} m_2 l_2 c_{12} + (m_1 + m_2) l_1 c_1 \\ m_2 l_2 c_{12} \end{bmatrix} g$$