
Bambu Lab A1 Wooden Enclosure

Timber drawings • external feed (AMS lite outside) • plain-strip version

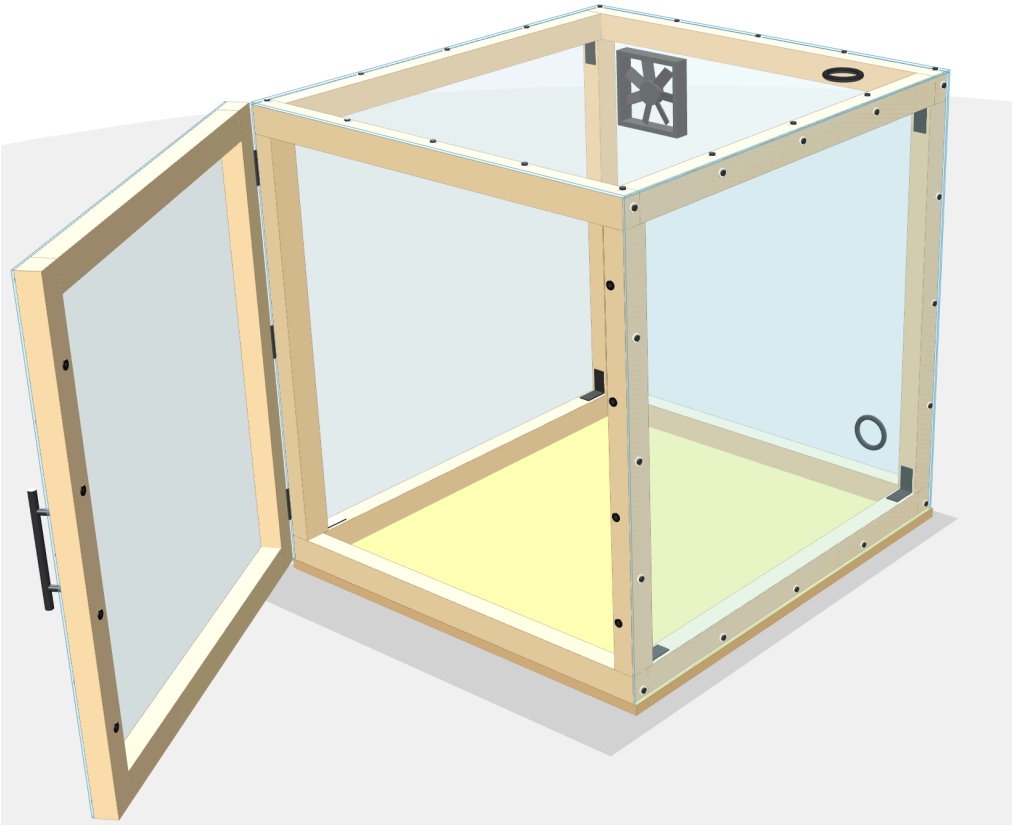

3D model view (door half open, printer hidden)

Frame (outside of wood)	**640 × 700 × 680**
Clear inside W×D×H	**580 × 640 × 640**
Finished size (door, feet)	**about 650 × 741 × 708**
30×40 strip total	**10.0 m, 16 pieces (6 × 2 m)**
Clear panels	**3 mm, 5 panels, 16 × Ø6 holes each**

General notes

1. All dimensions in millimetres (mm).
2. Timber: 30×40 strip, kiln-dried spruce or pine (8–12 % moisture), planed four sides, straight grain with few knots. Paulownia also works but holds screws poorly.
3. The timber shop only cuts to length: no grooves, no rebates, no holes. Square (90°) end cuts.
4. Tolerances: length ±1, section ±0.5.
5. Panels sit on the outside of the frame on 3 mm foam tape, held by ST4×20 screws with nylon washers, not glue (detail on sheet 4).
6. Pre-drill Ø3 pilot holes for every wood screw, especially near strip ends; glue every wood-to-wood joint.
7. Pencil the part letter (A–E) on every piece.

Sheet list

1. Overview
2. Cut list
3. Frame assembly views
4. Door frame and fixing details
5. Clear panels and holes

Bambu Lab A1 enclosure • external feed • plain strips

Overview


Sheet	Scale	Units	Date	Rev.
1 / 5	—	mm	2026-11-08	v2

Cut list • 30×40 strip (cut to length only)


ID	Part	Size	Qty	Location
A	Post	30×40×600	4	One per corner, 30 mm face to front/back, standing on the bottom frame
B	Top/bottom frame, front & back rail	30×40×640	4	Full length, 40 mm on edge
C	Top/bottom frame, side rail	30×40×640	4	Fits between the front and back rails
D	Door stile	30×40×683	2	Door left & right, full height
E	Door rail	30×40×566	2	Fits between the stiles
F	Base board	650×705×15	1	15 mm solid-wood panel or plywood

Strip total 10 018 mm, 16 pieces; 1 base board.

Cutting plan • 2 m stock, 3 mm kerf

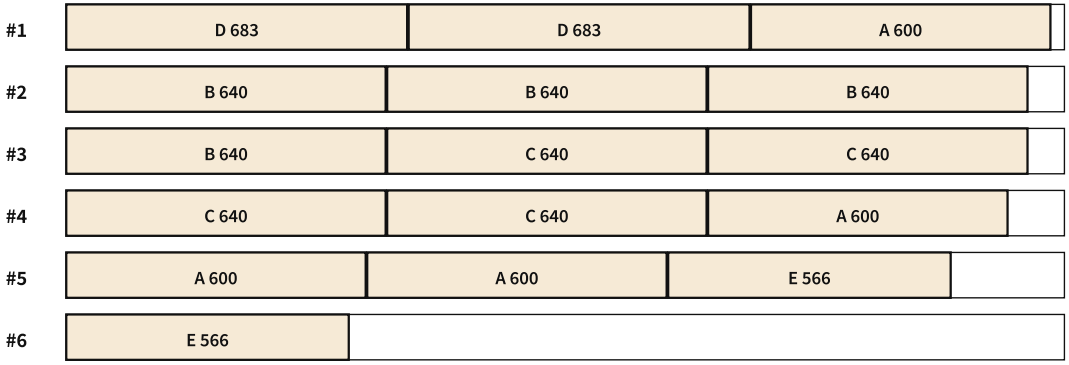

F Base board 1:12

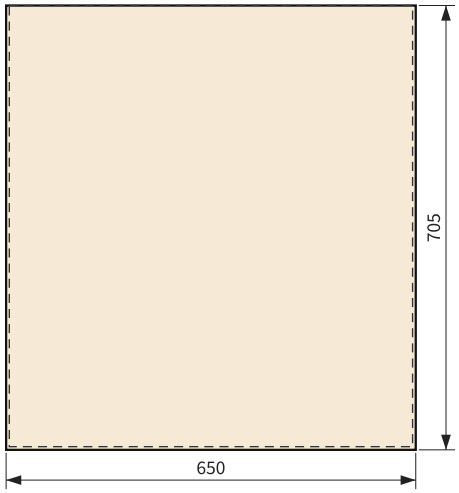


Dashed = frame footprint: flush at the front, 5 in at the left, right and back.

Bambu Lab A1 enclosure • external feed • plain strips


Cut list

Sheet	Scale	Units	Date	Rev.
2 / 5	—	mm	2026-11-08	v2


Front view (door removed)

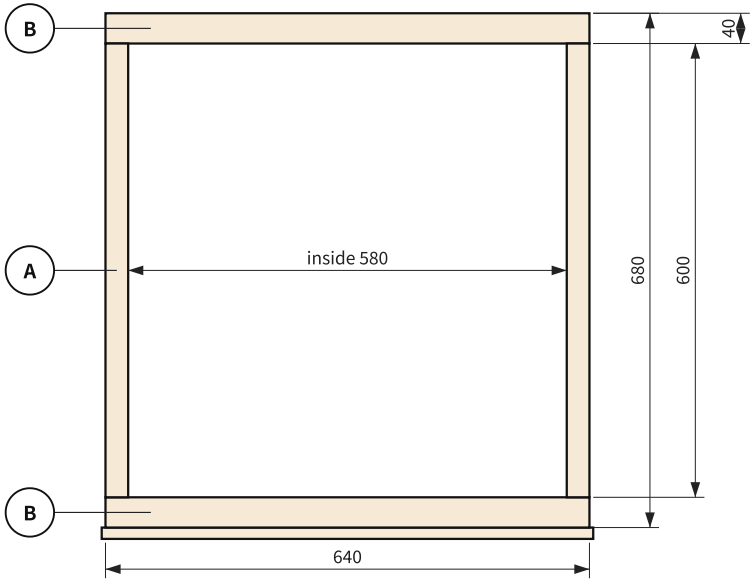


Right side view (front on the left; left side mirrors it)

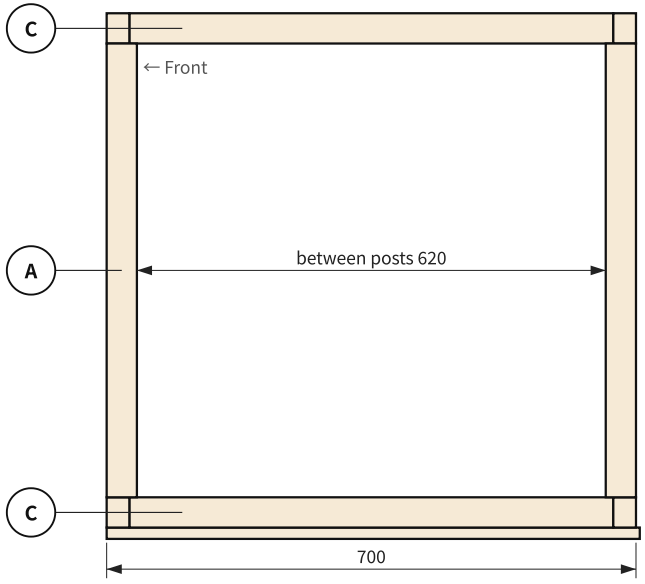

Back view (from outside)

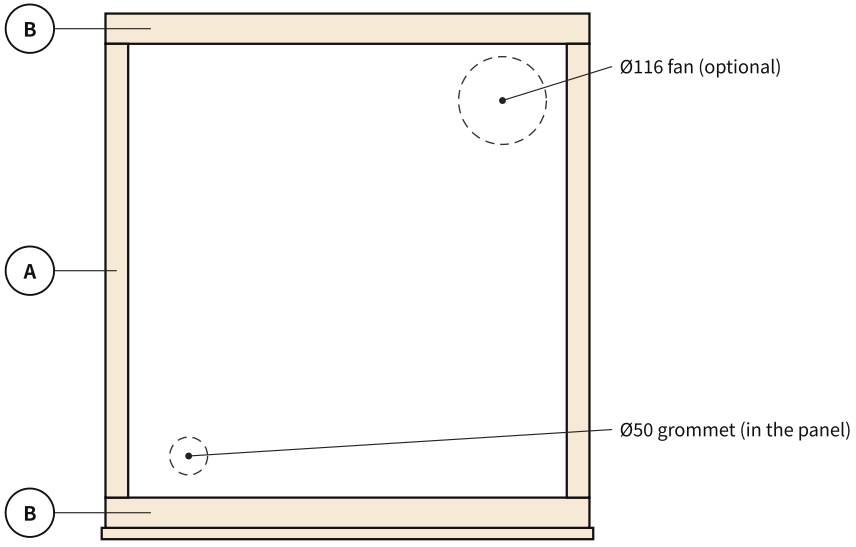

Top view (front at the bottom)

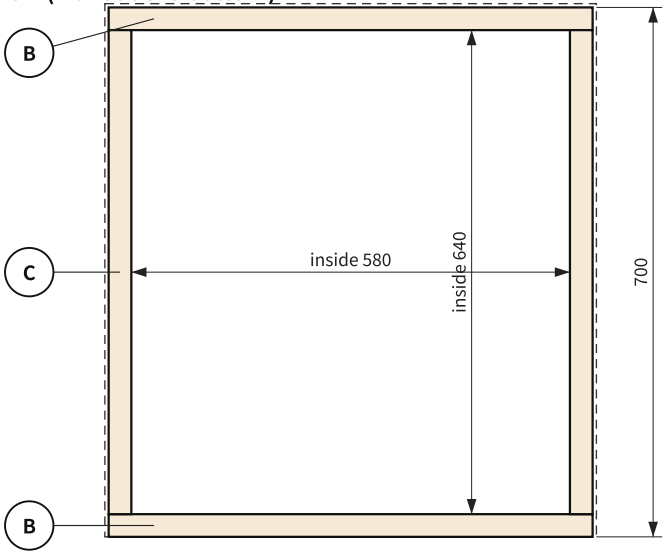


Rails B run full width, side rails C fit between them; posts A stand on the bottom frame and the top frame sits on the posts.

Bambu Lab A1 enclosure • external feed • plain strips

Frame assembly views


Sheet	Scale	Units	Date	Rev.
3 / 5	1:10	mm	2026-11-08	v2

Door frame, front view (from outside, scale 1:6)

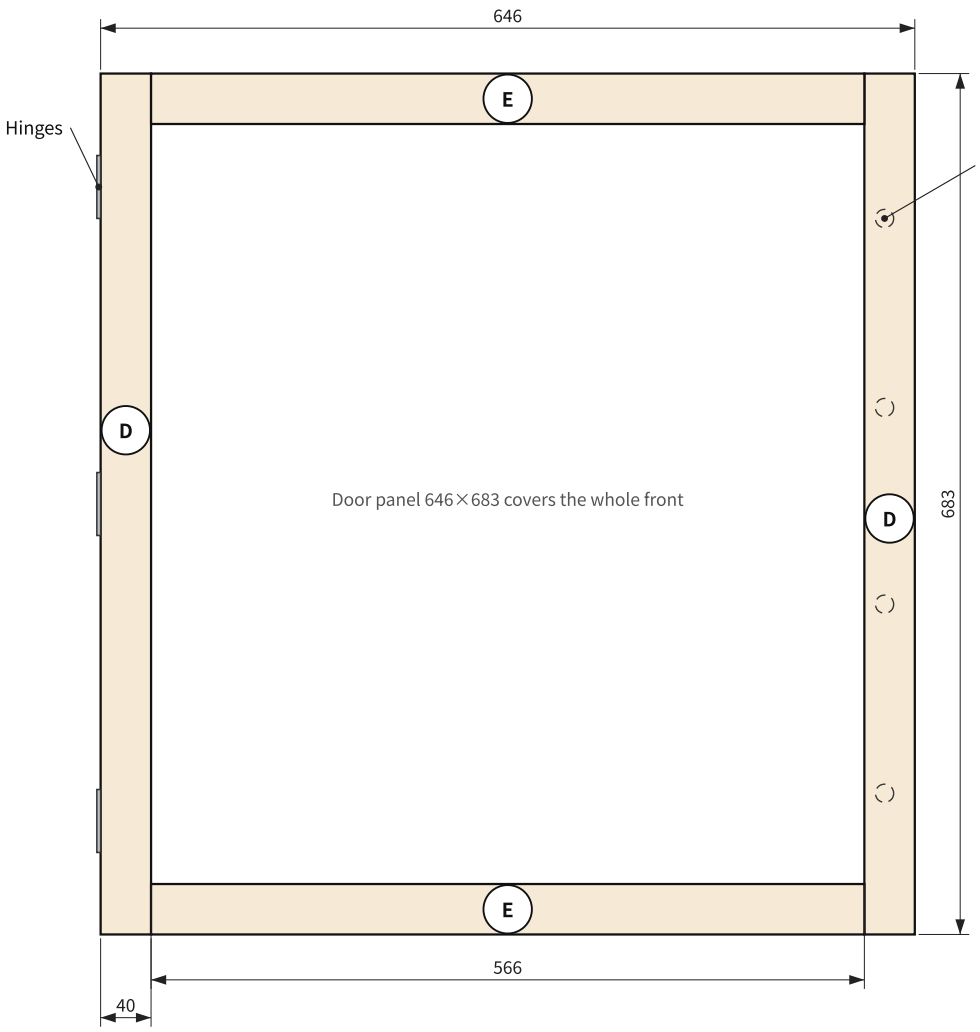


Stiles D run full height with rails E between them; glue each corner and drive two 4×60 screws through the stile into the rail end. The panel keeps the door square once fitted. Magnet pockets and hinges are DIY.

Detail 1: panel fixing (scale 2:1)

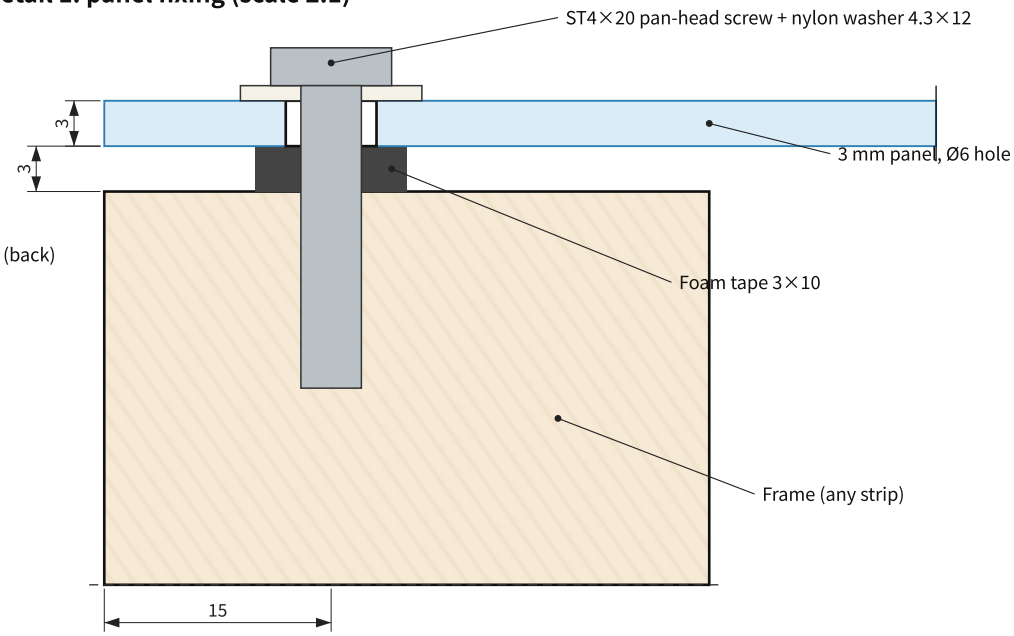

The Ø6 hole is 2 mm larger than the screw so the panel can expand. Stop when the washer seats, then back off a quarter turn; work from the middle of each edge outward.

Detail 2: frame corner (bottom frame, front-left, plan 1:2)

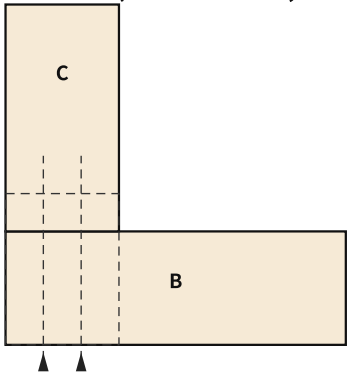

Rail B runs through; side rail C butts against its inside face, fixed with two 4×50 screws through B into the end of C. Dashed = post A: two 4×60 screws from below into its end, plus an L bracket inside. The top frame is the same.


Bambu Lab A1 enclosure • external feed • plain strips

Door frame and fixing details


Sheet	Scale	Units	Date	Rev.
4 / 5	1:6 / 2:1 / 1:2	mm	2026-11-08	v2

Clear panels and holes (about 1:11, seen from outside)


P1 Side panel (L/R) ×2

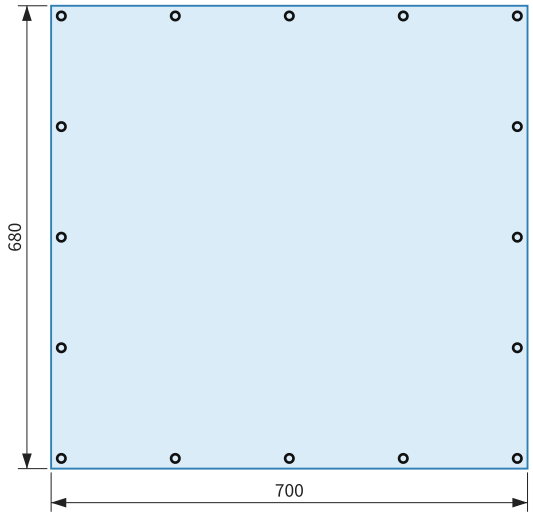


P2 Back panel ×1

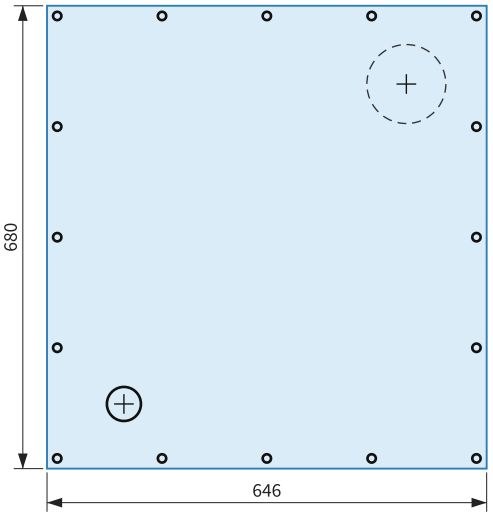

P3 Top panel ×1

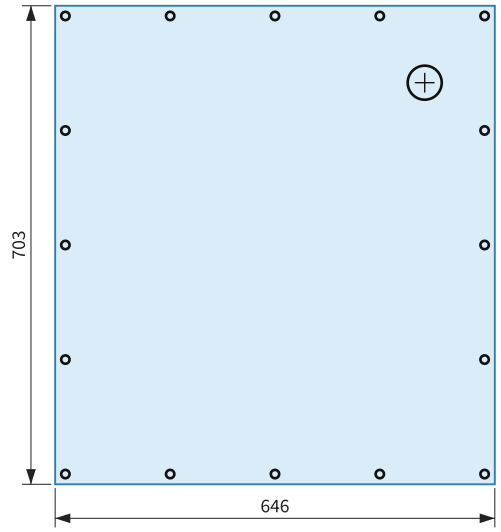

P4 Door panel ×1

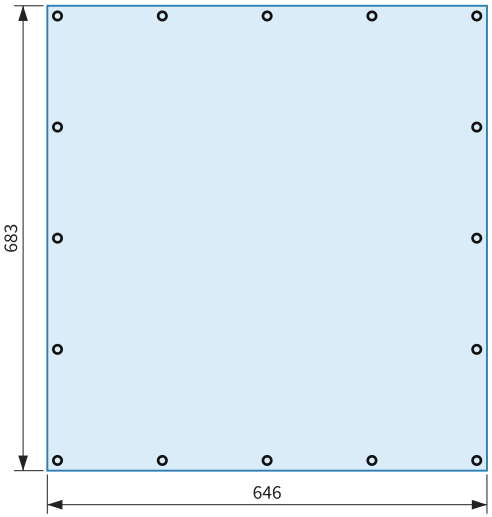

Panel	Size	Qty	Pitch (across / up)
P1	700×680	2	167.5 / 162.5
P2	646×680	1	154 / 162.5
P3	646×703	1	154 / 168.25
P4	646×683	1	154 / 163.25

Panel	Hole	Position (to hole centre, seen from outside)
P2	Ø50 grommet hole	113 from the left edge, 95 from the bottom
P2	Ø116 fan hole (optional)	118 from the right edge, 115 from the top
P3	Ø50 grommet hole	103 from the right, 113 from the top (rear) edge

- Each panel: 5 holes per edge (corners shared, 16 in all), Ø6, centres 15 from the edge. The panel shop can drill them.
- Material: 3 mm cast acrylic or solid polycarbonate (solid PC for the door), not twin-wall PC. Size tolerance ±0.5, polished edges, film left on.
- Side panels cover the post sides, the back panel covers the side panels' rear edges, the top covers both. Grommet positions can be adjusted to the A1 power socket; drill the handle holes once you have the handle.

Bambu Lab A1 enclosure · external feed · plain strips

Clear panels and holes

Sheet	Scale	Units	Date	Rev.
5 / 5	≈1:11	mm	2026-11-08	v2