
MMC60 Locking Jig Assembly Guide

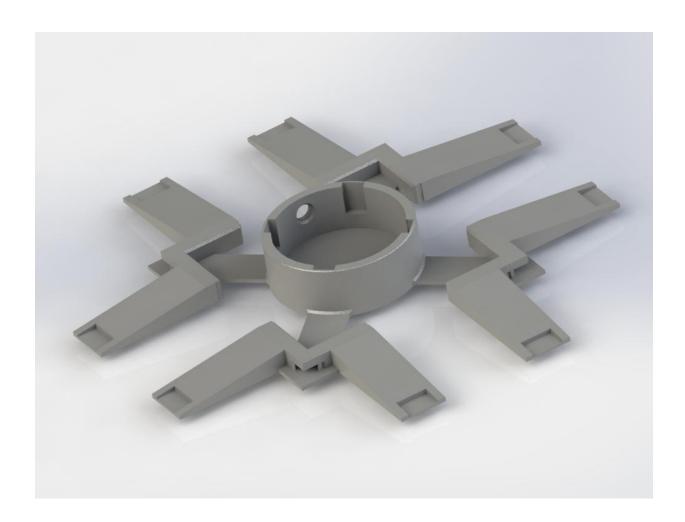

Materials

- 1 3D printed MMC60 Jig
- 4 3D printed printbed adapter

Instructions

1.	Print 3D parts as stated in the materials	
2.	Carefully attach one of the adapters to the jig's legs using the snaps	
3.	Repeat with other adapters with each legs	