


PlatformIO IDE Installation Guide

April 01, 2020


Step 1 - Install Python

- 1. Download Python (3.8.2 or above) from the official **Python.org** website.
- 2. Open the Installer, You will encounter the following screen:

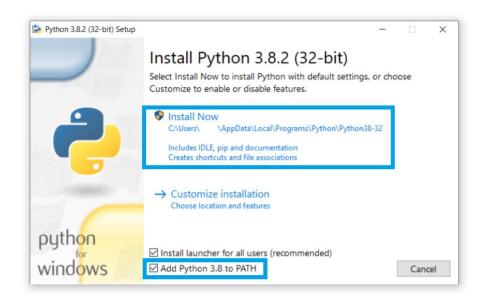


*Make sure you tick the "Add Python to PATH" option and click "Install now".

3. Go to Marlon, under the IDE tab. Where you are asked if you installed Python, Click **Yes.**

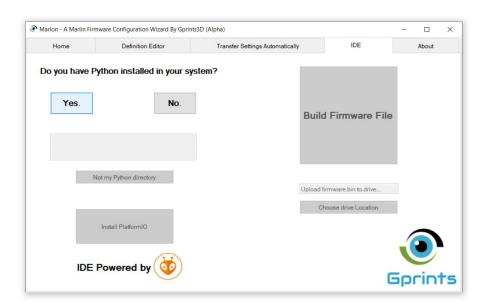

4. If you installed Python beforehand, or changed it's installation directory. Click on **Not my Python directory**. And choose the right one. Otherwise, skip it and move on.

5. Click on the **Install PlatformIO** button to complete the installation.

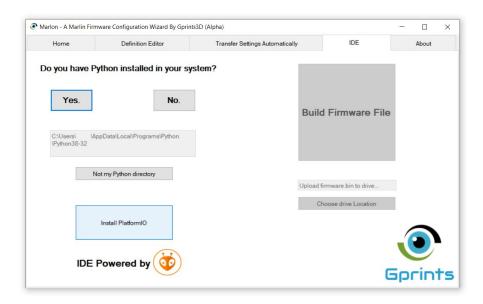

That's it, you're all set! You can now build your Marlin Firmware!

Please note that you only need to do this once - next time you use Marlon just go and click "Build Firmware File" directly.

Enjoy! And thank you for using Marlon!