INSTALLATION INSTRUCTIONS

NI TB-2632

Terminal Block for the NI PXI-2530

このドキュメントには、日本語ページも含まれています。

This guide describes how to install and connect signals to the National Instruments TB-2632 terminal block to configure the PXI-2530 as an 8x16 1-wire matrix.

Refer to the NI Switches Getting Started Guide to determine when to install the terminal block.

Introduction

The TB-2632 terminal block installs in front of the PXI-2530 switch module. The TB-2632 has screw terminals to connect signals to the switch. Screw terminals for the trigger input and trigger output signals also are available.

Conventions

The following conventions are used in this guide:

The » symbol leads you through nested menu items and dialog box options to a final action. The sequence File»Page Setup»Options directs you to pull down the File menu, select the Page Setup item, and select Options

from the last dialog box.

This icon denotes a note, which alerts you to important information.

This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash.





bold Bold text denotes items that you must select or click in the software, such

as menu items and dialog box options. Bold text also denotes parameter

names and information on hardware labels.

italic Italic text denotes variables, emphasis, a cross reference, or an introduction

to a key concept. This font also denotes text that is a placeholder for a word

or value that you must supply.

monospace Text in this font denotes text or characters that you should enter from the

keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations,

variables, filenames and extensions, and code excerpts.

1. Unpack the Terminal Block

To avoid damage when you handle the terminal block, take the following precautions:



Caution Never touch the exposed pins of connectors.

- Ground yourself using a grounding strap or by touching a grounded object.
- Touch the antistatic package to a metal part of the chassis before you remove the terminal block from the package.

Remove the terminal block from the package and inspect the terminal block for loose components or any sign of damage. Notify NI if the terminal block appears damaged in any way. Do *not* install a damaged terminal block on a switch module.

Store the terminal block in the antistatic package when not in use.


2. Verify the Components

Make sure you have the following:			
	TB-2632 terminal block		
	PXI chassis		
	PXI-2530 switch module		
	1/8 inch flathead screwdriver		

3. Connect Signals

To connect signals to the terminal block, complete the following steps:

- Remove the terminal block top cover screws with a flathead screwdriver.
- 2. Gently lift the terminal block top cover off the terminal block.
- 3. Loosen the two screws on the strain-relief bar, leaving plenty of space for the signal cables.
- 4. Prepare the signal cable by stripping the insulation no more than 3/16 of an inch.
- 5. Pull the signal cables through the strain-relief opening shown in Figure 1.
- 6. Connect the cables to the terminals by inserting the stripped end of the cable into the terminal. Secure the connection by tightening the screw for each terminal. When connecting the signals, refer to the connection diagram in Figure 2.
- 7. Tighten the two screws on the strain-relief bar, securing the signal cables.
- 8. Replace the terminal block top cover to the terminal block.
- 9. Secure the terminal block top cover with the top cover screws.

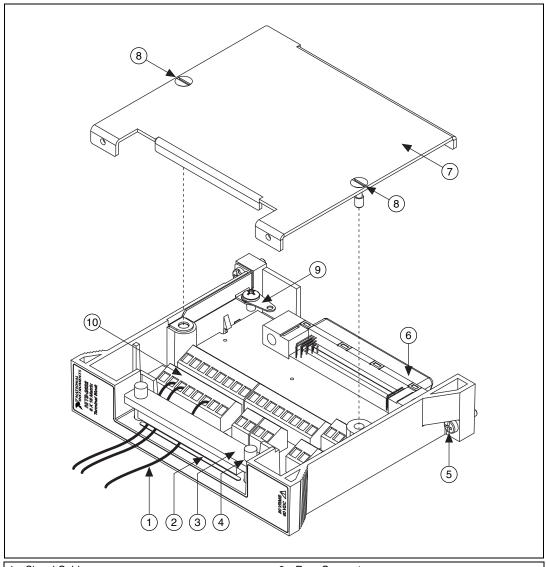

- Signal Cables Strain-Relief Opening Strain-Relief Bar 2
- 3
- 4 Strain-Relief Screw
- Chassis Screws

- Rear Connector 6 7
- Terminal Block Top Cover Top Cover Screws
- 8
- Safety Ground Lug
- 10 Screw Terminals

Figure 1. TB-2632 Terminal Block

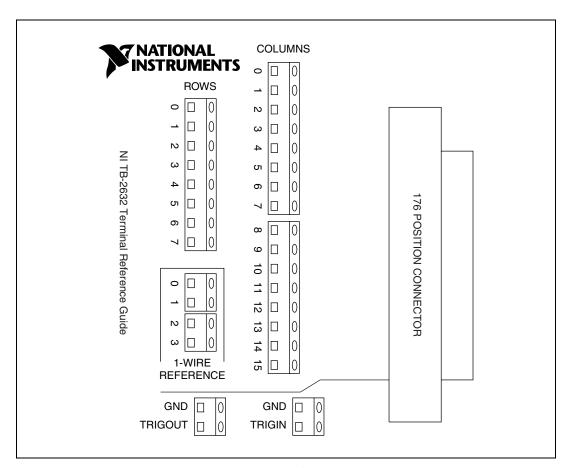


Figure 2. TB-2632 Terminal Reference

4. Install the Terminal Block

To connect the TB-2632 terminal block to the PXI-2530 front panel, complete the following steps (the NI PXI-2530 should already be installed in a PXI chassis):

- 1. Plug the TB-2632 on to the front connector of the PXI-2530.
- 2. Tighten the top and bottom chassis screws on the back of the terminal block rear panel to hold it securely in place.

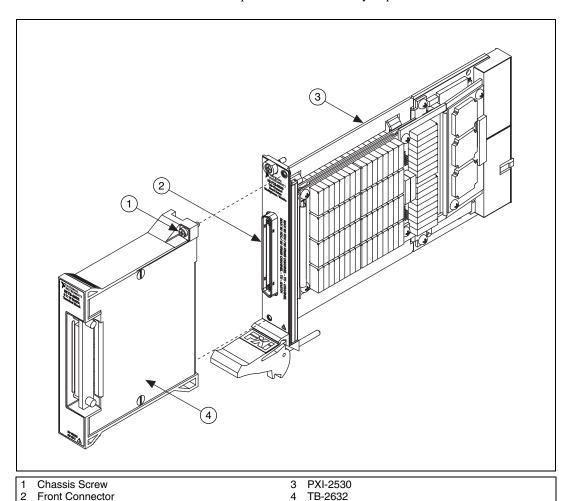


Figure 3. Installing the TB-2632 Terminal Block

Compliance and Certifications

Safety

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 3111-1, UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



Note For UL and other safety certifications, refer to the product label, or visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Electromagnetic Compatibility

Emissions	
	FCC Part 15A above 1 GHz
Immunity	EN 61326:1997 + A2:2001,
•	Table 1
EMC/EMI	CE, C-Tick, and FCC Part 15
	(Class A) Compliant



Note For EMC compliance, you *must* operate this device with shielded cabling.

CE Compliance

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:



Note Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.



取り付け手順

NI TB-2632

NI PXI-2530 用端子台

このガイドでは、ナショナルインスツルメンツ製 TB-2632 端子台の取り付けおよび信号の接続方法、また PXI-2530 を 8x 16 単線式マトリクスに構成する方法について説明します。

端子台を取り付ける順番については、『NI スイッチスタートアップガイド』を参照してください。

はじめに

TB-2632 端子台は、PXI-2530 スイッチモジュールの前面に取り付けます。TB-2632 では、信号線とスイッチの接続にはネジ留め式端子を使用します。トリガ入力信号およびトリガ出力信号用のネジ留め式端子も装備しています。

表記規則

このドキュメントでは、以下の表記規則を使用します。

→

矢印 (→) は、ネスト化されたメニュー項目やダイアログボックスのオプションをたどっていくと目的の操作項目を選択できることを示します。たとえば、ファイル→ページ設定→オプションとなっている場合は、ファイルメニューをプルダウンして、ページ設定項目を選択し、最後のダイアログボックスからオプションを選択します。



このアイコンは、注意すべき重要な情報があることを示します。

このアイコンは、負傷、データの損失、システムの破損を防止するための注意事項を示します。

太字

太字のテキストは、メニュー項目やダイアログボックスのオプションなど、ソフトウェアで選択またはクリックする必要がある項目を表します。 また、太字のテキストは、パラメータ名およびハードウェアラベルにも使用されます。



斜体

斜体のテキストは、変数、強調、相互参照、または重要な概念の説明を示します。また、入力する必要のある文字列や値を表すこともあります。

monospace

このフォントのテキストは、キーボードから入力する必要があるテキストや文字、コードの一部、プログラムサンプル、構文例を表します。また、ディスクドライブ、パス、ディレクトリ、プログラム、サブプログラム、サブルーチンなどの名称、デバイス名、関数、操作、変数、ファイル名および拡張子、コードの引用にも使用されます。

1. 端子台を箱から取り出す

取り扱い中に端子台を破損しないために、以下の予防措置を行ってください。



注意 露出しているコネクタピンには絶対に触れないでください。

- 接地ストラップを使用したり、接地されている物体に触れて、身体を 接地する。
- 静電気防止用袋をシャーシの金属部分に接触させてから、端子台を袋から取り出す。

端子台を箱から取り出し、部品がゆるんでいないかどうか、また、破損箇所がないかどうか調べます。端子台が破損している場合は、ナショナルインスツルメンツまでご連絡ください。破損している端子台をスイッチモジュールに取り付けないでください。

端子台は、使用しないときは静電気防止用袋に入れて保管してください。

2. 部品を確認する


下記の部品があることを確認します。

- □ TB-2632 端子台
- □ PXI シャーシ
- PXI-2530 スイッチモジュール
- □ 1/8 in. マイナスドライバー

3. 信号を接続する

端子台に信号を接続するには、次の手順に従います。

- 1. マイナスドライバを使用して、端子台の上部カバーのネジを外します。
- 2. 端子台から上部カバーを注意して取り外します。
- 3. ストレインリリーフバーの 2 つのネジを緩めて、信号ケーブルを通すスペースを確保します。
- 4. 信号線の絶縁被覆を 4.7 mm (3/16 in.) 以内で剥ぎ取ります。
- 5. 図 1 に示されているように、信号線をストレインリリーフバー間の 隙間に通します。
- 6. ケーブルの裸線を端子に差し込んで接続します。各端子に付いている ネジを締めてワイヤを固定します。信号の接続については、図2に示 される接続ダイアグラムを参照してください。
- 7. 2つのストレインリリーフ用ネジを締めて、信号線を固定します。
- 8. 端子台のカバーを元のように取り付けます。
- 9. 上部カバーのネジを締めて、端子台の上部カバーを固定します。

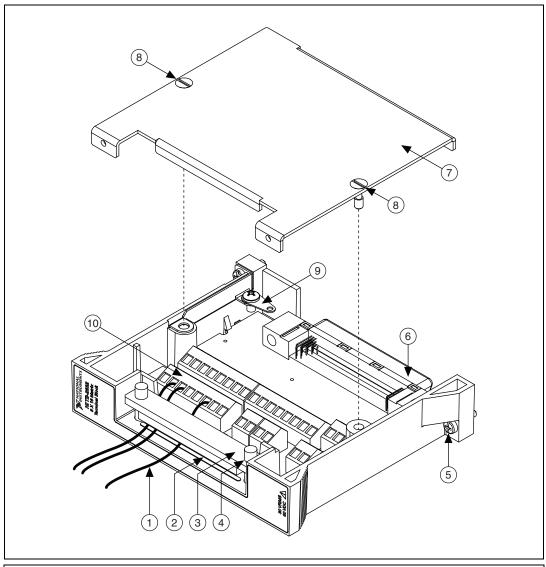

- 信号線
- 2 ストレインリリーフバー間の隙間
- 3 ストレインリリーフバー
- 4 ストレインリリーフ用ネジ
- 5 シャーシ用ネジ

- 6 後部コネクタ
- 7 端子台の上部カバー
- 8 上部カバー用ネジ
- 9 接地用圧着端子
- 10 ネジ留め式端子

図 1 TB-2632 端子台


176 POSITION CONNECTOR 177 POSITION CONNEC
--

図2 TB-2632 端子リファレンス

4. 端子台を取り付ける

TB-2632 端子台を PXI-2530 フロントパネルに接続するには、次の手順を行ってください (NI PXI-2530 は既に PXI シャーシに取り付けられている状態)。

- 1. TB-2632 を PXI-2530 のフロントコネクタに差し込みます。
- 2. 端子台の後部パネル背面にある上下のシャーシ用ネジを締めて、端子台をしっかりと固定します。

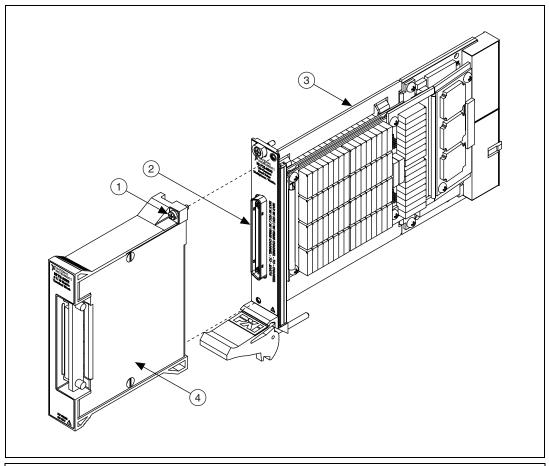

1 シャーシネジ 2 フロントコネクタ

- 3 PXI-2530
- 4 TB-2632

図3 TB-2632 端子台を取り付ける

安全性

この製品は、計測、制御、実験に使用される電気装置に関する以下の安全 規格の必要条件を満たすように設計されています。

- IEC 61010-1, EN 61010-1
- UL 3111-1、UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



メモ

UL および他の安全保証については、製品ラベルを参照するか、ni.com/certification (英語) にアクセスして型番または製品ラインで検索し、保証欄の該当するリンクをクリックしてください。

電磁両立性

エミッション	(不要輻射)	EN 55011 Class A (10 m)、 FCC Part 15A(1 GHz 以上)
イミュニティ	(電磁環境耐性)	EN 61326:1997 + A2:2001, Table 1
EMC/EMI		CE、C-Tick、および FCC Part 15 (Class A) 準拠



メモ

EMC に適合させるには、このデバイスと一緒に必ずシールドケーブルを使用してください。

CF 適合

この製品は、以下のように、CEマーク改正に基づいて、該当するEC 理事会指令による基本的要件に適合しています。

雷磁面立性

規格 (EMC)......89/336/EEC



メモ

この製品のこのほかの適合規格については、この製品の適合宣言 (DoC)を参照してください。この製品の適合宣言を入手するには、ni.com/certification (英語) にアクセスして型番または製品ラインで検索し、該当するリンクをクリックしてください。