



Connecting connectors

- Securely hold both connectors (male and female) and check whether the connector pins and the cavities match. Also, check whether the connectors are aligned.
- Securely hold the connectors and carefully engage them by pushing until the connectors click.

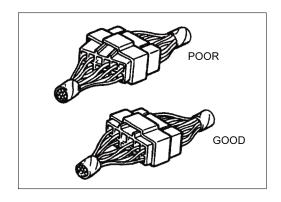


Checking connectors


 When using circuit tester to test conduction of connector, insert test probes of circuit tester from harness side of the connector.

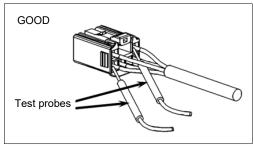

 Do not insert test probes of the tester in female terminal of connector. It may deform the terminal and lead to poor contacting.

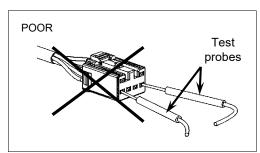

 For the water proof connector, the test probes cannot be inserted from the harness side structurally. Use testing connector prepared beforehand to check. Connect test connector to the vehicle side connector and connect test probes to the harness of the testing connector.

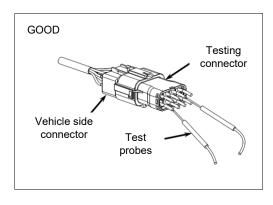

 Do not insert test probes to protection rubber of water proof connector. It may decrease the water proof performance and became cause of corrosion.

