


4-2 CLEARANCE BETWEEN AN EQUIPMENT OR A COMPONENT ON A CAB CHASSIS AND A REAR BODY

1 Engine

- When installing any equipment or component around an engine, provide the following clearances from the engine.
- Do not place any object in front of the radiator or the inter cooler, otherwise cooling efficiency of the radiator or the inter cooler may be impaired.

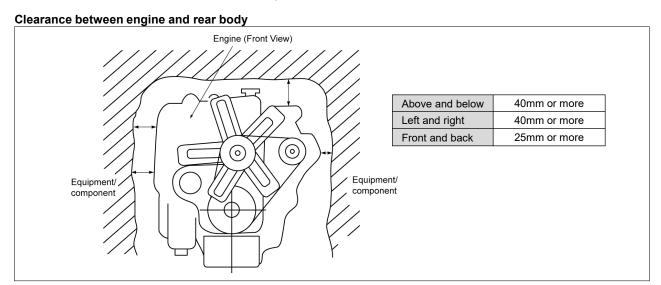

(2) Transmission

- Since transmission moves in unison with the engine, maintain a minimum of 40mm clearance around it.
- Transmission is to be retreated when removed. Therefore, not to contact anything, the transmission assembly must have a minimum of 150mm clearance behind it.
- Provide a minimum of 150mm clearance above the transmission assembly for check-ups and maintenance.

